


Combination Lock Installation and Operation—AR8132A

Unpacking and Installing the Lock


Inventory

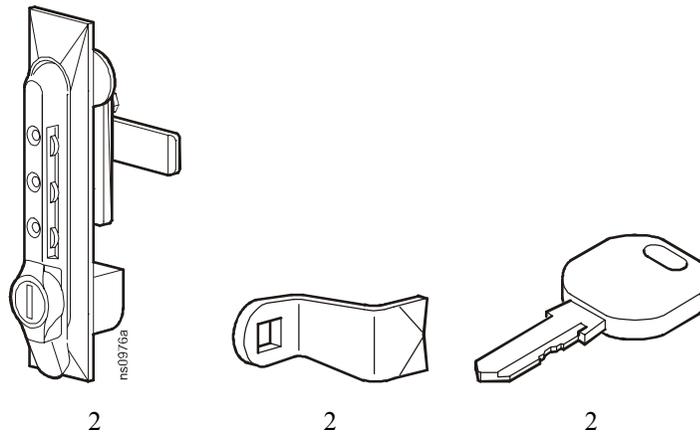

Installing the combination lock


To remove the existing NetShelter[®] lock:

1. Remove the screws from the lock.
2. Remove the handle and screw plate from the NetShelter enclosure.

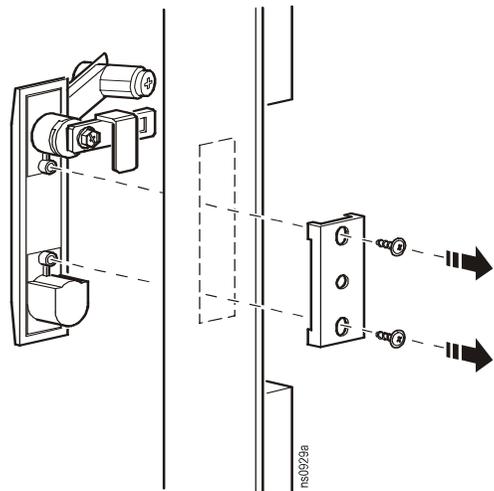


To install the combination lock:

1. Slide the handle through the opening in the enclosure where the original lock was located.
2. Insert the screws that you removed from the NetShelter lock, and secure the handle in place.

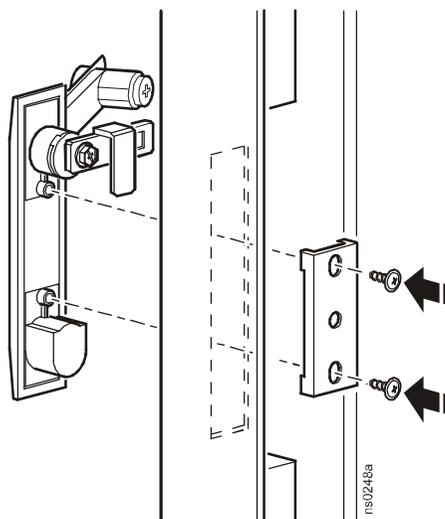


To replace the cam: If you have a NetShelter VX enclosure, replace the pre-installed NetShelter SX cam with the NetShelter VX cam (provided).

1. Remove the screw holding the pre-installed NetShelter SX cam in place. Slide the cam off the lock.
2. Replace the NetShelter SX cam with the NetShelter VX cam, and secure it in place, using the screw removed in the preceding step.

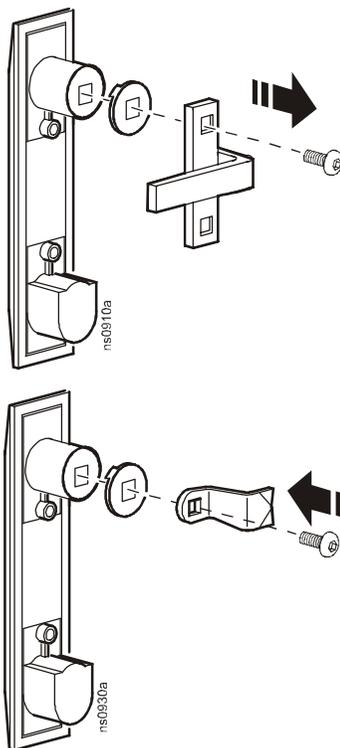


To reverse the door handle: If you reverse the door, complete the following steps to properly orient the door handle:


1. Remove the handle assembly from the door.

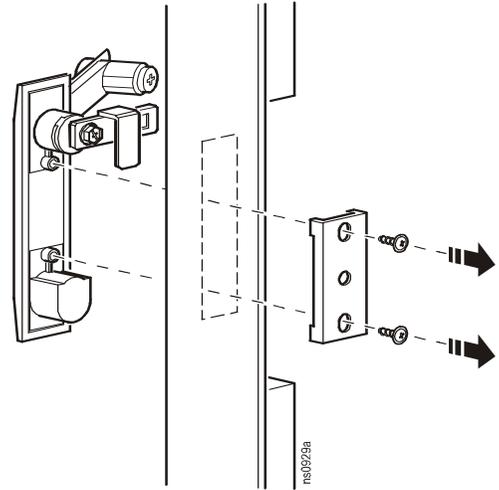

2. Remove the screw, cam, and washer from the back of the door handle assembly. Rotate the washer 90 degrees counterclockwise and the cam 180 degrees counterclockwise.

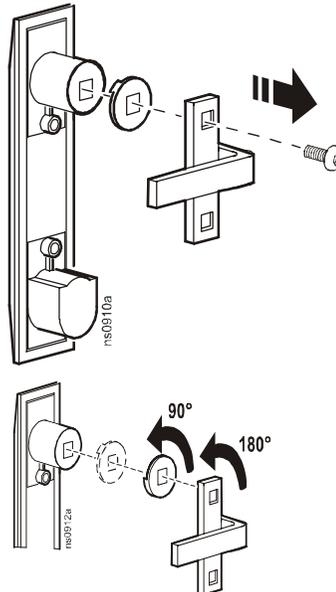


3. Re-attach the cam and washer.

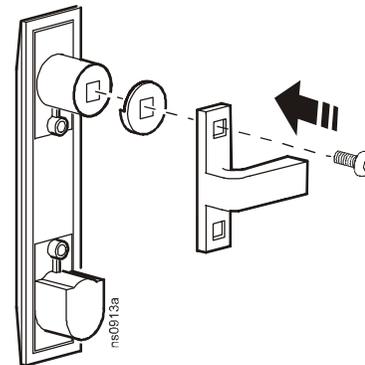

4. Reinstall the lock on the door as described in “To install the combination lock:” on page 2.


Operating the Combination Lock

Parts identification

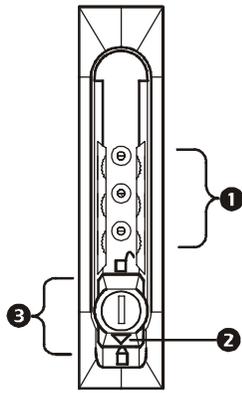


- ❶ Combination dials
- ❷ Indicator arrow
- ❸ Wing knob

Locked position:

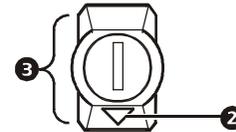

Unlocked position:

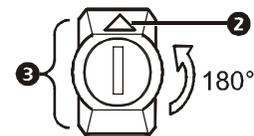

To set the lock:


1. Turn the wing knob ❸ until the arrow ❷ points down (locked position).
2. Jumble the combination dials (❶ in the illustration above) or remove the key.

To disable the lock:

1. Dial in the factory-set combination (“000”) or use the key (provided). The use of both is not required, and using the key will override the combination.
2. Turn the wing knob ❸ approximately 180 degrees (unlocked position).

To change the combination:

1. Turn the wing knob ❸ until the arrow points up (unlocked position). Turn it counterclockwise an additional 15 degrees, and enter your new combination.
2. Turn the wing knob clockwise 15 degrees back to the unlocked position. The new combination is set.

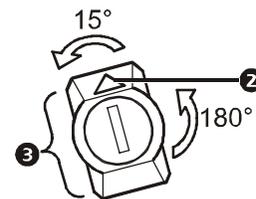

Note

To change the combination, you must know the existing one.

