


Installation Instructions

Please read before installing

Pico Wireless Control
Wireless control with favorite preset button

QSR4P-3B-XX-XX

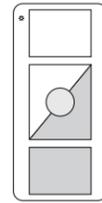

Important Notes:

1. Do not paint the Pico Wireless Control.
2. Clean the Pico Wireless Control with a soft damp cloth only. Do not use any chemical cleaners.
3. Device uses one (1) CR 2032 batteries.
4. Ambient operating temperature: 32° F to 104° F (0° C to 40° C), 0 to 90% humidity
5. The range of the system is 30 ft (9 m). Performance is highly dependent on a variety of complex factors such as: Distance between system components. Geometry of the home. Construction of walls separating system components or electrical equipment locate near system components.

Box Contents

- (1) Pico Wireless Control
- (1) Backplate (Pre-installed in Pico Control)
- (1) Pico Wall Mount Adapter Plate



- (4) Mounting Screws



- (4) Screw Anchors



- (1) Template Sheet



(1 Gang Claro Wallplate CW-1-XX and 2 Gang Claro Wallplate CW-2-XX provided separately)

1 Pico Wireless Control Operation

The Pico Wireless Control can be used as a handheld remote, wall mount control or tabletop control, utilizing the tabletop pedestal. The Pico Wireless Control can simply be converted to a wall mount control by removing the back plate and attaching the control to the wall mount adapter plate that has been mounted to the wall. The Pico Wireless Control can also be converted to a tabletop control, by removing the back plate and attaching it to the tabletop pedestal.

Top Button:
Tap once: shade(s) or drape(s) go to open limit. Lighting device(s) brighten to full intensity.

Round Button:
Tap once to recall a favorite shade or drape position, or favorite lighting level.

Bottom Button:
Tap once: shade(s) or drape(s) go to close limit. Lighting device(s) dim to off.

Raise Button:
Press and hold: Shade(s) or drape(s) move towards the open limit, or lights increase in intensity.


Lower Button:
Press and hold: Shade(s) or drape(s) move towards the close limit, or lights decrease in intensity.

Notes:

- A Battery is included and is pre-installed.
- The Pico Wireless Control must be assigned to the shade, drape or lighting device(s) to enable communication between the wireless control and the device(s).
- Each Pico Wireless Control can be assigned to as many wireless shade, drape or lighting device(s) that are within its range.


2 Using the Pico Wireless Control as a Handheld Remote

- 2.1 Slide the Back Plate into the back of the Control

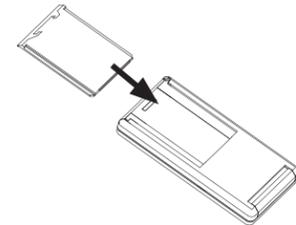

3 Mounting the Pico Wireless Control to a Tabletop Control

- 3.1 Slide the control onto the Tabletop Pedestal

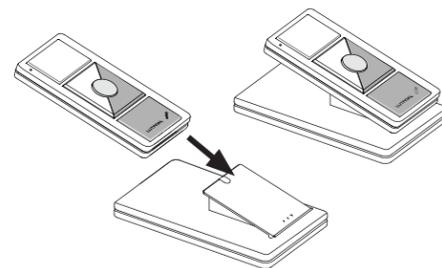


4 Mounting the Pico Wireless Control to the Wall

- 4.1 The Pico Wireless Control can be mounted to the wall in five different configurations, using the included template sheet. Choose the appropriate template for your application.

- A. Pico without a wallplate
- B. Pico with a 1-gang wallplate
- C. Two Pico Controls with a 2-gang wallplate
- D. A Pico on the left and an existing device on the right with a 2-gang wallplate
- E. An existing device on the left and a Pico on the right with a 2-gang wallplate



- 4.2 Locate **Existing Device** (if applicable)

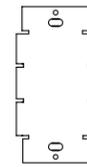


- 4.3 Cut out and attach **Template** to wall




- 4.4 Mark and drill screw locations indicated on template




- 4.5 Insert **Screw Anchors**

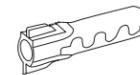


- 4.6 Attach **Pico Wall Adapter(s)** with **Mounting Screws** and level

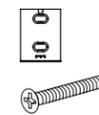

- 4.7 Slide **Pico Control(s)** onto **Pico Wall Adapter(s)**

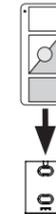


- 4.8 Attach **Wallplate Adapter** with **Mounting Screws** and Snap on Wallplate (if applicable)

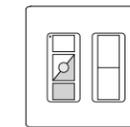

5 Assigning Shade, Drape or Lighting Device(s) to the Pico Wireless Control

- 5.1 **Place one or more Shade, Drape or Lighting Device(s) in assignment mode:** Refer to the instructions that came with that device.

- 5.2 **Complete assignment process:** Press and hold the bottom button of the Pico Wireless Control for 5 seconds. The LED on the shade, drape or lighting device(s) will flash several times, then turn off. The Shade(s) or drape(s) will also move a short distance in both directions, or "wiggle", one time. This confirms the device(s) have been assigned to the control, and exits all devices from assignment mode.

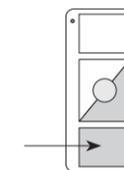

To assign devices to additional Pico Wireless Controls, repeat steps 5.1 and 5.2


6 Un-assigning Shade, Drape or Lighting Device(s) from a Pico Wireless Control

- 6.1 Unassigning a device from a Pico Wireless Control must be done by restoring the Control to its factory default settings. Restoring the Pico Wireless Control to its factory default settings will un-assign ALL devices previously assigned to that control. Refer to section 8, Restoring Factory Default Settings.


7 Storing a Favorite Preset

The round button on the Pico Wireless Control allows the user to recall a favorite preset of all the devices assigned to that control

- 7.1 Position the shade(s), drape(s) or light level to the desired setting using the Raise or Lower button on the Pico Wireless Control.

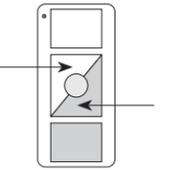


- 7.2 Press and hold the round button on the Control for 5 seconds. The green LED on the control will flash rapidly, turn off, flash rapidly and turn off indicating the preset has been stored.

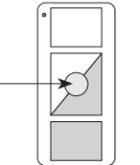


8 Restoring Factory Default Settings

- 8.1 Triple tap then press and hold the top button until the LED turns on steady.

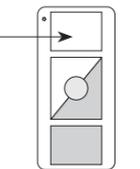


- 8.2 Triple tap the top button. The LED will flash momentarily then turn off to indicate the Control has been restored to Factory Default Settings.

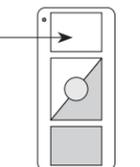


- 8.3 ALL shade, drape or lighting device(s) are now un-assigned from this Control.

9 Battery Replacement

9.1 Slide the battery holder out of the back of the *Pico* Wireless Control

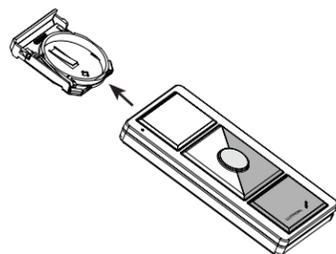

9.2 Remove existing battery and replace with a new CR 2032 battery, positive (+) side down. Slide battery holder back into the *Pico* Control until it snaps into place.

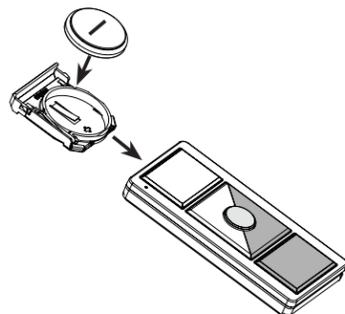

10 Troubleshooting

Symptom	Solution
	Shade, drape or lighting device(s) not powered – Verify the device is powered
	Check battery of <i>Pico</i> Wireless Control – Replace if necessary
Shade(s), Drape(s) or lighting will not respond to the wireless control	No shade drape or lighting device(s) assigned to the wireless control – Assign device(s) to the control
	Out of range – move wireless control within 30 ft (9m) of shade, drape or lighting device

FCC Information

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio and television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note:

Changes or modifications not expressly approved by Lutron Electronics Co. could void the user's authority to operate this equipment.

* This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

Warranty

Lutron Electronics Co., Inc.

One Year Limited Warranty

For a period of one year from the date of purchase, and subject to the exclusions and restrictions described below, Lutron warrants each new unit to be free from manufacturing defects. Lutron will, at its option, either repair the defective unit or issue a credit equal to the purchase price of the defective unit to the Customer against the purchase price of comparable replacement part purchased from Lutron. Replacements for the unit provided by Lutron or, at its sole discretion, an approved vendor may be new, used, repaired, reconditioned, and/or made by a different manufacturer.

If the unit is commissioned by Lutron or a Lutron approved third party as part of a Lutron commissioned lighting control system, the term of this warranty will be extended, and any credits against the cost of replacement parts will be prorated, in accordance with the warranty issued with the commissioned system, except that the term of the unit's warranty term will be measured from the date of its commissioning.

EXCLUSIONS AND RESTRICTIONS

This Warranty does not cover, and Lutron and its suppliers are not responsible for:

1. Damage, malfunction or inoperability diagnosed by Lutron or a Lutron approved third party as caused by normal wear and tear, abuse, misuse, incorrect installation, neglect, accident, interference or environmental factors, such as (a) use of incorrect line voltages, fuses or circuit breakers; (b) failure to install, maintain and operate the unit pursuant to the operating instructions provided by Lutron and the applicable provisions of the National Electrical Code and of the Safety Standards of Underwriter's Laboratories; (c) use of incompatible devices or accessories; (d) improper or insufficient ventilation; (e) unauthorized repairs or adjustments; (f) vandalism; or (g) an act of God, such as fire, lightning, flooding, tornado, earthquake, hurricane or other problems beyond Lutron's control.

2. On-site labor costs to diagnose issues with, and to remove, repair, replace, adjust, reinstall and/or reprogram the unit or any of its components.

3. Equipment and parts external to the unit, including those sold or supplied by Lutron (which may be covered by a separate warranty).

4. The cost of repairing or replacing other property that is damaged when the unit does not work properly, even if the damage was caused by the unit.

EXCEPT AS EXPRESSLY PROVIDED IN THIS WARRANTY, THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OF ANY TYPE, INCLUDING ANY IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY. LUTRON DOES NOT WARRANT THAT THE UNIT WILL OPERATE WITHOUT INTERRUPTION OR BE ERROR FREE.

NO LUTRON AGENT, EMPLOYEE OR REPRESENTATIVE HAS ANY AUTHORITY TO BIND LUTRON TO ANY AFFIRMATION, REPRESENTATION OR WARRANTY CONCERNING THE UNIT, UNLESS AN AFFIRMATION, REPRESENTATION OR WARRANTY MADE

BY AN AGENT, EMPLOYEE OR REPRESENTATIVE IS SPECIFICALLY INCLUDED HEREIN, OR A STANDARD PRINTED MATERIALS PROVIDED BY LUTRON, IT DOES NOT FORM A PART OF THE BASIS OF ANY BARGAIN BETWEEN LUTRON AND CUSTOMER AND WILL NOT IN ANY WAY BE ENFORCEABLE BY CUSTOMER.

IN NO EVENT WILL LUTRON OR ANY OTHER PARTY BE LIABLE FOR EXEMPLARY, CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS

OF PROFITS, CONFIDENTIAL OR OTHER INFORMATION, OR PRIVACY); BUSINESS INTERRUPTION; PERSONAL INJURY; FAILURE TO MEET ANY DUTY, INCLUDING OF GOOD FAITH OR OF REASONABLE CARE; NEGLIGENCE, OR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER), NOR FOR ANY REPAIR WORK UNDERTAKEN WITHOUT LUTRON'S WRITTEN CONSENT ARISING OUT OF OR IN ANY WAY RELATED TO THE INSTALLATION, DEINSTALLATION, USE OF OR INABILITY TO USE THE UNIT OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF

THIS WARRANTY, OR ANY AGREEMENT INCORPORATING THIS WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF LUTRON OR ANY SUPPLIER, AND EVEN

IF LUTRON OR ANY OTHER PARTY WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

NOTWITHSTANDING ANY DAMAGES THAT CUSTOMER MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DIRECT DAMAGES AND ALL DAMAGES LISTED ABOVE), THE ENTIRE LIABILITY OF LUTRON AND OF ALL OTHER PARTIES UNDER THIS WARRANTY ON ANY CLAIM FOR DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE MANUFACTURE, SALE, INSTALLATION, DELIVERY, USE, REPAIR, OR REPLACEMENT

OF THE UNIT, OR ANY AGREEMENT INCORPORATING THIS WARRANTY, AND CUSTOMER'S SOLE REMEDY FOR THE FOREGOING, WILL BE LIMITED TO THE AMOUNT PAID TO LUTRON

BY CUSTOMER FOR THE UNIT. THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS WILL APPLY TO THE MAXIMUM EXTENT ALLOWED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

TO MAKE A WARRANTY CLAIM

To make a warranty claim, promptly notify Lutron within the warranty period described above by calling the Lutron Technical Support Center at 800.523.9466. Lutron, in its sole discretion, will determine what action, if any, is required under this warranty. To better enable Lutron to address a warranty claim, have the unit's serial and model numbers available when making the call. If Lutron, in its sole discretion, determines that an on-site visit or other remedial action is necessary, Lutron may send a Lutron Services Co. representative or coordinate

the dispatch of a representative from a Lutron approved vendor to Customer's site, and/or coordinate a warranty service call between Customer and a Lutron approved vendor.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation

may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

These products may be covered under one or more of the following U.S. patents: D461,782; and corresponding foreign patents. Other U.S. and foreign patents may be pending.

National Electric Code, NEC, and NFPA are registered trademarks of the National Fire Protection Association, Inc., Quincy, Massachusetts. Lutron, the sunburst logo, Sivoia, seeTouch, and GRAFIK Eye are registered trademarks of Lutron Electronics Co., Inc. © 2007 Lutron Electronics Co., Inc.

Contact Information

Internet: www.lutron.com

E-mail: product@lutron.com

WORLD HEADQUARTERS

USA
Lutron Electronics Co., Inc.
7200 Suter Road, Coopersburg, PA
18036-1299
TEL +1.610.282.2800
FAX +1.610.282.1243
Toll-Free 1.888.LUTRON1
Technical Support 1.800.523.9466
North and South America
Technical Hotlines
USA, Canada, Caribbean: 1.800.523.9466
Mexico: +1.888.235.2910
Central/South America: +1.610.282.6701

EUROPEAN HEADQUARTERS

United Kingdom
Lutron EA Ltd.
6 Sovereign Close, London,
E1W 3JF United Kingdom
TEL +44.(0)20.7702.0657
FAX +44.(0)20.7480.6899
FREEPHONE (UK) 0800.282.107
Technical support +44.(0)20.7680.4481

ASIAN HEADQUARTERS

Singapore
Lutron GL Ltd.
15 Hoe Chiang Road,
#07-03 Euro Asia Centre, Singapore 089316
TEL +65.6220.4666
FAX +65.6220.4533
Asia Technical Hotlines
Northern China: 10.800.712.1536
Southern China: 10.800.120.1536
Hong Kong: 800.901.849
Indonesia: 001.803.011.3994
Japan: +81.3.5575.8411
Macau: 0800.401
Singapore: 800.120.4491
Taiwan: 00.801.157.737
Thailand: 001.800.120.665853
Other countries: +65.6220.4666

Lutron Electronics Co., Inc.
Made and printed in U.S.A.
P/N 045-170 Rev. A 03/09