 


#### Tool List:


- 8mm Hex Driver




M5x0.8 x 10mm  
Hex Head Screw  
Qty: 4



#10-32  
Wing Flange Nut  
Qty: 1

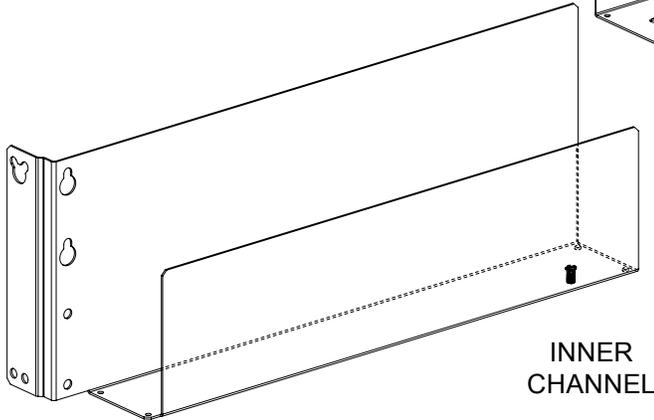


#### Front to Back Cable Manager Installed on an N-Type Cabinet

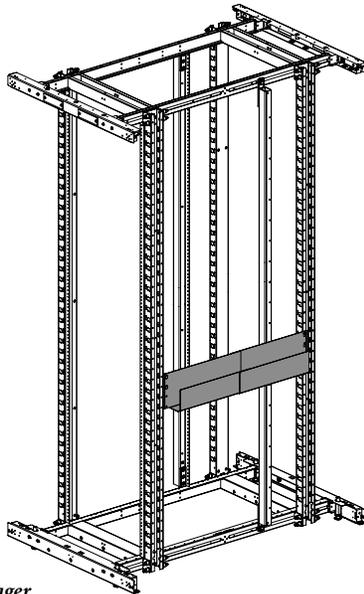

*-NOTE- The Front to Back Cable Manager can be installed on either the left or right side and at various locations along the vertical height of the cabinet.*


#### Front to Back Cable Manager Installed on an 800mm wide S-Type Universal Cabinet

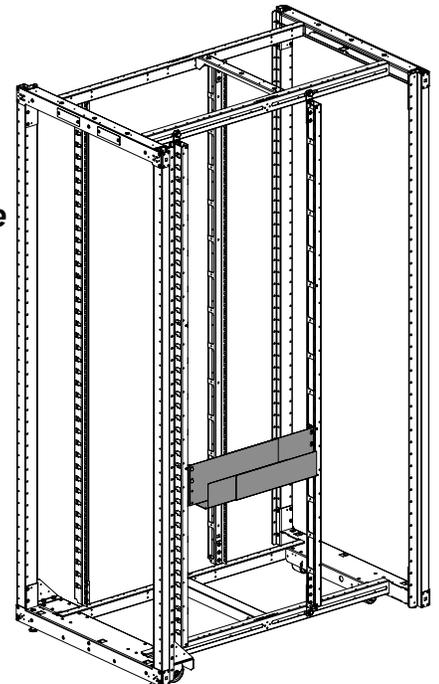


## Install Front to Back Cable Manager on N-Type Cabinet

- ① Fasten Outer Channel to the rear post using (2) M5x0.8 x 10mm hex head screw to the bracket upper and lower mounting holes
- ② Fasten Inner Channel to the front post (2) M5x0.8 x 10mm hex head screw to the bracket upper and lower mounting holes
- ③ Secure the Inner and Outer Channel with (1) 10-32 Wing Flange Nut


Note: above instructions are for mounting Front to Back Cable Manager on the right hand side of the cabinet. For left hand side mounting, the Outer Channel mounts to the front post and Inner Channel mounts to the rear post.

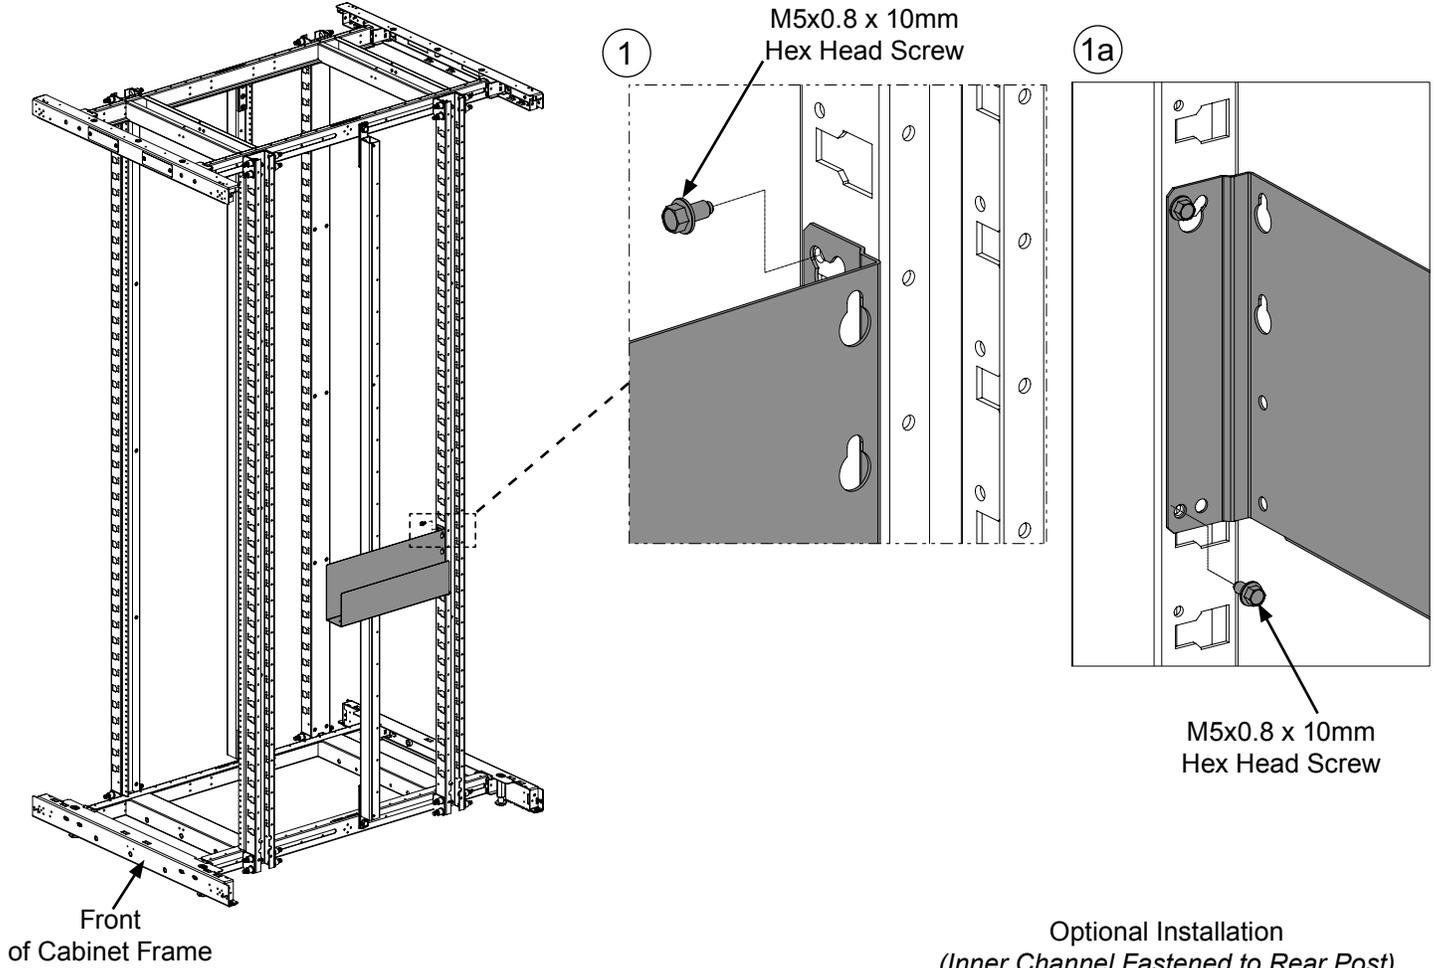




Optional Installation  
(Inner Channel Fastened to Rear Post)

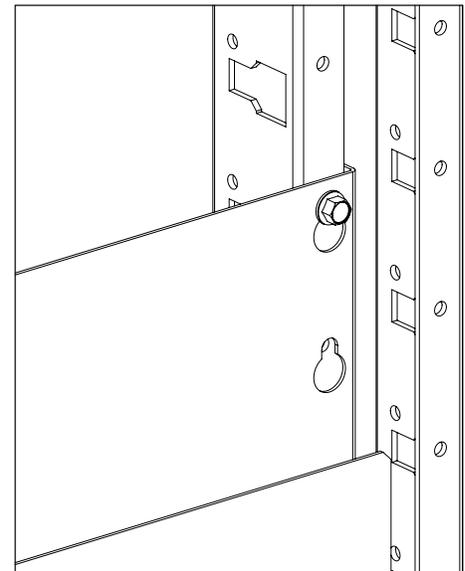

Optional Installation  
(Inner Channel Fastened to Adjustable Threaded E-Rail)

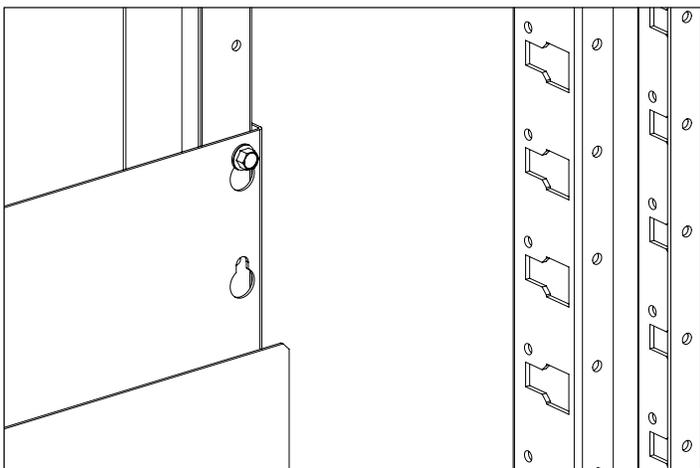


# Install Front to Back Cable Manager on N-Type Cabinet

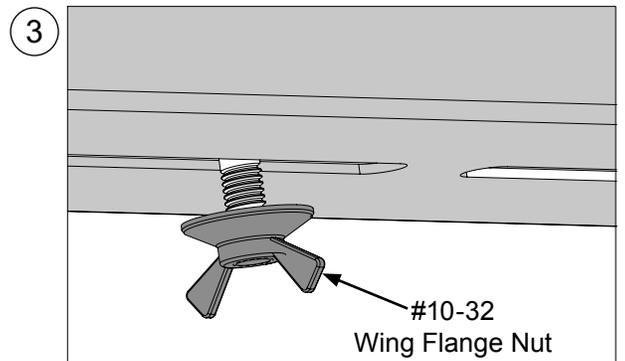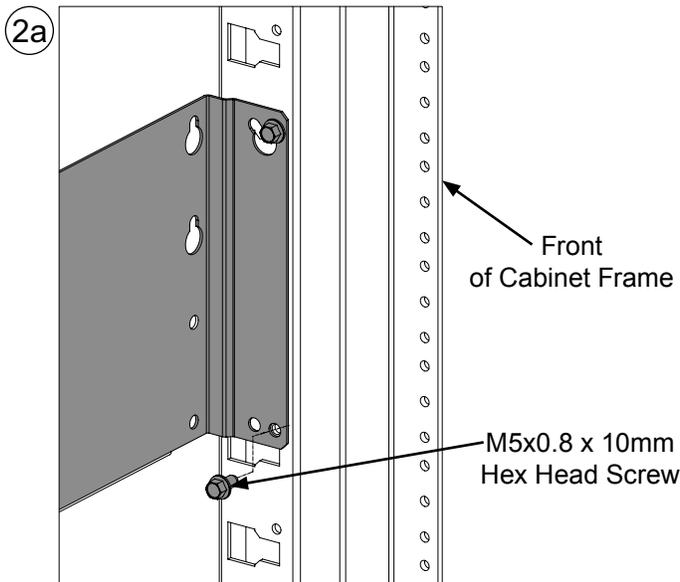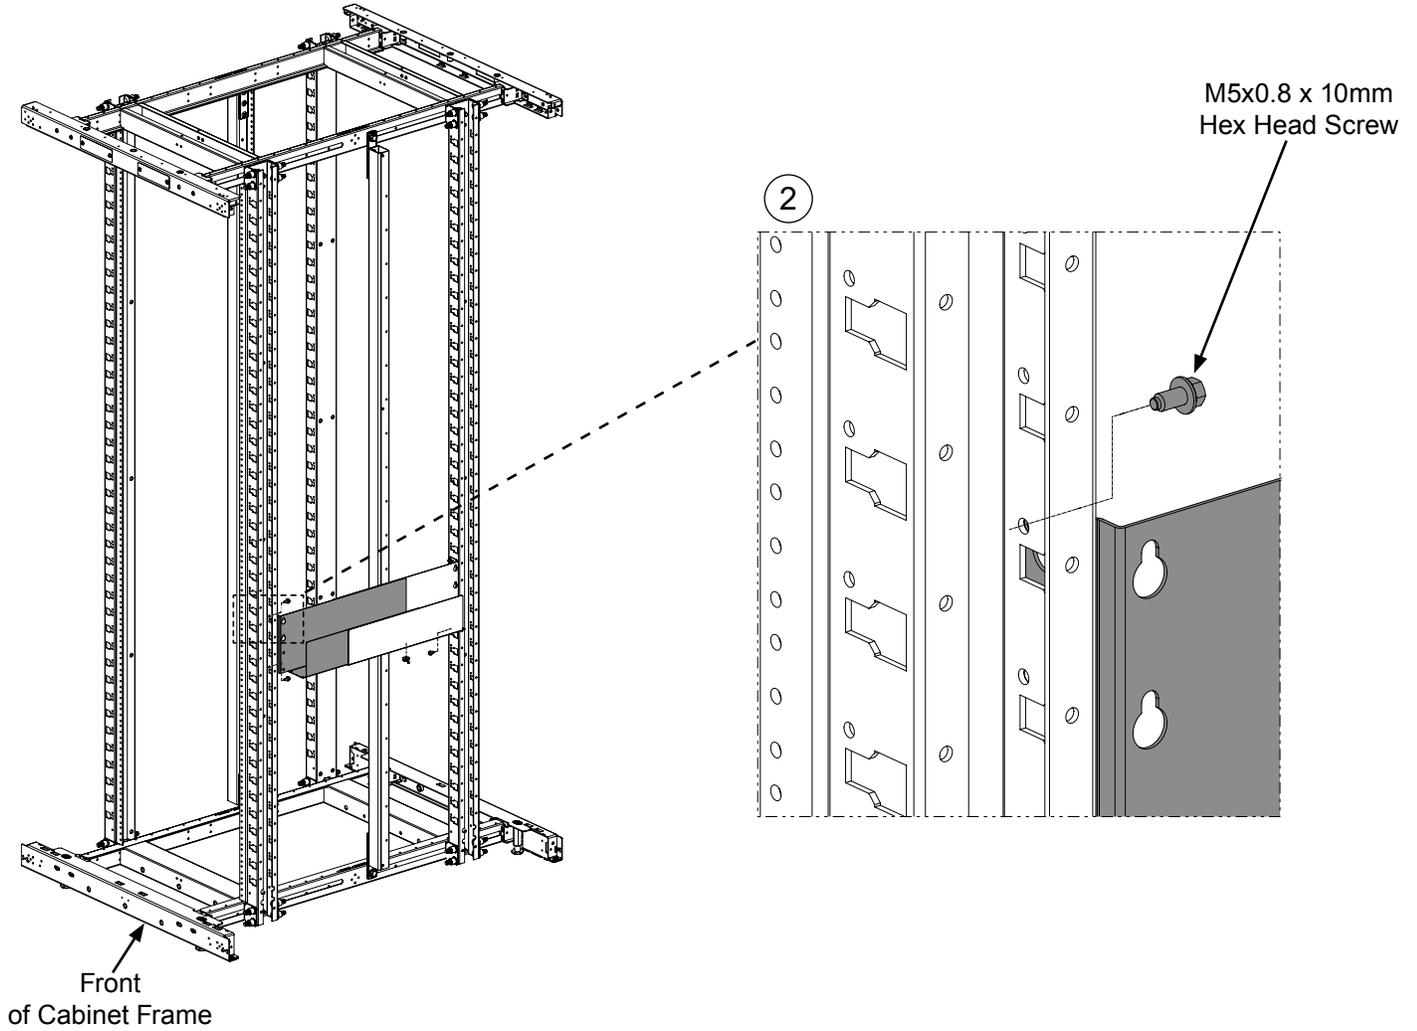

## Install Front to Back Cable Manager on S-Type Universal Cabinet

- ① Fasten Outer Channel to the rear E-rail using (2) M5x0.8 x 10mm hex head screw to the bracket upper and lower mounting holes
- ② Fasten Inner Channel to the front E-rail using (2) M5x0.8 x 10mm hex head screw to the bracket upper and lower mounting holes
- ③ Secure the Inner and Outer Channel with (1) 10-32 Wing Flange Nut

Note: above instructions are for mounting Front to Back Cable Manager on the right hand side of the cabinet. For left hand side mounting, the Outer Channel mounts to the front E-rail and Inner Channel mounts to the rear E-rail.

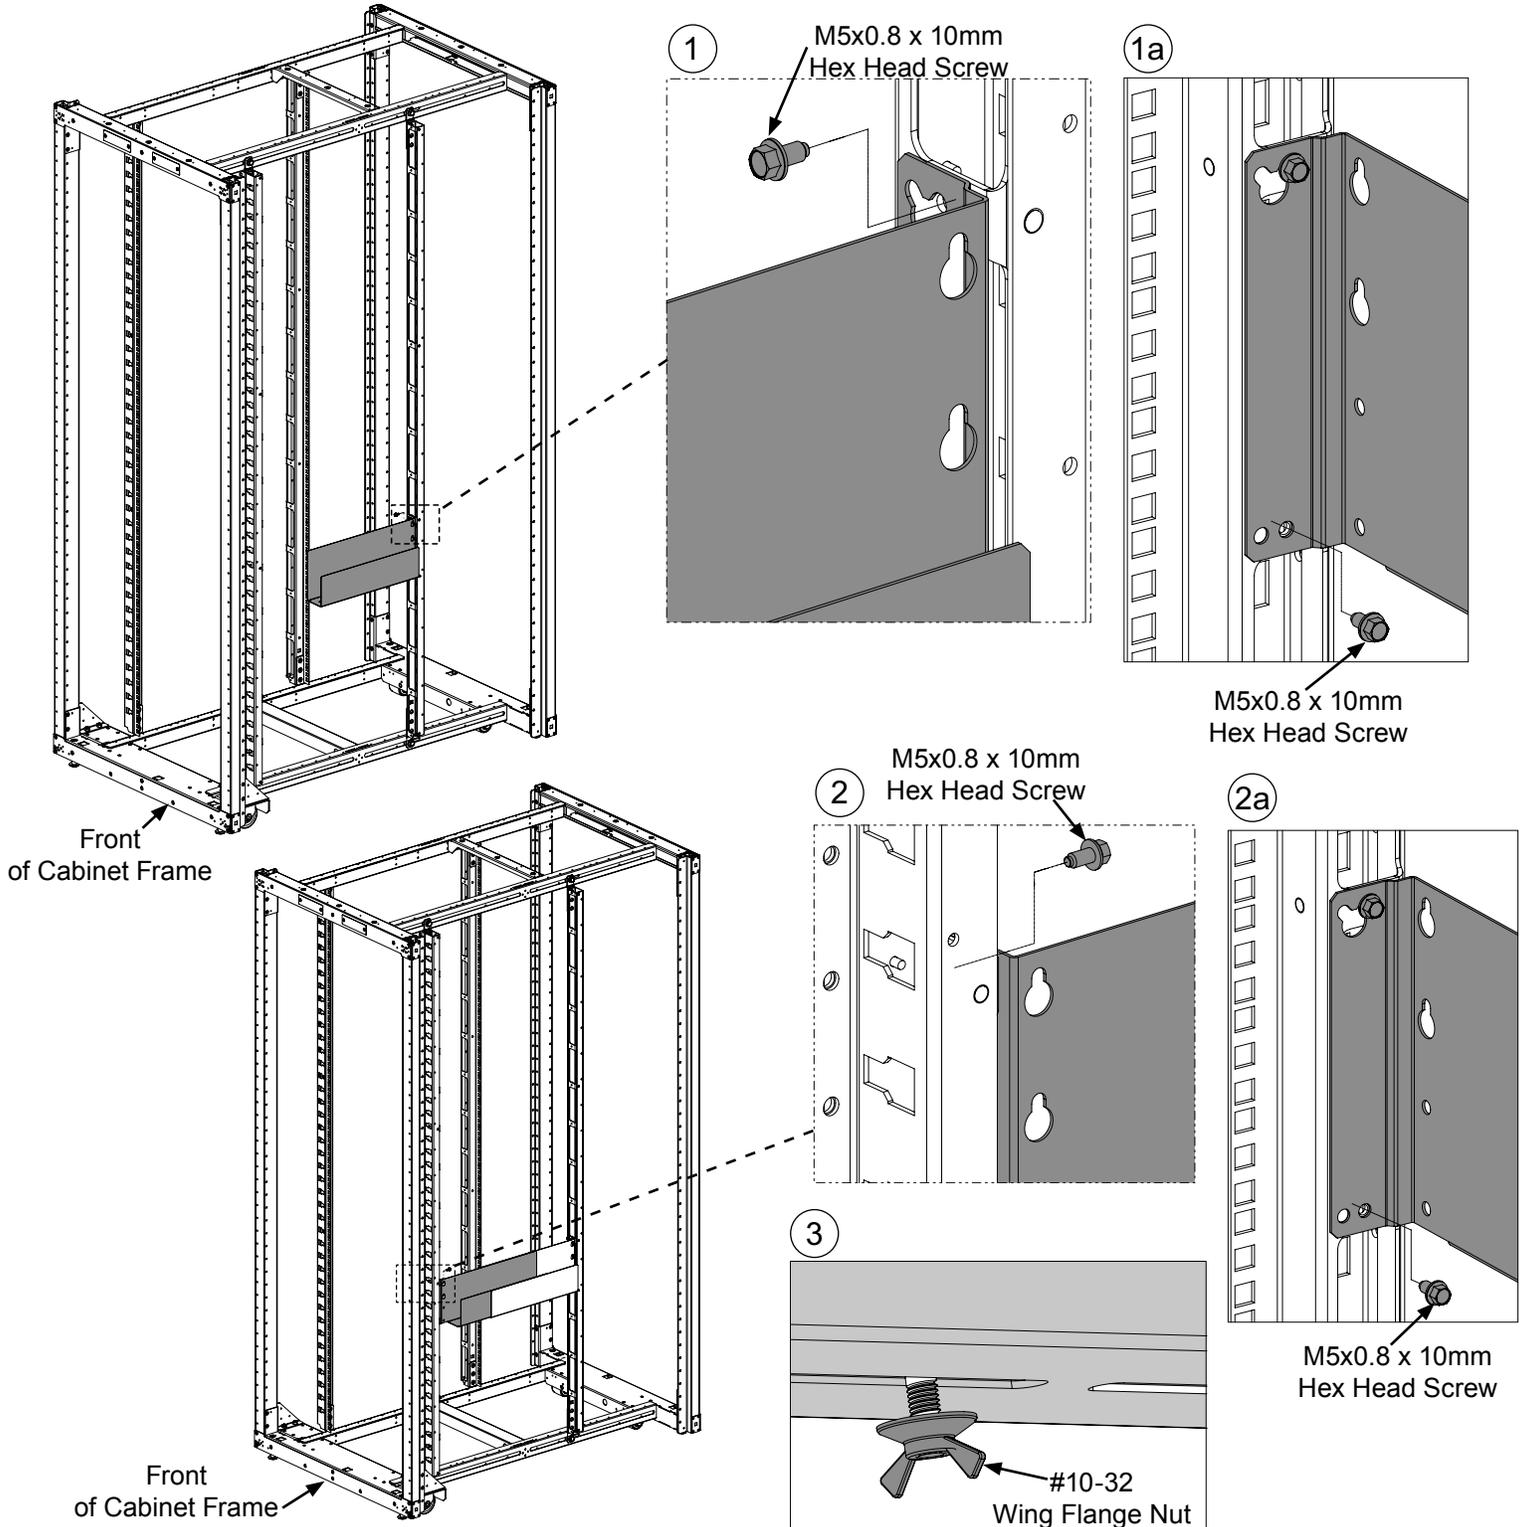

For Instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

**PANDUIT**

[www.panduit.com](http://www.panduit.com)

E-mail:  
[techsupport@panduit.com](mailto:techsupport@panduit.com)

Phone:  
866-405-6654