

Access & Power Integration

Altronix/Mercury Wired Kits

Models Include:

8 Door Kits with Fused Outputs:

T2M7LXK1

Accommodates one (1) Intelligent Dual Reader Controller and three (3) Dual Reader Interface Modules.

6 Door Kits with Fused Outputs:

T2M7LXK2

Accommodates one (1) Intelligent Controller and three (3) Dual Reader Interface Modules.

8 Door Kits with Fused Outputs:

T2M7LXK3

Accommodates up to four (4) Dual Reader Interface Modules.

Each fully assembled kit includes:

- Trove2 enclosure with TM2 Altronix/Mercury backplane
- One (1) AL1024ULXB2 - Power Supply/Charger
- One (1) ACMS8 - Dual Input/Output Fuse Protected Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) PDS8 - Dual Input/Output Fuse Protected Power Distribution Module
- One (1) Rocker Switch Bracket with One (1) Rocker Switch (Not evaluated by UL)
- Wire harnesses and finger duct

8 Door Kits with PTC Outputs:

T2M7LXK1D

Accommodates one (1) Intelligent Dual Reader Controller and three (3) Dual Reader Interface Modules.

6 Door Kits with PTC Outputs:

T2M7LXK2D

Accommodates one (1) Intelligent Controller and three (3) Dual Reader Interface Modules.

8 Door Kits with PTC Outputs:

T2M7LXK3D

Accommodates up to four (4) Dual Reader Interface Modules.

Each fully assembled kit includes:

- Trove2 enclosure with TM2 Altronix/Mercury backplane
- One (1) AL1024ULXB2 - Power Supply/Charger
- One (1) ACMS8CB - Dual Input/Output PTC Protected Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) PDS8CB - Dual Input/Output PTC Protected Power Distribution Module
- One (1) Rocker Switch Bracket with One (1) Rocker Switch (Not evaluated by UL)
- Wire harnesses and finger duct

Installation Guide

All components of these Trove kits are UL Listed sub-assemblies.

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.



All registered trademarks are property of their respective owners.

Rev. T2M7LXK_03152022

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____



Overview:

Altronix Trove Plus kits are pre-wired, pre-assembled and consist of Trove2M2 enclosure/backplane with factory installed Altronix power supply/charger and sub-assemblies, wire harnesses and finger duct.

Configuration Chart:

Altronix Model Number	115VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage Range (VDC)	Maximum Supply Current for Main Outputs on Power Supply board and ACMS8(CB) Access Power Controller's outputs	Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Current Per ACMS8(CB) and PDS8(CB) Output (A)	ACMS8(CB) Board Input Fuse (PTC) Rating	ACMS8(CB) Board Output Fuse (PTC) Rating	PDS8(CB) Board Input Fuse (PTC) Rating	PDS8(CB) Board Output Fuse (PTC) Rating
T2M7LXK1	4.2	5A/250V	15A/32V	20.17-26.4	24VDC @ 9.4A	8	2.5	15A/250V	3A/250V	10A/250V	3A/250V
T2M7LXK2											
T2M7LXK3											
T2M7LXK1D							2.0	9A	2.5A	9A	2.5A
T2M7LXK2D											
T2M7LXK3D											

Hardware and Accessories:

- One(1) tamper switch (Altronix Model TS112 or equivalent).
- Cam lock.
- Battery leads.


Mechanical:

- 16 Gauge enclosure with ample knockouts for convenient access.
- Enclosure Dimensions (H x W x D): 27.25" x 21.75" x 6.5" (692.2mm x 552.5mm x 165.1mm).

Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top three keyholes in the enclosure. Install three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the three upper screws, level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Refer to the *ULXB Power Supply/Charger Installation Guide* for AL1024ULXB2 and corresponding *Sub-Assembly Installation Guides* for PDS8(CB) and ACMS8(CB) for further installation instructions.
5. Position Mercury access controller modules over corresponding spacers and depress onto snap on spacers (*Fig. 2, pg. 3*).
6. Connect wire harnesses to Mercury access controller modules (*Fig. 2-4, pg. 3-5*).
7. Mount backplane to enclosure with hardware.

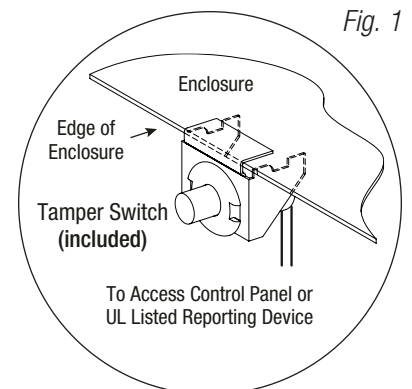


T2M7LXK1(D) Configuration:

1. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 2, pg. 3).
2. Mount backplane to enclosure with hardware.

Access Controller Position Chart for the Following Models:

Mercury Access Controller	Pem Mounting
LP1502 / LP4502	(A)
LNL-1320 / MR52	(B) (C) (D)

Fig. 2

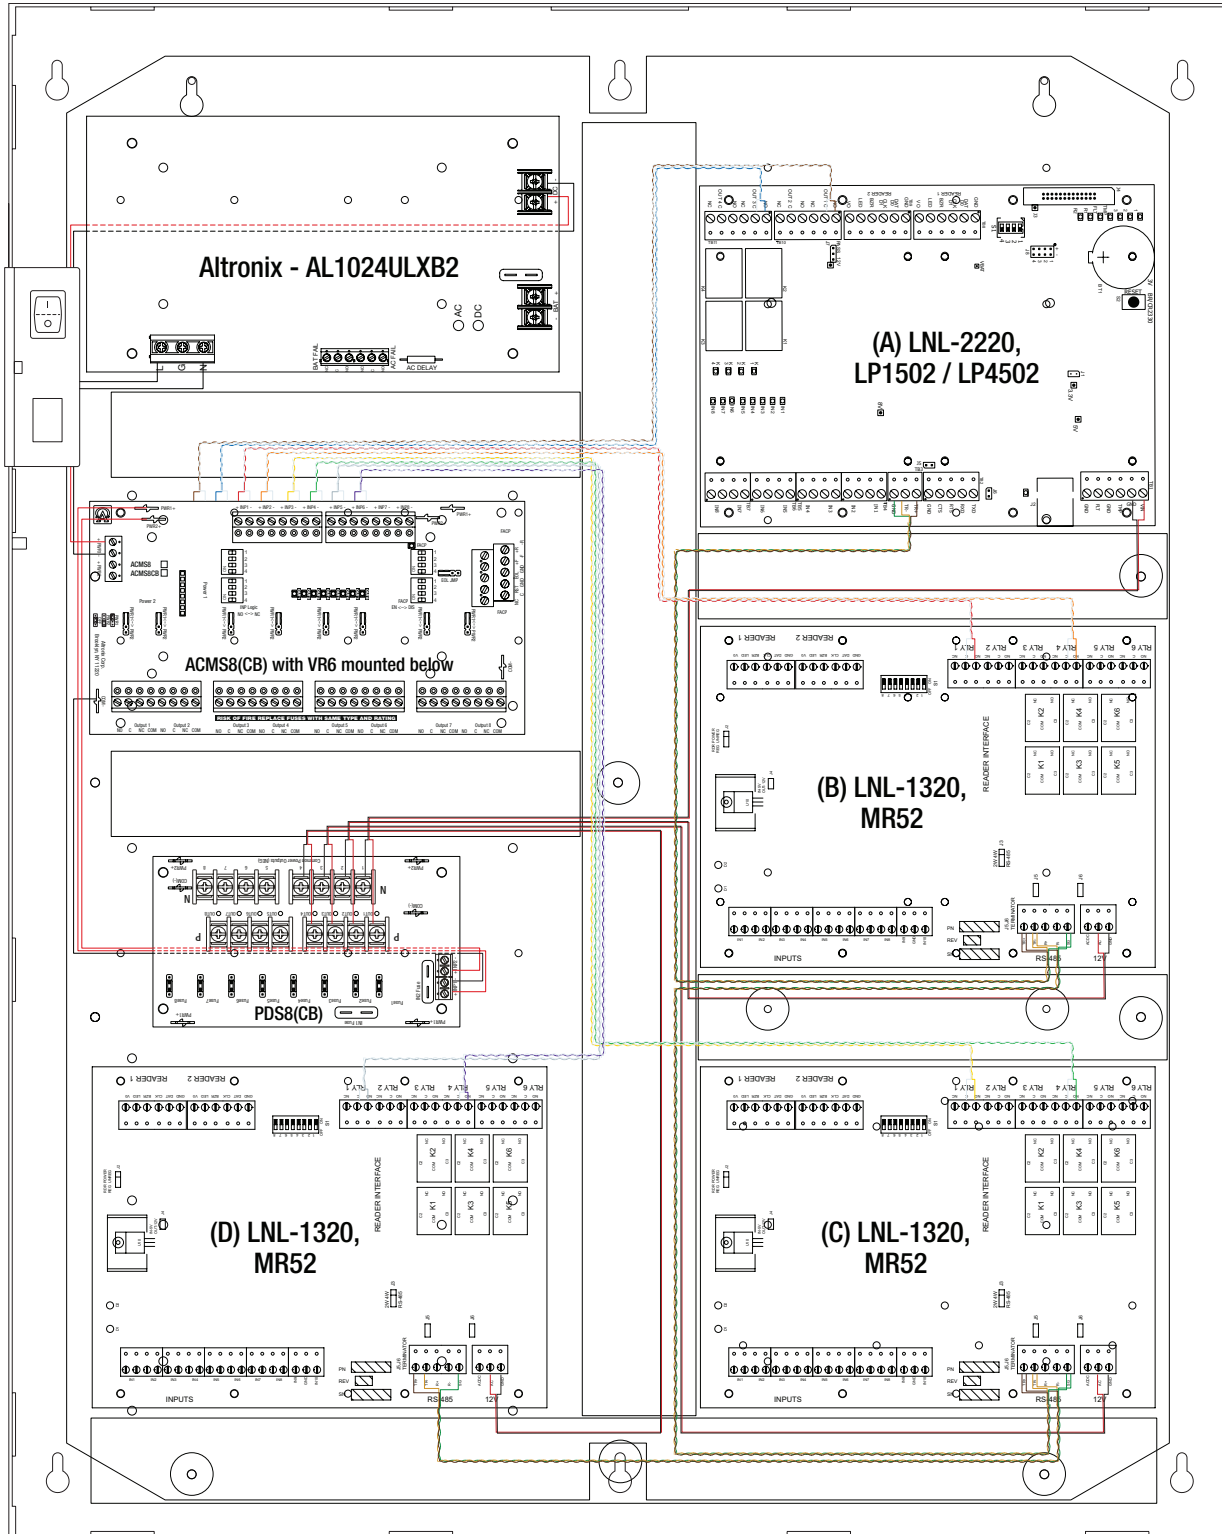


T2M7LXK2(D) Configuration:

1. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 3, pg. 4).
2. Mount backplane to enclosure with hardware.

Access Controller Position Chart for the Following Models:

Mercury Access Controller	Pem Mounting
LNL-3300 / LP2500	(A)
LNL-1320 / MR52	(B) (C) (D)

Fig. 3

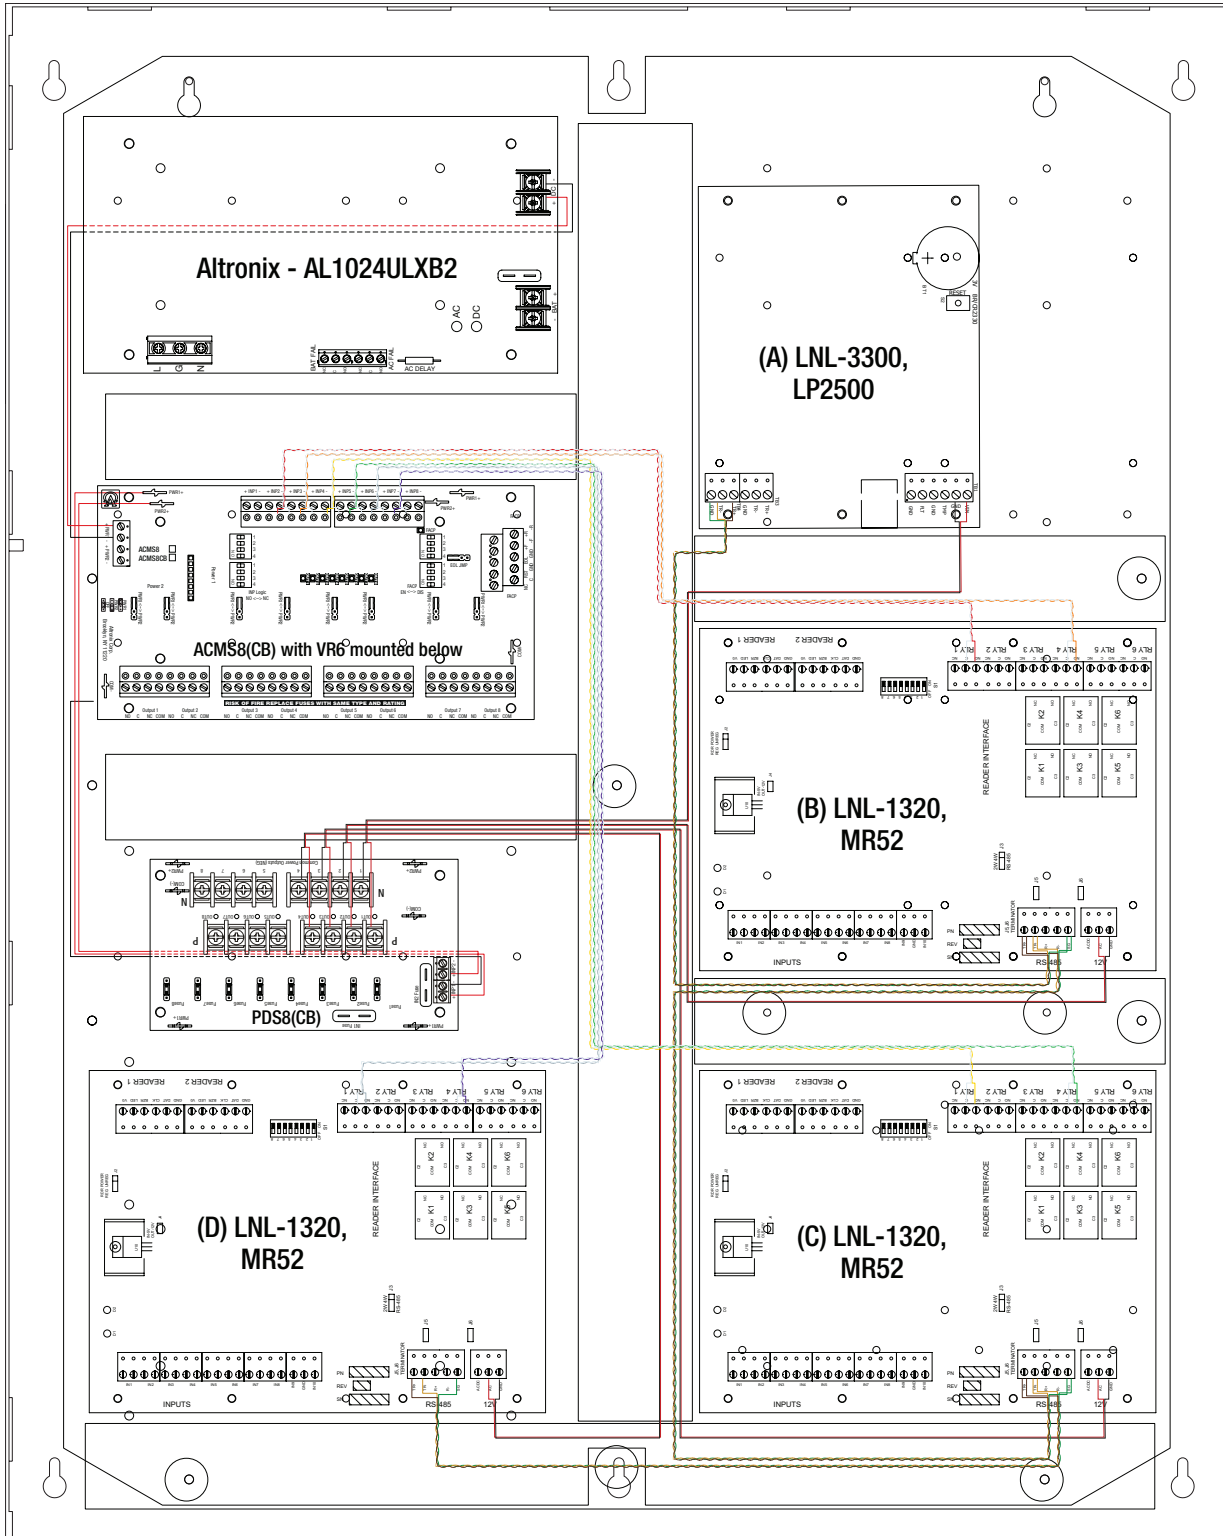


T2M7LXK3(D) Configuration:

1. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 4, pg. 5).
2. Mount backplane to enclosure with hardware.

Access Controller Position Chart for the Following Models:

Mercury Access Controller	Pem Mounting
LNL-1320 / MR52	(A) (B) (C) (D)

Fig. 4

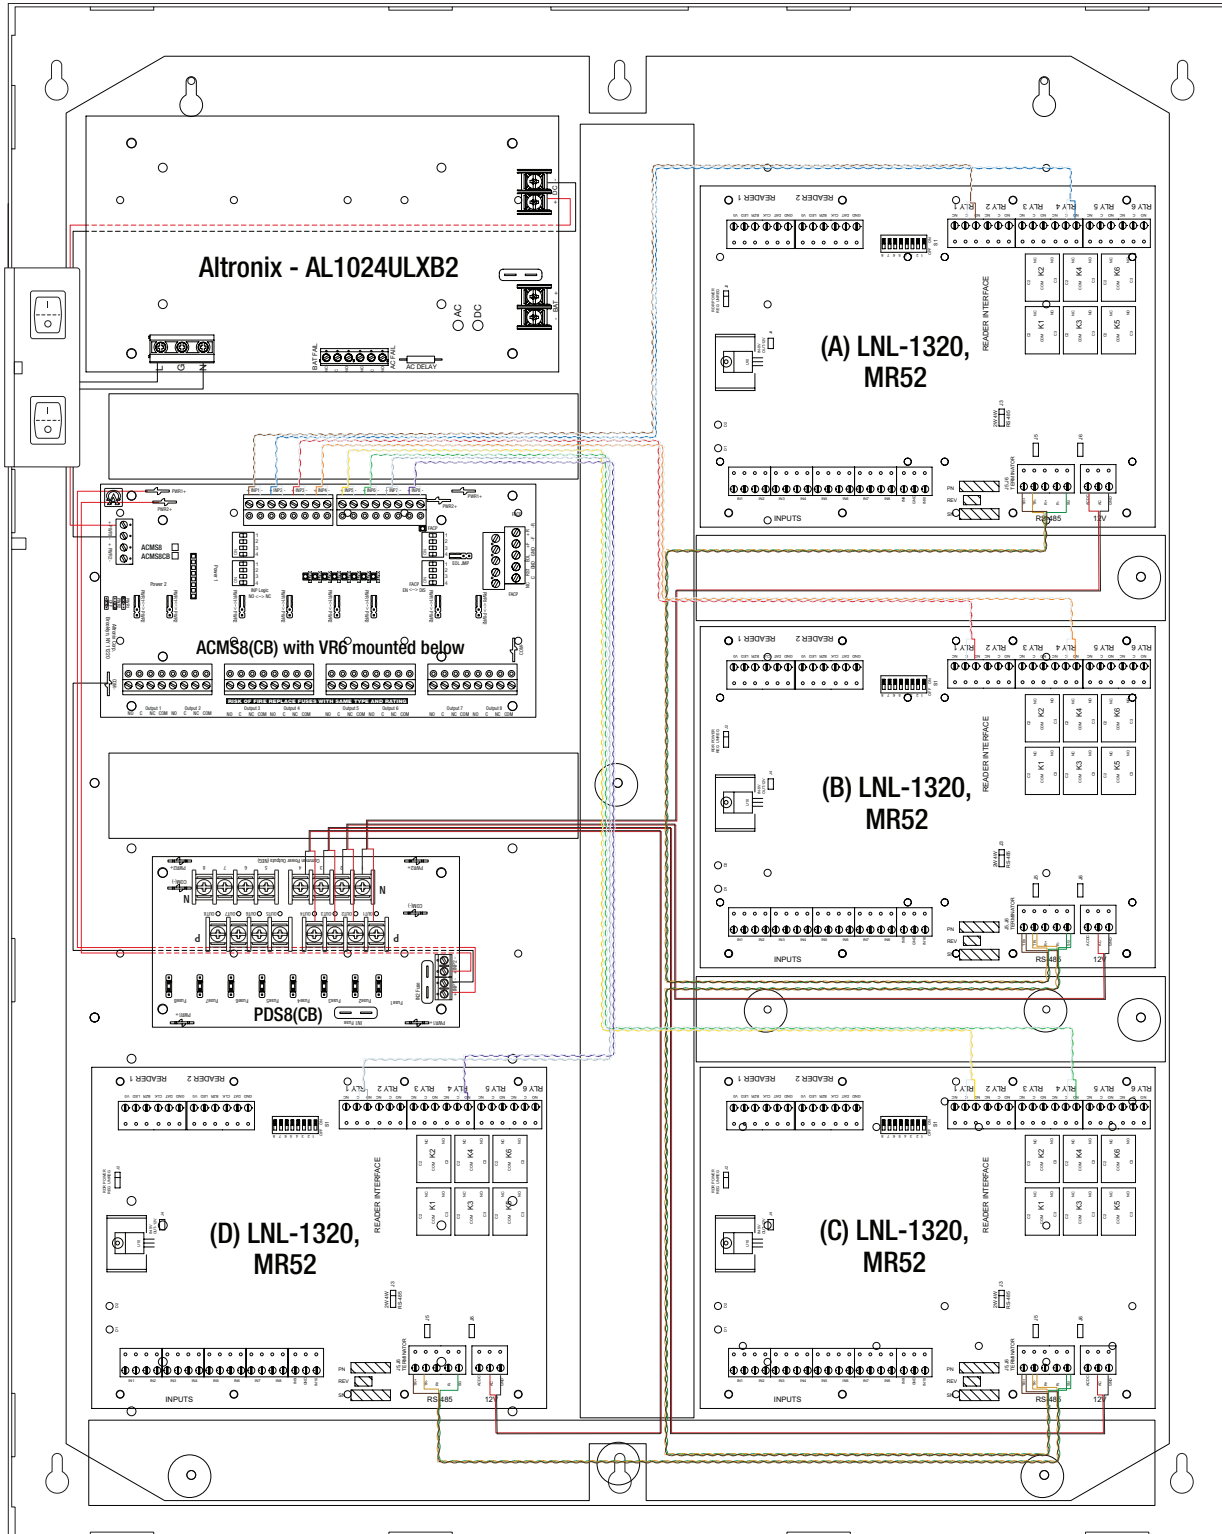


Notes:

Notes:

Trove2 Enclosure Dimensions (H x W x D approximate):

27.25" x 21.5" x 6.5" (692.2mm x 552.5mm x 165.1mm)

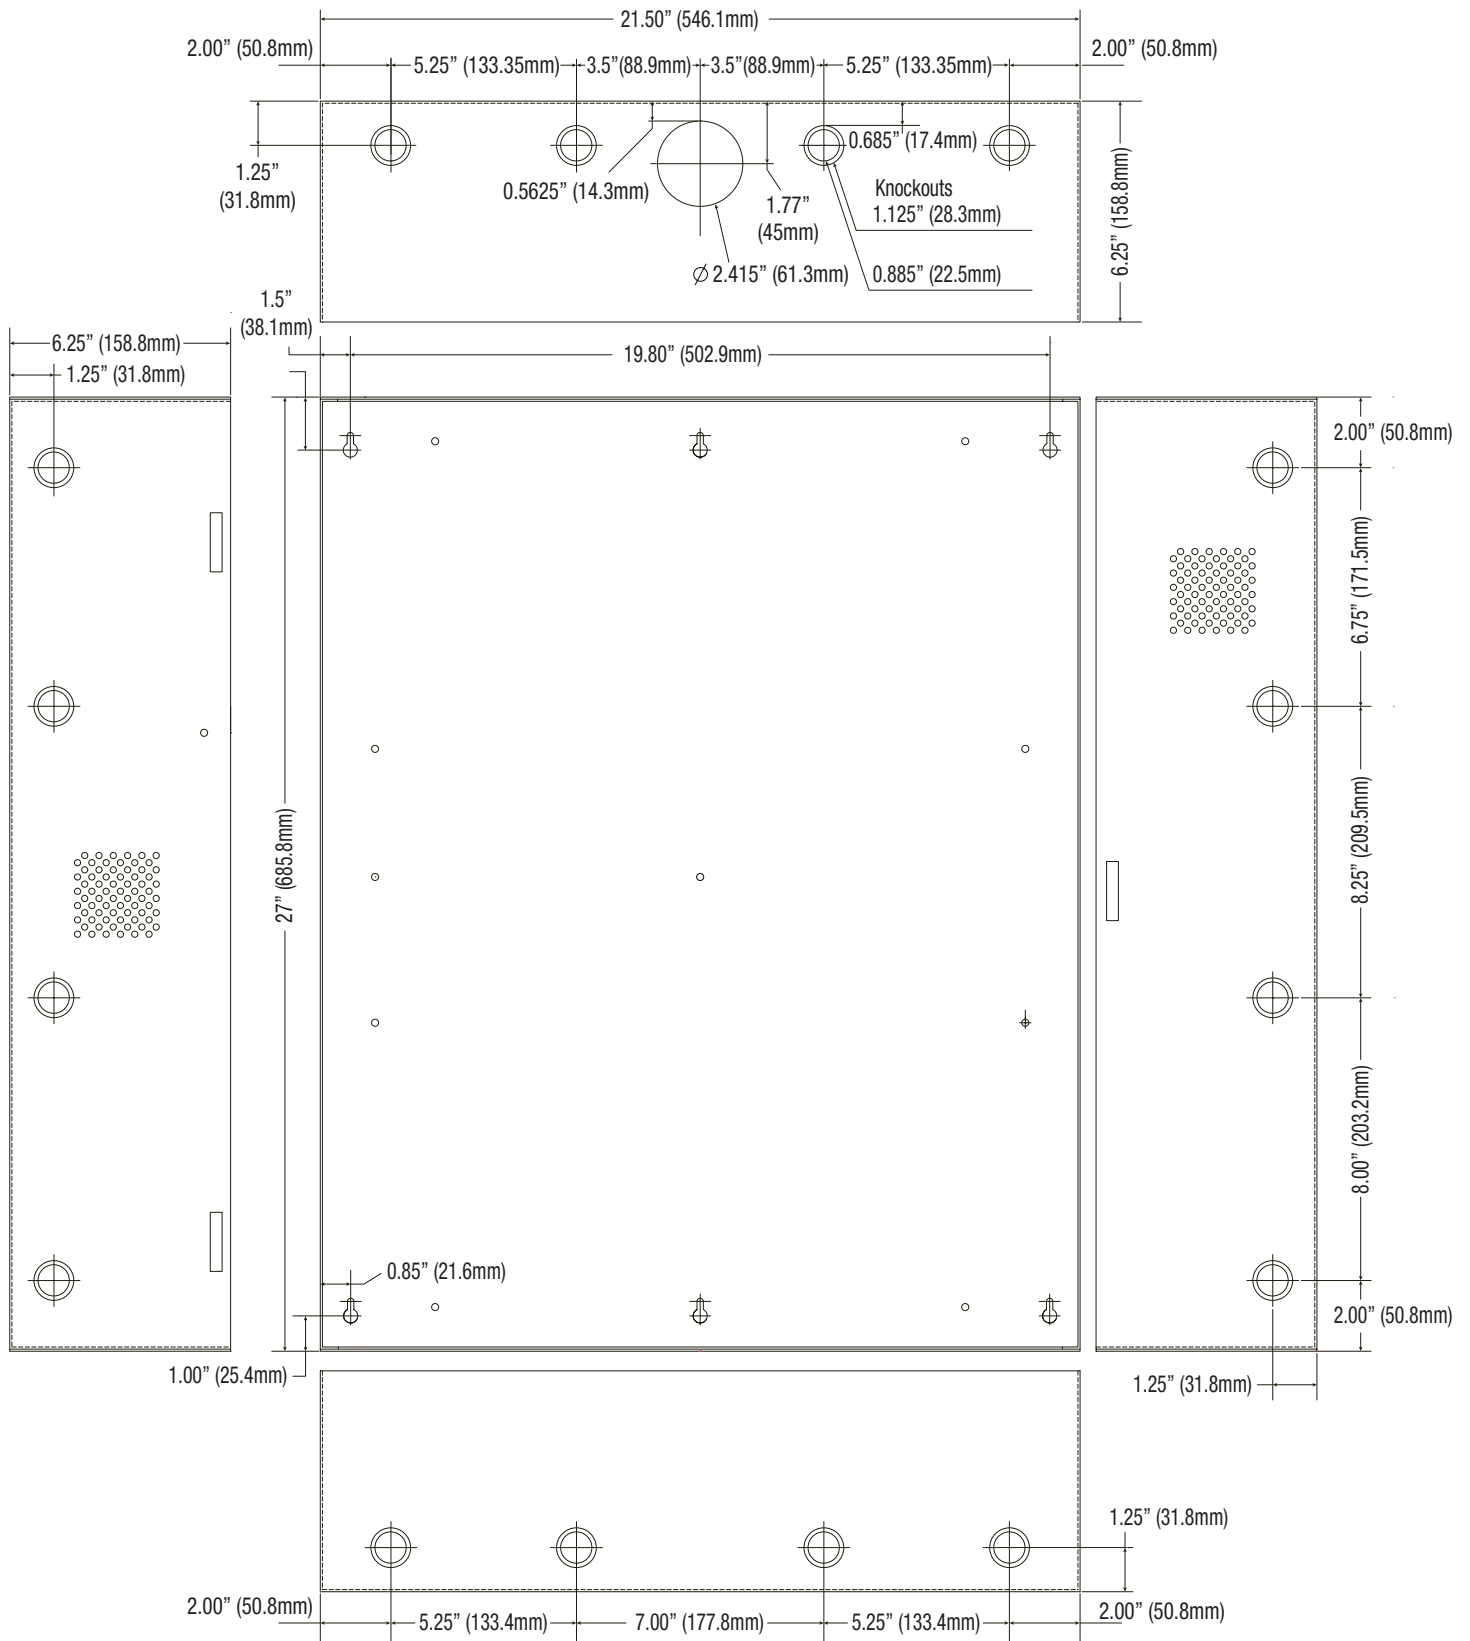

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
web site: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty
IIT2M7LXK Kit Series

L16V

