

Access & Power Integration



Altronix/Trove1 Mercury Kits

Models Include:

T1MK1F4

4 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove1 enclosure with TM1 Altronix/Mercury backplane
- (1) eFlow4NB - Power Supply/Charger
- (1) VR6 - Voltage Regulator
- (1) ACM4 - Fused Access Power Controller

T1MK1F4S

4 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove1 enclosure with TM1 Altronix/Mercury backplane
- (1) eFlow4NB - Power Supply/Charger
- (1) VR6 - Voltage Regulator
- (1) ACM4 - Fused Access Power Controller
- (1) PDS8 - Dual Input Power Distribution Module

T1MK1F4D

4 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove1 enclosure with TM1 Altronix/Mercury backplane
- (1) eFlow4NB - Power Supply/Charger
- (1) VR6 - Voltage Regulator
- (1) ACM4CB - PTC Access Power Controller

T1MK1F4SD

4 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove1 enclosure with TM1 Altronix/Mercury backplane
- (1) eFlow4NB - Power Supply/Charger
- (1) VR6 - Voltage Regulator
- (1) ACM4CB - PTC Access Power Controller
- (1) PDS8CB - Dual Input Power Distribution Module

All components of these Trove kits are UL Listed sub-assemblies.

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide



More than just power.™

All registered trademarks are property of their respective owners.

Rev. T1MK022719

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____

Overview:

Altronix Trove Mercury kits are pre-assembled and consist of Trove1M1 enclosure/backplane with factory installed Altronix power supply/charger and sub-assemblies. These kits also accommodate various combinations of Mercury boards for up to four (4) doors in a single enclosure.

Configuration Chart:


Altronix Model Number	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Nominal DC Output Voltage		Maximum Supply Current for Main and Aux. Outputs on Power Supply board and ACM4/ACM4CB Access Power Controller's outputs (A)	Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Fail-Safe/Fail-Secure Outputs (auto-resettable)	Current Per ACM4 Output (A)	Current Per ACM4CB Output (A)	ACM4/ACM4CB Board Input Fuse Rating	ACM4 Board Output Fuse Rating	ACM4CB Board Output PTC Rating	PDS8/PDS8CB Board Input Fuse Rating	PDS8 Board Output Fuse Rating	PDS8CB Board Output PTC Rating
				[DC]	[Aux]											
T1MK1F4	3.5	5A/250V	7.5A/32V	20.28-26.4	20.28-26.4	24VDC @ 3.6A	4	–	2.5	–	10A/250V	3A/250V	–	–	–	–
T1MK1F4D	3.5	5A/250V	7.5A/32V	20.28-26.4	20.28-26.4	24VDC @ 3.6A	–	4	–	2.0	10A/250V	–	2.0A	–	–	–
T1MK1F4S	3.5	5A/250V	7.5A/32V	20.28-26.4	20.28-26.4	24VDC @ 3.6A	4	–	2.5	–	10A/250V	3A/250V	–	10A/250V	3A/250V	–
T1MK1F4SD	3.5	5A/250V	7.5A/32V	20.28-26.4	20.28-26.4	24VDC @ 3.6A	–	4	–	2.0	10A/250V	–	2.0A	10A/250V	–	2.0A

Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top two (2) keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two upper screws; level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install the two fasteners. Place the enclosure's upper keyholes over the three upper screws. Install the two lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model T112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Position Mercury access controller modules over corresponding spacers and depress onto snap on spacers, *Fig. 2, pg. 3*.
5. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow4NB, and corresponding Sub-Assembly Installation Guide for ACM4(CB), PDS8(CB) and VR6 for further installation instructions.
6. Mount backplane to enclosure with hardware.

Fig. 1

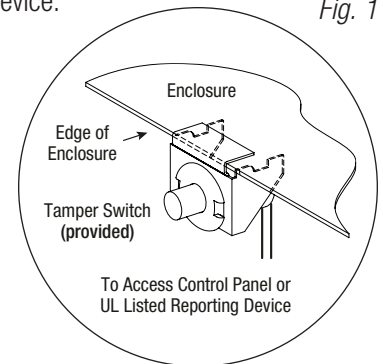

Hardware:

Snap On Spacer |
 5/16" Pan Head Screw |
 Lock Nut

1. Fasten snap on spacers onto metal pems configuration (A), (B), (C) or (D) of backplane depending on the access controller (*Fig. 2, pg. 3*).
2. Position access controller module over corresponding spacers and depress onto snap on spacers (*Fig. 2a, pg. 3*).
3. Mount backplane to enclosure with hardware.

Mercury Access Controller	Pem Mounting
EP1502, LP1502, MR52, MR16IN, MR16OUT	(A)
EP1501, LP1501, MR51e, MR62e	(B)
MR50	(C)
EP2500, LP2500, MUX8	(D)

The diagram illustrates the internal wiring of the Altronix VR6 and ACM4(CB) components. The VR6 unit is shown with its terminal block and internal connections. The ACM4(CB) unit is shown with its terminal block and internal connections. The diagram includes labels for the components and their internal wiring, such as "Altronix - VR6", "Altronix - eFlow4NB", "Flying Leads", "ACM4 ACCESS POWER CONTROLLER", and "MAIN". The diagram also shows the connection of the VR6 to the ACM4(CB) and the connection of the ACM4(CB) to the eFlow4NB. The diagram is a technical drawing showing the internal wiring of the components. It includes labels for the components and their internal wiring, such as "Altronix - VR6", "Altronix - eFlow4NB", "Flying Leads", "ACM4 ACCESS POWER CONTROLLER", and "MAIN". The diagram also shows the connection of the VR6 to the ACM4(CB) and the connection of the ACM4(CB) to the eFlow4NB. The diagram is a technical drawing showing the internal wiring of the components.

Fig. 2a

Pem

Snap On Spacer

Backplane

Mercury Board

T1MK1F4S and T1MK1F4SD: Configuration of Mercury Boards:

- 1. Fasten snap on spacers onto metal pems configuration (A), (B), (C) or (D) of backplane depending on the access controller (Fig. 3, pg. 4).
- 2. Position access controller module over corresponding spacers and depress onto snap on spacers (Fig. 3a, pg. 4).
- 3. Mount backplane to enclosure with hardware.

Access Controller Position Chart for the Following Models:

Mercury Access Controller	Pem Mounting
EP1502, LP1502, MR52, MR16IN, MR16OUT	(A)
EP1501, LP1501, MR51e, MR62e	(B)
MR50	(C)
EP2500, LP2500, MUX8	(D)

Fig. 3


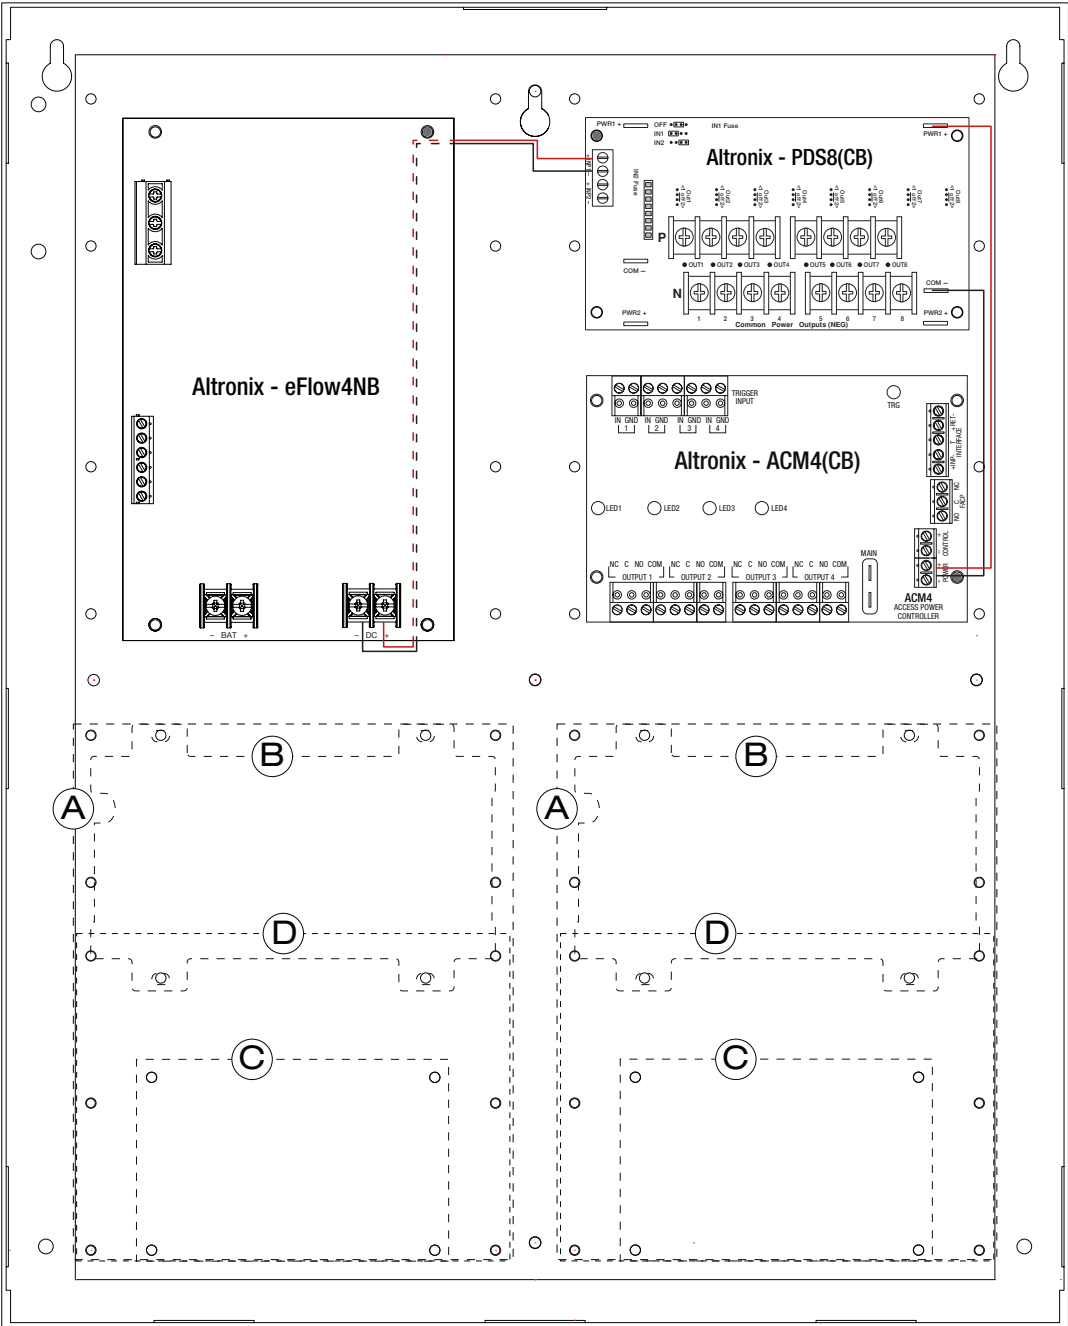


Fig. 3a



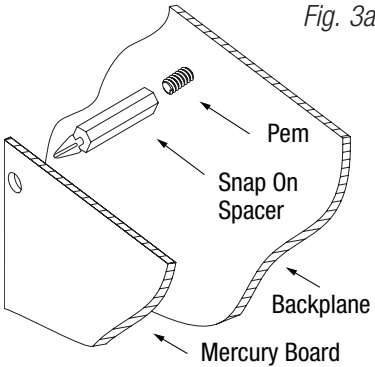


eFlow Power Supply/Chargers can be Controlled and Monitored while Reporting Power/Diagnostics from Anywhere over the Network...

LINQ™

LINQ2 - Network Communication Module

LINQ2 provides remote IP access to real-time data from eFlow power supply/chargers to help keep systems up and running at optimal levels. It facilitates fast and easy installation and set-up, minimizes system downtime, and eliminates unnecessary service calls, which helps reduce Total Cost of Ownership (TCO) - as well as creating a new source of Recurring Monthly Revenue (RMR).

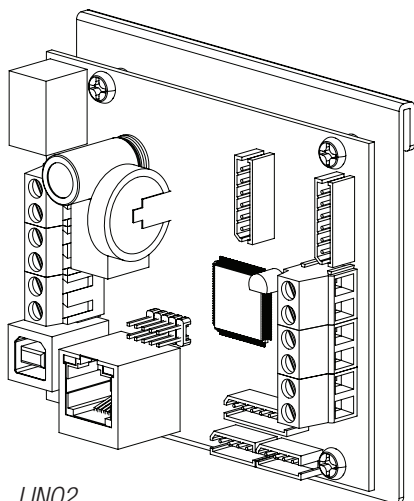


LINQ2

Features:

- UL Listed in the U.S. and Canada.
- Local or remote control of up to (2) two Altronix eFlow power output(s) via LAN and/or WAN.
- Monitor real time diagnostics: DC output voltage, output current, AC & battery status/service, input trigger state change, output state change and unit temperature.
- Access control and user management: Restrict read/write, Restrict users to specific resources
- Two (2) integral network controlled Form "C" Relays.
- Three (3) programmable input triggers: Control relays and power supplies via external hardware sources.
- Email and Windows Dashboard notifications
- Event log tracks history.
- Secure Socket Layer (SSL).
- Programmable via USB or web browser - includes operating software and 6 ft. USB cable.

LINQ2 Mounts Inside any Trove Enclosure

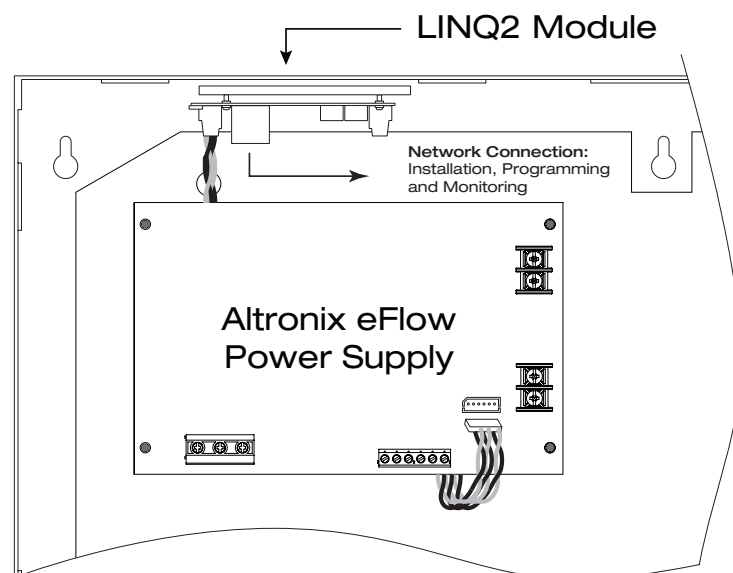


Notes:

Notes:

Trove1 Enclosure Dimensions (H x W x D approximate):

18" x 14.5" x 4.625" (457mm x 368mm x 118mm)

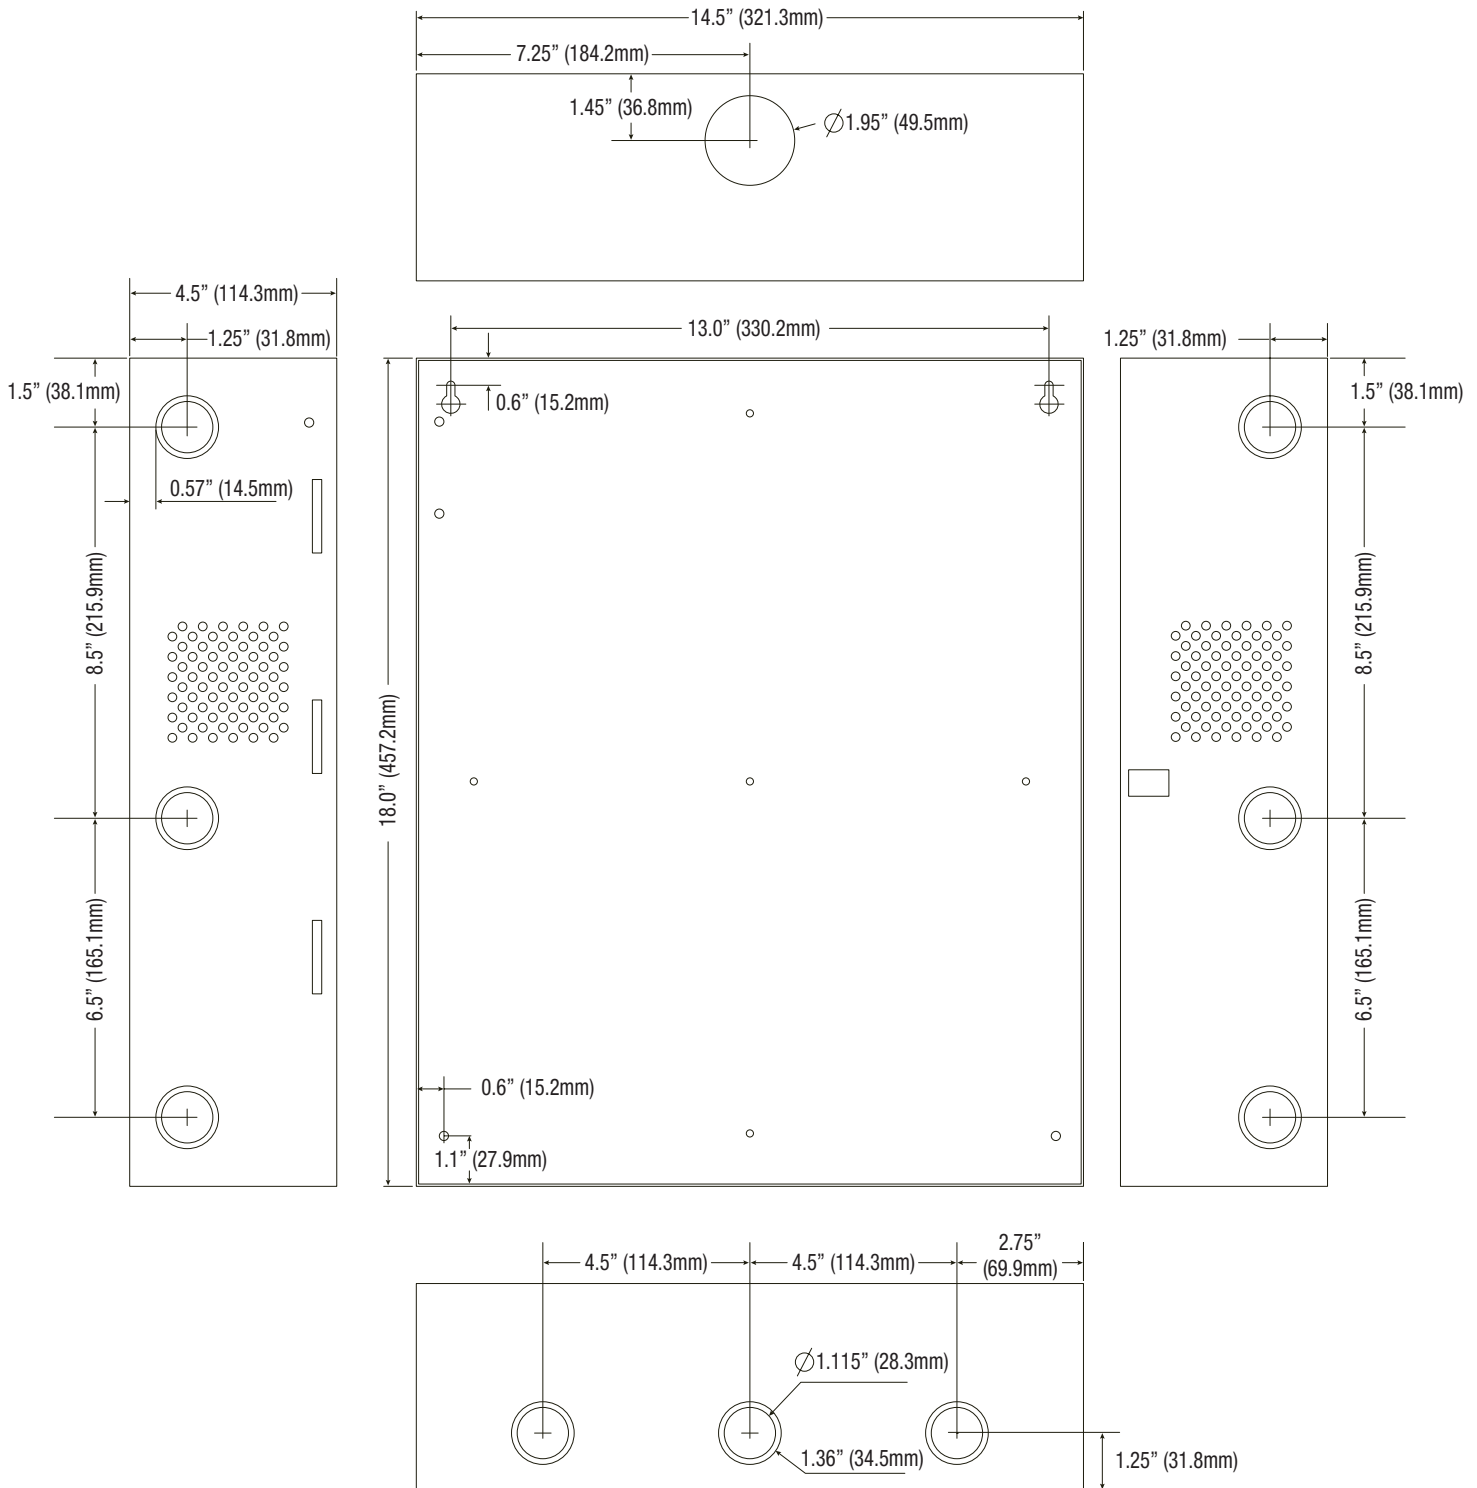

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
 web site: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty
 IITrove1M1 Kit Series

I29U



Trove1 Mercury Kits Installation Guide