Unlock the power of Pico remote controls
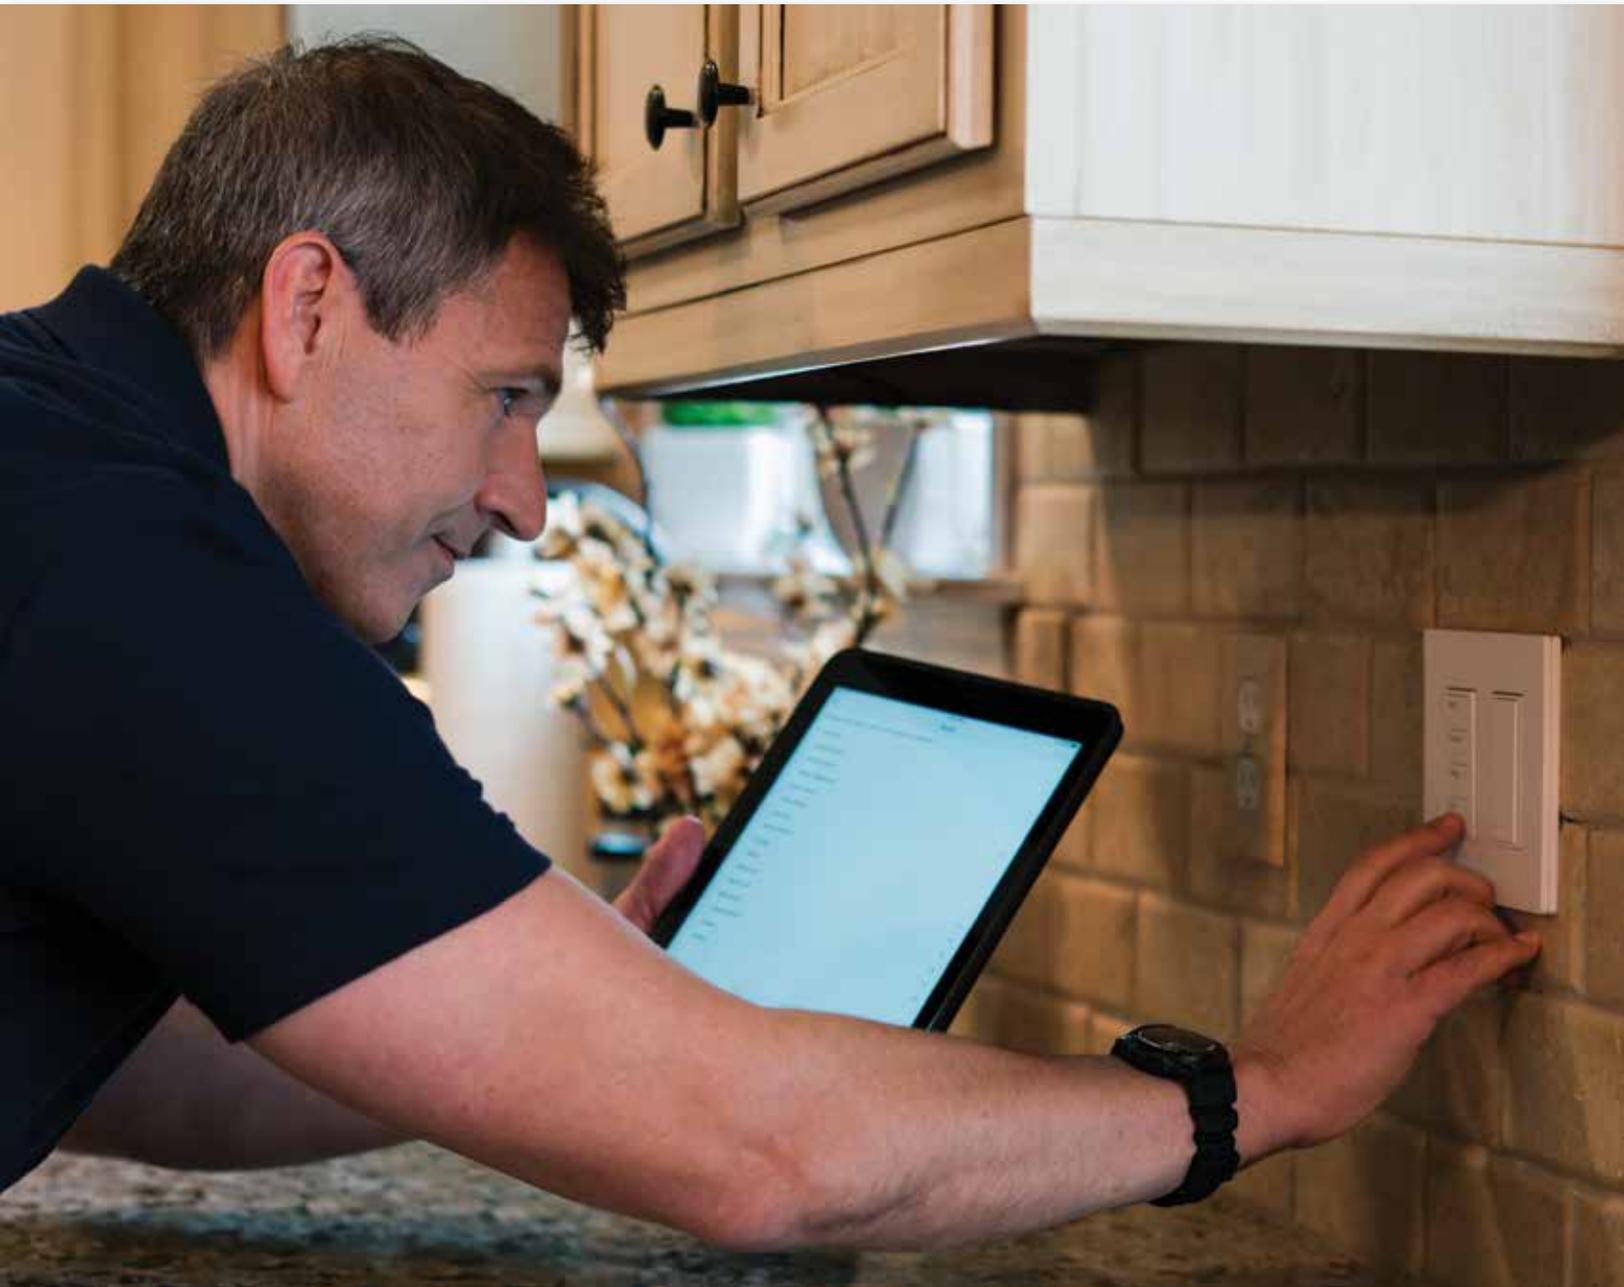
Make your job easier, and give customers control where they need it.

☀LUTRON

What is a Pico?

A Pico is a battery-powered, RF remote that communicates with other Lutron wireless devices, including dimmers, switches, and shades, as well as with fans and audio integrated into a Lutron system.

Adding a Pico to a dimmer, switch, shade, fan, or Sonos Home Sound System provides an additional point of control. And it only takes a few minutes to do.

What can a Pico do for you?

- You can add a Pico to any wall surface without cutting holes, running wire, spackling, and repainting.

- You can easily add 3-way dimming or switching control where your customer needs it, in a fraction of the time and labor it takes to install a wired 3-way.

- You'll avoid callbacks. The Pico is battery-powered, with an industry-leading 10-year battery life.

Claro wallplate

Pico remote

Wallplate bracket

Pico remote wall-mounting kit (sold separately)

Multi-location control
**in a few minutes**

Your time is valuable

Adding a new control location with a Pico

You can add a Pico in 3 easy steps:

1. Replace an existing switch with a Lutron wireless dimmer or switch

2. Associate the Pico to the dimmer or switch*

3. Attach the Pico to a wall, place it on a pedestal, or use it with a car visor clip

Tools needed: screwdriver and pliers

* You can also easily associate a Pico directly to Lutron shades.
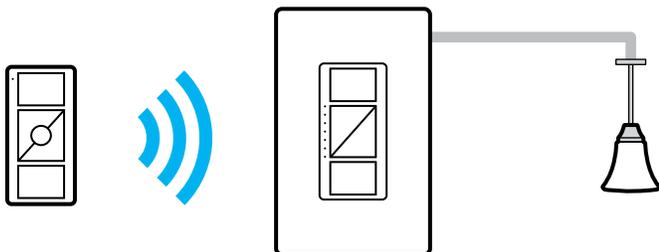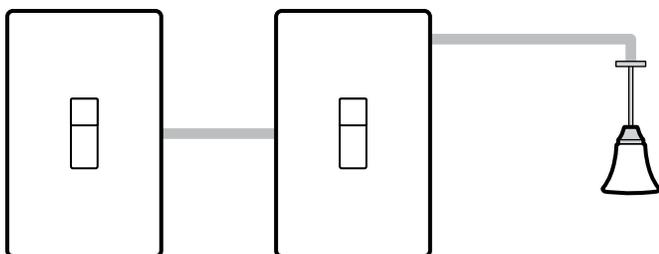
15 minutes
or less

Adding a new control location with a 3-way switch

Installing a traditional switch requires more time:

1. Run wire through a crawl space, attic, or fish through a wall

2. Cut a hole in drywall and install the wallbox

3. Wire the new control into the existing circuit

4. Repair the wall and paint it

Tools needed: screwdriver, wire stripper, drywall saw, fish tape, pliers

2-4 hours

What can a Pico do for your customers?
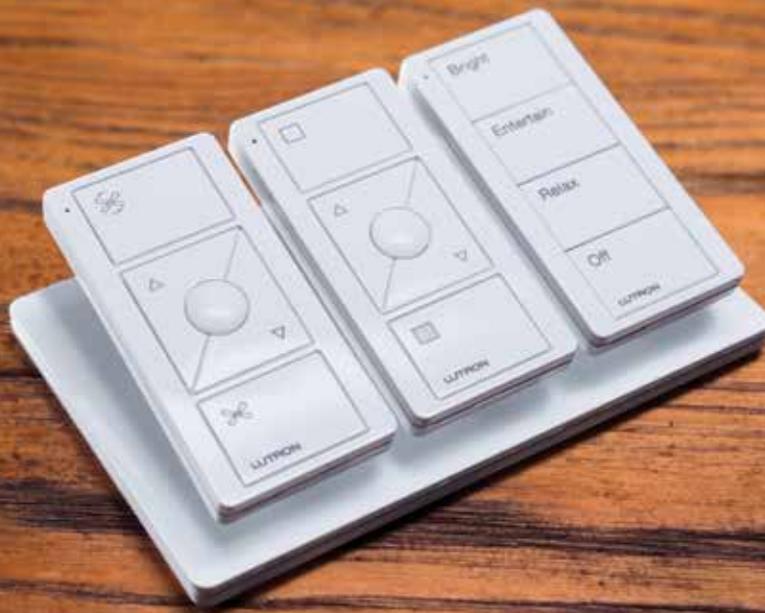
**With a Pico and just one touch, a customer can:**

- Turn off all the lights in the house
- Control multiple lights or shades at one time
- Control audio (instead of opening an app on a phone)
- Control a ceiling fan

Control where your customer wants it
Mount a Pico on a tabletop pedestal. Tabletop pedestals are available in single, double, and triple configurations.

You can also mount a Pico on a wall.

Pico is also great problem solver —
for entry lights…
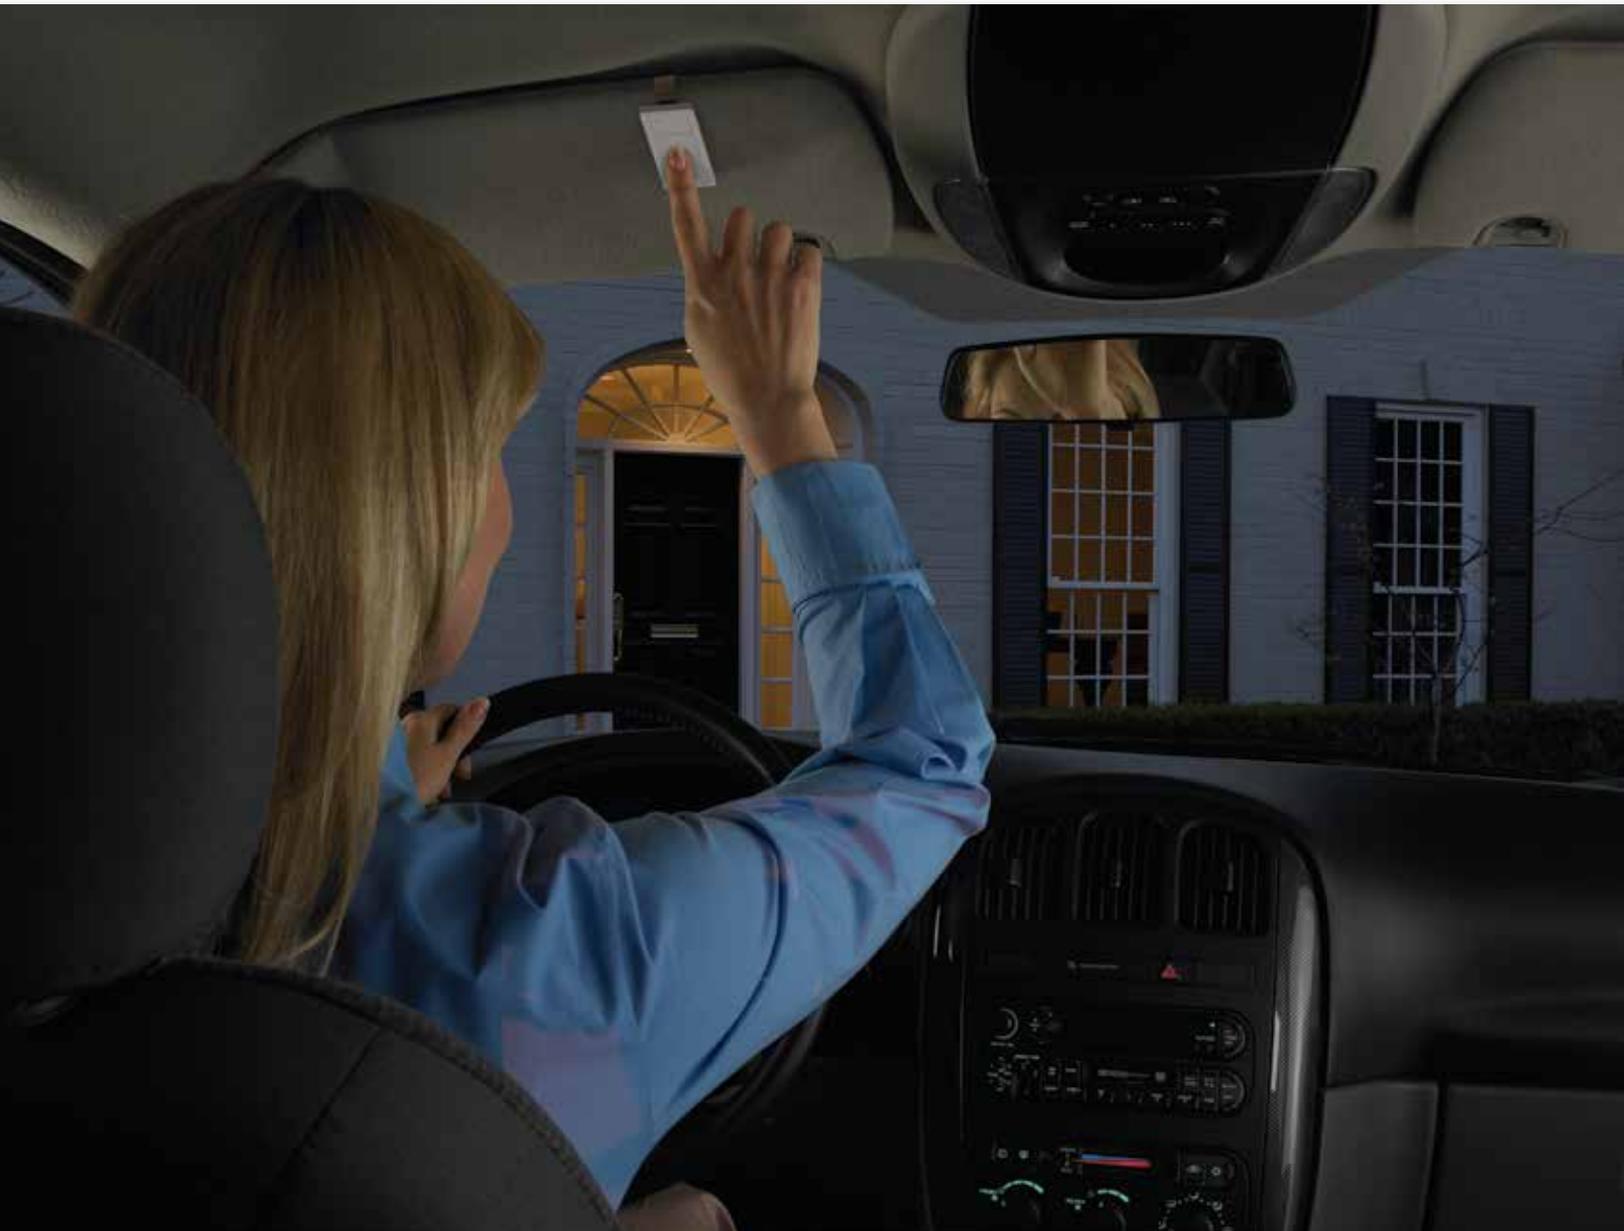
Use a Pico with a car visor clip to turn on
entry or foyer lights when coming home at
night, to create a path of light into the house.

Clear Connect Wireless (LUTRON)

The Clear Connect wireless signal works
around corners/through walls and is ultra-
reliable, which equals no callbacks for you.

… and nurseries,

Keep one close at hand to dim lights without getting up, when singing baby to sleep.

3-button Nightlight Pico with raise/lower buttons
*Moon LED shown brighter than it actually appears.

... as well as hallways.
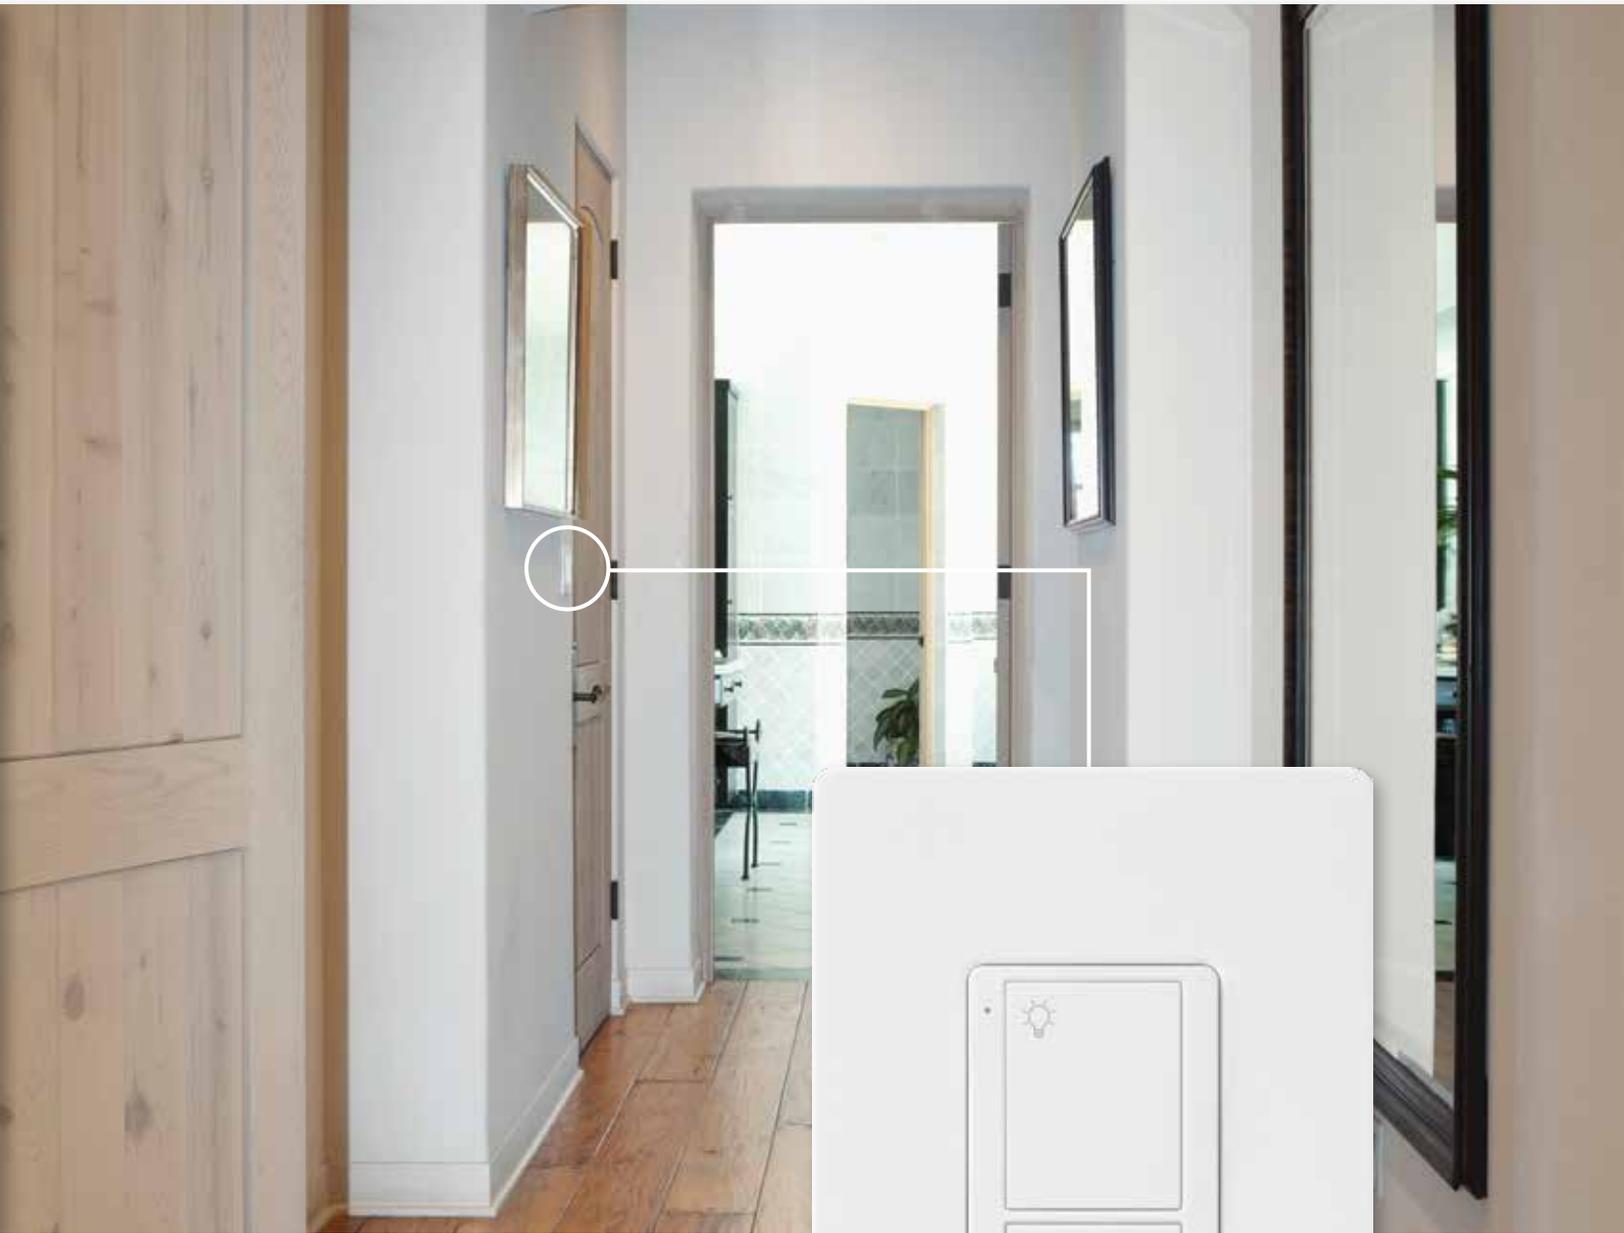
Add additional control to high traffic areas that lack a convenient control location, such as a long hallway.

2-button Lights Pico mounted in a wallplate

Pico remote control

Control lights, shades, audio, and ceiling fans. Users can create a frequently used setting, save it, and then recall it with the "Favorite" button.

Lighting control

Turn lights on

Raise light level

Favorite (preset) button

Lower light level

Turn lights off
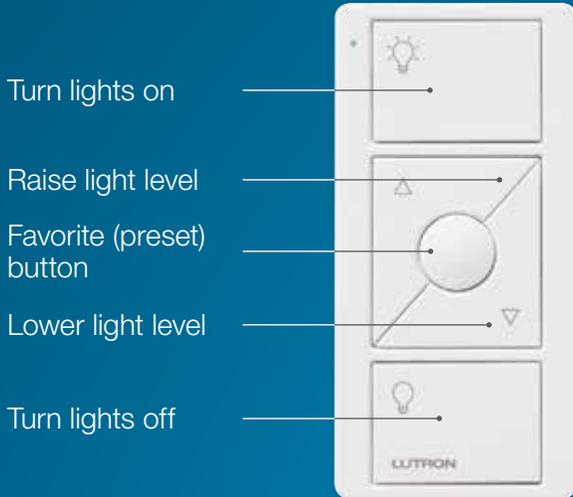
Pico remote for lights

PJ2-3BRL-GWH-L01

Shade control

Open shades

Raise shades

Favorite (preset) button

Lower shades

Close shades
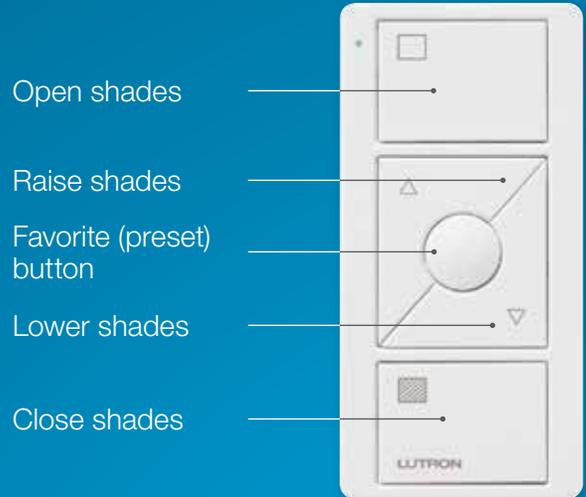
Pico remote for shades

PJ2-3BRL-GWH-S01

Audio control

Play / pause

Raise volume

Cycle favorite stations

Lower volume

Next track
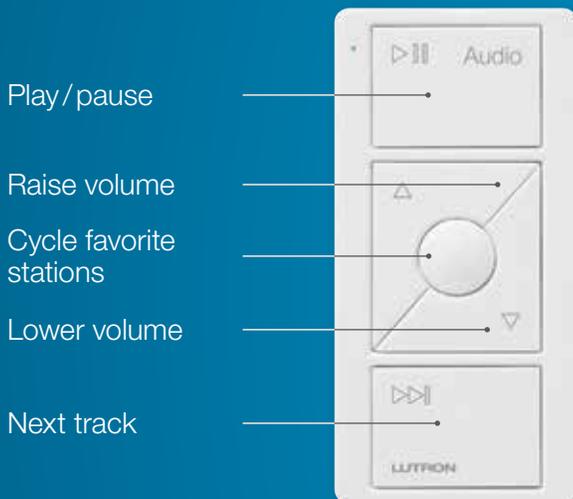
Pico remote for audio

PJ2-3BRL-GWH-A02

Fan control

Turn fan on

Raise fan speed

Favorite (preset) button

Lower fan speed

Turn fan off
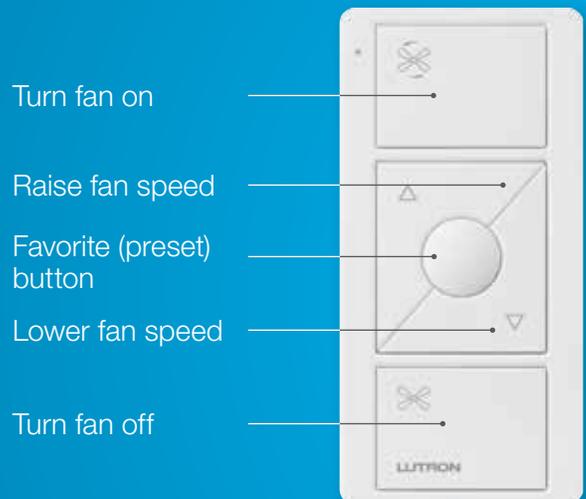
Pico remote for fans

PJ2-3BRL-GWH-F01

4-button Pico remote control

Control zones, scenes, or groups of lights and/or shades.

Zone control

Control multiple lights or shades; operates the same as a 3-button remote with raise/lower, but without a "Favorite" button

Lights model

PJ2-4B-GWH-L01

Scene control

Control lights or shades to preset levels; differs from a Pico scene keypad in that all devices associated to the top button will also be associated to the other three buttons.

Lights model

PJ2-4B-GWH-L31

2-group control

Control two groups of lights, two groups of shades, or one group of lights/one group of shades.
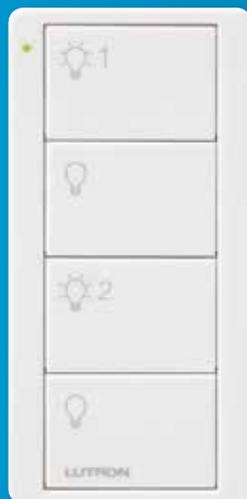
Lights model

PJ2-4B-GWH-L21

4-group toggle

Toggles four loads on and off; designed for HomeWorks QS systems
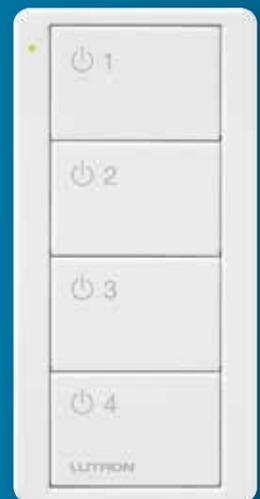
Lights model

PJ2-4B-GWH-L41

Pico scene keypads

Control lights, shades, and audio. These keypads are available pre-engraved with common scenes for typical activities in a home. They autoconfigure in the Lutron App for Caséta and RA2 Select, saving you time, and can be easily configured in the app to personalize for the homeowner.

2-button Scene control

Turn lights on to programmed level

Turn lights off

Use the "Goodnight" button to turn lights off and lower shades in other rooms of the house and the "Alert" button to turn hallway lights on and raise living room shades, all without getting out of bed.

Pico Bedside scene keypad
PJ2-2B-GWH-P02

	Ceiling lights	Table lamp	Shades
Home	100%	50%	Open
Away	Off	Off	Closed

4-button Scene control

Turn lights on to
programmed level

Turn lights on to
programmed level

Turn lights on to
programmed level

Turn lights off
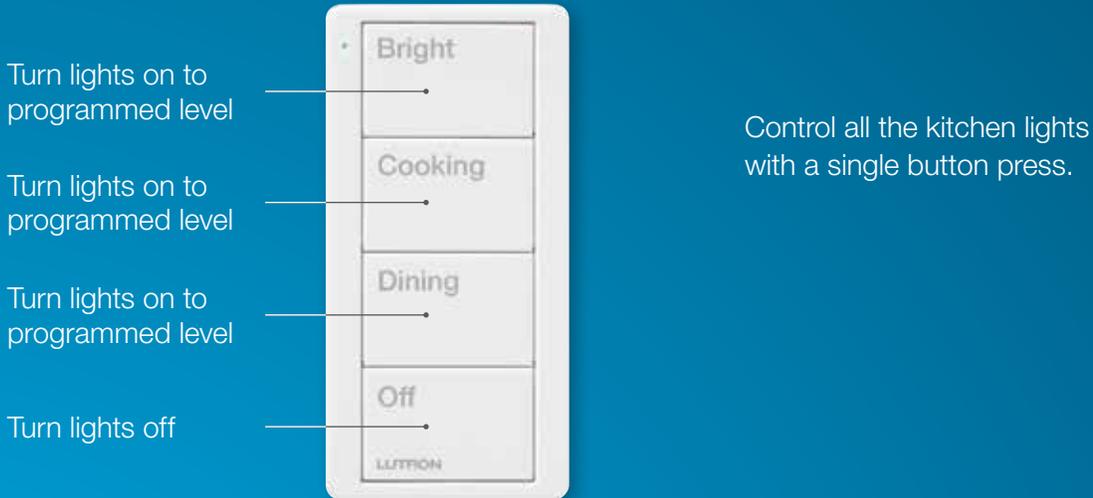
Pico Kitchen scene keypad
PJ2-4B-GWH-P02

Control all the kitchen lights
with a single button press.

	Ceiling lights	Island lights	Pendant	Shades
Bright	100%	100%	100%	Open
Cooking	100%	100%	50%	75% Open
Dining	20%	65%	50%	Half Open
Off	Off	Off	Off	Closed

Pico remote controls for lighting

Ordering Information
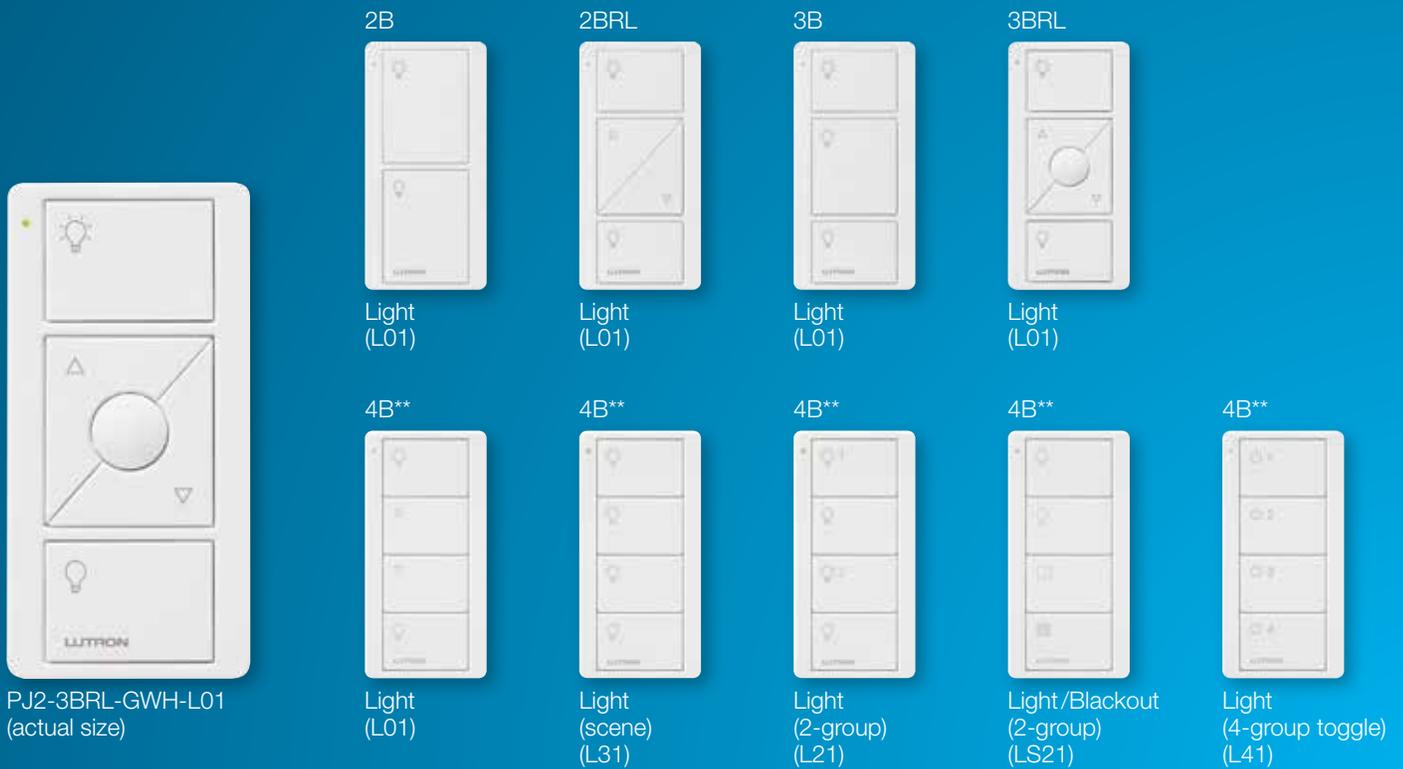
2B

Light
(L01)

2BRL

Light
(L01)

3B

Light
(L01)

3BRL

Light
(L01)

PJ2-3BRL-GWH-L01
(actual size)

4B**

Light
(L01)

4B**

Light
(scene)
(L31)

4B**

Light
(2-group)
(L21)

4B**

Light/Blackout
(2-group)
(LS21)

4B**

Light
(4-group toggle)
(L41)

Build a Pico Model Number

PJ2-_____-XXX-XXX

Button
Configuration
Code

Color
Code

Button
Marking
Code
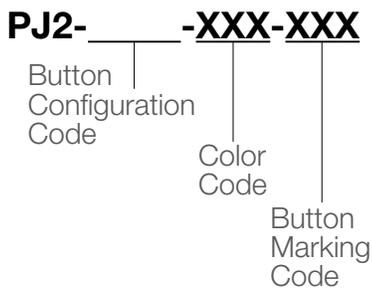
Button Configuration Codes:

Button Configurations	Code
2-button	2B
2-button with raise/lower	2BRL
3-button	3B
3-button with raise/lower	3BRL
4-button	4B

Button Marking Codes:

L01, L31, L21, LS21, L41

Color Codes:

Gloss Colors	Code	
White	GWH	□
Black	GBL	■
Ivory	GIV	▩
Light Almond	GLA	▨
White/Gray	GWG*	◪

Satin Colors	Code	
Snow	TSW	□
Biscuit	TBI	▧
Midnight	TMN	■

* On and Raise buttons are White; Preset, Lower, and Off buttons are Gray

Pico remote controls for lighting with nightlight

Ordering Information

PJN-2B-GWH-L01
(actual size)

PJN-3BRL-GWH-L01
(actual size)
* Moon LED shown brighter than it actually appears.

Build a Pico Model Number

PJN-_____-XXX-L01

Button
Configuration
Code
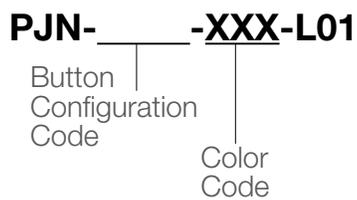
Color
Code

Button Configuration Codes:

Button Configurations	Code
2-button	2B
3-button with raise / lower	3BRL

Button Marking Code:

L01

Color Codes:

Gloss Colors	Code	
White	GWH	
Black	GBL	
Ivory	GIV	
Light Almond	GLA	

2BRL

Shade (icons)
(S01)

3BRL

Shade (icons)
(S01)

3BRL

Shade (text)
(S02)

3BRL

Blackout
(S03)

3BRL

Sheer
(S04)

3BRL

Blind
(S05)

3BRL

Skylight
(S06)

3BRL

Drapery
(S07)

3BRL

Horizontal
Sheer Blind
(S09)

4B**

Shade (icons)
(S01)

4B**

Blackout
(scene)
(S31)

4B**

Blackout
(2-group)
(S21)

PJ2-3BRL-GWH-S07
(actual size)

Build a Pico Model Number

PJ2-_____-XXX-XXX

Button
Configuration
Code

Color
Code

Button
Marking
Code
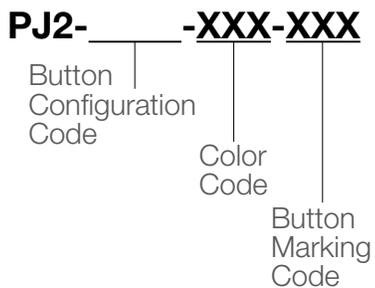
Button Configuration Codes:

Button Configurations	Code
2-button with raise/lower	2BRL
3-button with raise/lower	3BRL
4-button	4B

Button Marking Codes:

S01, S02, S03, S04, S05, S06,
S07, S09, S31, S21

Color Codes:

Gloss Colors	Code	
White	GWH	
Black	GBL	
Ivory	GIV	
Light Almond	GLA	
White/Gray	GWG*	

Satin Colors	Code	
Snow	TSW	
Biscuit	TBI	
Midnight	TMN	

** Available in White, Black, Ivory and Light Almond colors only

Pico remote control for video screens

Ordering Information

PJ2-2B-GWH-S08
(actual size)

Build a Pico Model Number

PJ2-2B-XXX-S08

Color
Code

Button Configuration Codes:

Button Configurations	Code
2-button	2B

Button Marking Code:

S08

Color Codes:

Gloss Colors	Code	
White	GWH	
Black	GBL	■
Ivory	GIV	
Light Almond	GLA	

Satin Colors	Code	
Snow	TSW	
Biscuit	TBI	
Midnight	TMN	■

13

Pico remote control for audio

Ordering Information

PJ2-3BRL-GWH-A02
(actual size)

Works with SONOS
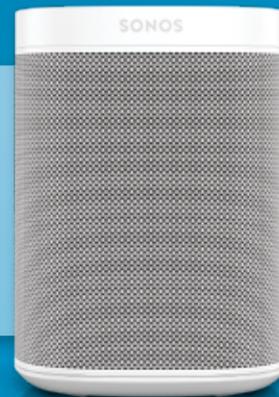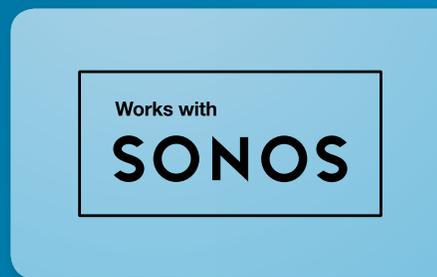
Build a Pico Model Number

PJ2-3BRL-XXX-A02

Color
Code

Button Configuration Codes:

Button Configurations	Code
3-button with raise / lower	3BRL

Button Marking Code:

A02

Color Codes:

Gloss Colors	Code	
White	GWH	☐
Black	GBL	■

Satin Colors	Code	
Snow	TSW	☐
Biscuit	TBI	▨
Midnight	TMN	■

Pico remote control for fans

Ordering Information

PJ2-3BRL-GWH-F01
(actual size)

Build a Pico Model Number

PJ2-3BRL-XXX-F01

Color
Code

Button Configuration Codes:

Button Configurations	Code
3-button with raise/lower	3BRL

Button Marking Code:

F01

Color Codes:

Gloss Colors	Code	
White	GWH	⬜
Black	GBL	⬛
Ivory	GIV	🟧
Light Almond	GLA	⬜

Satin Colors	Code	
Snow	TSW	⬜
Biscuit	TBI	⬜
Midnight	TMN	⬛

Pico scene keypads

Ordering Information

Entry	Bedside	Family room	Kitchen	Any Room
Home / Away	Alert / Goodnight	Bright / Entertain / Movie / Off	Bright / Cooking / Dining / Off	Bright / Entertain / Relax / Off
PJ2-2B-GWH-P01 (actual size)	PJ2-2B-GWH-P02 (actual size)	PJ2-4B-GWH-P01 (actual size)	PJ2-4B-GWH-P02 (actual size)	PJ2-4B-GWH-P03 (actual size)

Build a Pico Model Number

PJ2-_____-XXX-XXX

Button Configuration Code

Color Code

Button Marking Code
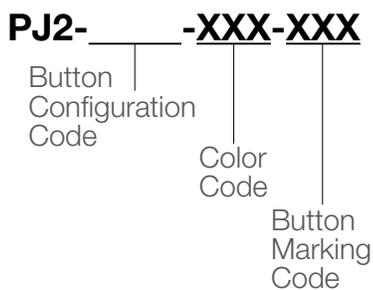
Button Configuration Codes:

Button Configurations	Code
2-button	2B
4-button	4B

Button Marking Codes:

P01, P02, P03

Color Codes:

Gloss Colors	Code	
White	GWH	
Black	GBL	■
Ivory	GIV	
Light Almond	GLA	

Satin Colors	Code	
Snow	TSW	
Biscuit	TBI	
Midnight	TMN	■

Custom 4-button Pico remote controls

Ordering Information: lutron.com/custompico

Zone Controls

PJ2-4B-GWH-EL1
(lights example)

| Lights On |
| Raise |
| Lower |
| Lights Off |

PJ2-4B-GWH-ES1
(shades example)

| Full Up |
| Raise |
| Lower |
| Full Down |

Scene Controls

PJ2-4B-GWH-EL2
(lights example)

| Breakfast |
| Lunch |
| Dinner |
| All Off |
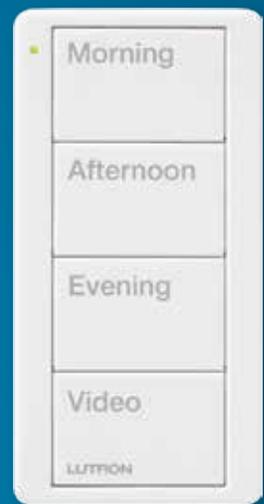
PJ2-4B-GWH-ES2
(shades example)

| Morning |
| Afternoon |
| Evening |
| Video |

Build a Pico Model Number

PJ2-4B-XXX-XXX

Color Code

Button Marking Code

Button Configuration Codes:

Button Configurations	Code
4-button	4B

Button Marking Codes:

EL1, EL2, ES1, ES2

Color Codes:

Gloss Colors	Code	
White	GWH	
Black	GBL	■
Ivory	GIV	
Light Almond	GLA	

Satin Colors	Code	
Snow	TSW	
Biscuit	TBI	
Midnight	TMN	■

17

L-PED2-WH

L-PED1-WH

L-PED3-WH

Pedestal Model Number

L-PED<u>X</u>-<u>XX</u>

Capacity
Code
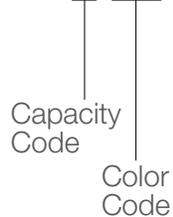
Color
Code

Color Codes:

Gloss Colors	Code	
White	WH	
Black	BL	■

Single, double, and triple pedestals available

** Available in White and Black colors only

Claro wallplate
(CW-1-WH)

- Provides a clean, screwless look
- Available in 1-6 openings

Wallplate bracket
(PICO-WBX-ADAPT)

- Use to surface-mount a Pico to a wall
- Required when mounting a Pico over a 120V wallbox

Car visor clip
(PICO-CAR-CLIP)

- Insert the Pico into the clip for convenient control from your car

---

Gloss Wallplate Model Number

CW-__-XX

Openings

Color Code

Satin Wallplate Model Number

SC-__-XX

Openings
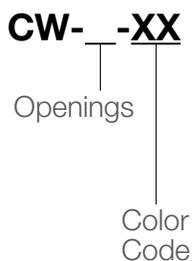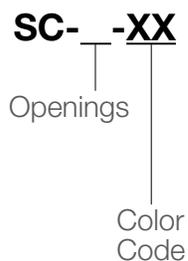
Color Code

Wallplate Color Codes:

Gloss Colors	Code	
White	WH	
Black	BL	
Ivory	IV	
Light Almond	LA	

Satin Colors	Code	
Snow	SW	
Biscuit	BI	
Midnight	MN	

19

Pico remote controls — flexibility

You can use a Pico with Lutron standalone dimmers and shades, as well as with the following Lutron systems

Caséta

Pico remote, Caséta dimmer, and Serena shades

RA2 Select
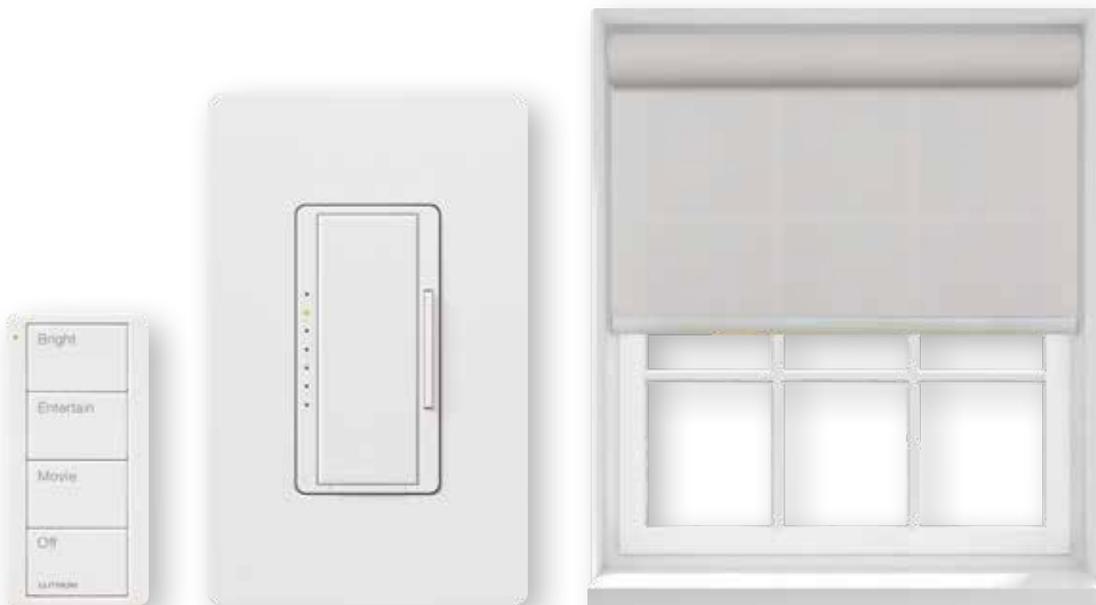
Pico scene keypad, Maestro dimmer, and Sivoia QS Triathlon shades

RadioRA 2

Pico remote, seeTouch keypad, and Sivoia QS Wireless shades

HomeWorks QS

Pico remote, Palladiom keypad, and Palladiom shades

lutron.com/pico
Lutron Electronics Co., Inc., 7200 Suter Road, Coopersburg, PA 18036-1299

Customer Assistance
Online: lutron.com/help | Email: support@lutron.com | Phone: 1.844.LUTRON1 (588.7661) — includes 24/7 technical support

LUTRON