

MIC7000 IP67 Connector Kit

MIC-IP67-5PK



BOSCH


en Quick Installation Guide

1 Install a MIC7000 IP67 Connector Kit

This kit protects the connections of as many as 5 MIC7000 cameras against dust or moisture, to an ingress rating of IP67. Required for MIC7000 cameras mounted directly to a surface (instead of to a MIC-DCA or to a MIC wall mount).

Parts List



Components for RJ45 connection

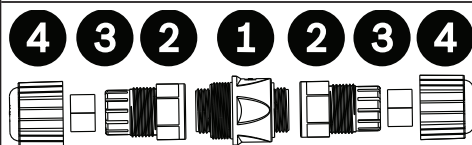

Qty	Part	
5	RJ45 couplers	1
10	RJ45 seal housings	2
10	RJ45 silicone seals	3
10	RJ45 end caps / nuts	4

Note: You may need to disassemble the assembly of the RJ45 connector before installation.

Components for Wire cables

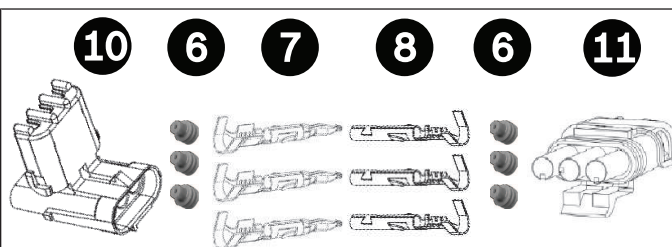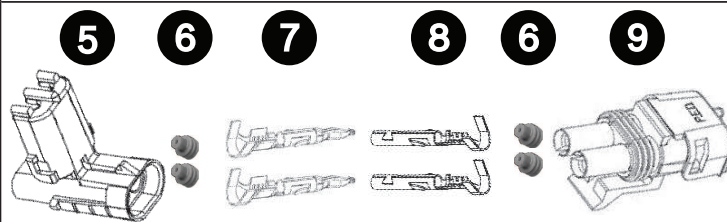

Qty	Part	
50	Cable seals	6
25	Male terminals (used with Shroud housings)	7
25	Female terminals (used with Tower housings)	8

5	2-pin female (Shroud) Housings (for 24 VAC wires)	5
5	2-pin male (Tower) Housings (for 24 VAC wires)	9
5	3-pin female (Shroud) Housings (for RS-485 wires)	10
5	3-pin male (Tower) Housings (for RS-485 wires)	11

Additional Tools Required

1	Wire stripping tool suitable for wires 0.2 mm – 0.35 mm (AWG 28 – 22)
1	Wire crimping tool (such as the Weather Pack crimper from Delphi)

Optional Tools


1	Terminal extractor tool (such as the Weather Pack Terminal Extractor from Delphi)
1	Silicone sealant

Follow the installation steps in the MIC7000 Operation Manual until you are ready to make the electrical connections, and then follow the steps here to complete installation. **Note:** Graphics are not to scale.


**Notice!**

Assemble connectors on all wires even if you plan to use only 24 VAC or only RS-485!


Moisture could enter unsealed holes in the connector housings and void their ingress rating of IP67.

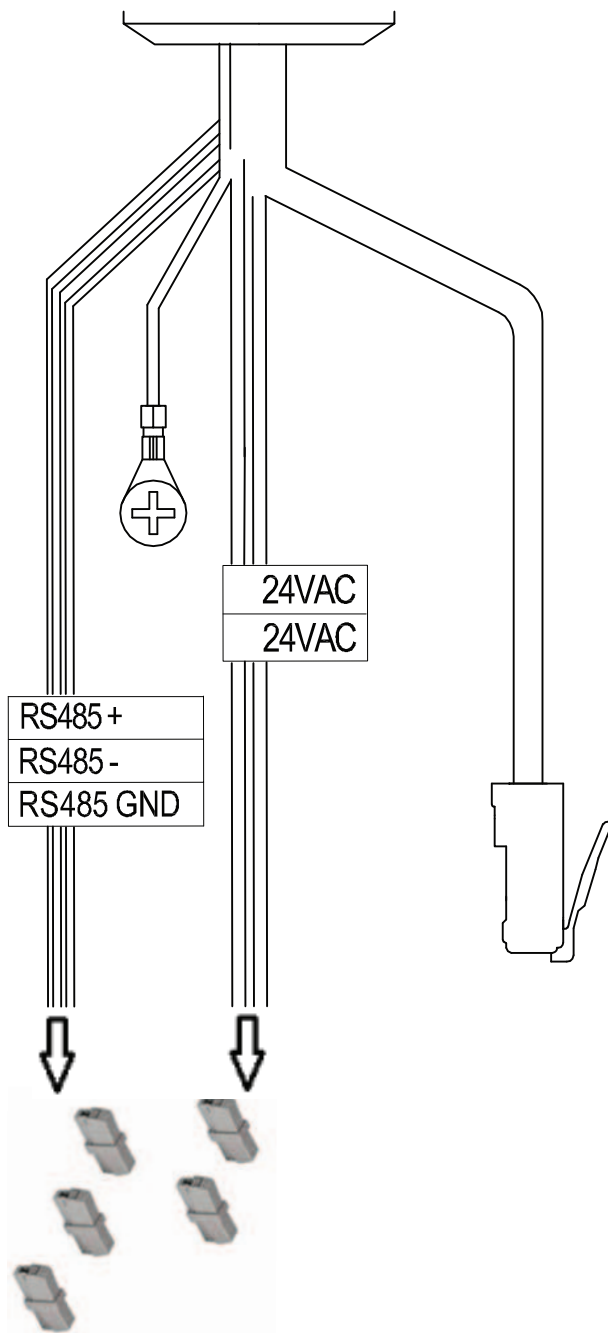


1. Remove the five (5) quick-connect connectors from the ends of the cables at the base of the camera.

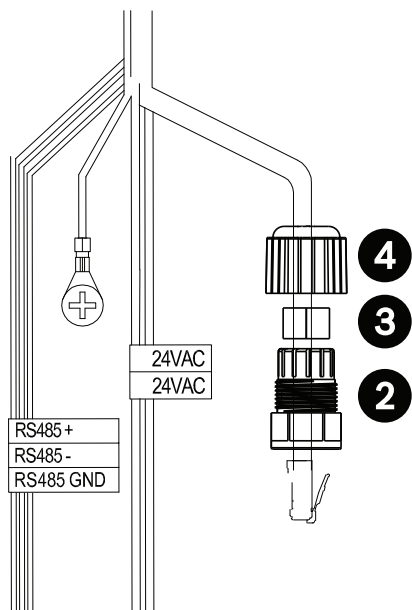


2. Slide one of each of the following pieces onto the RJ45 connector of the camera in sequence: end cap / nut (item 4), silicone seal (item 3), seal housing (item 2).

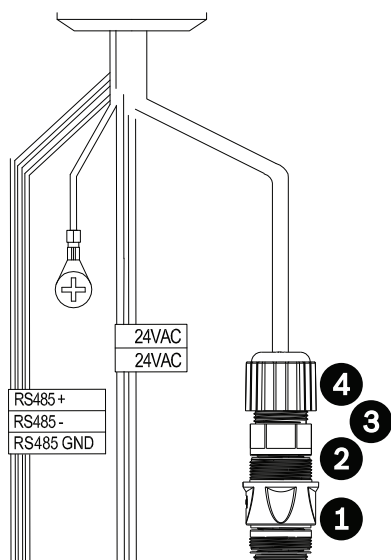

3. Connect the RJ45 connector of the camera to the RJ45 coupler (item 1). Connect item 2 to item 1. Slide item 3 into item 2. Connect item 4 to item 2.

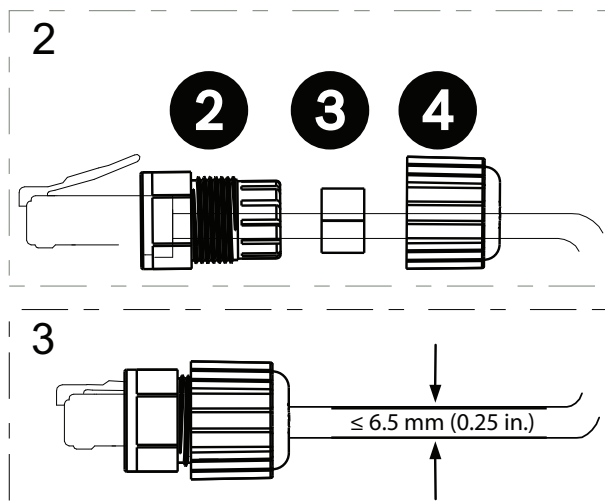


4. Repeat steps 2 and 3 for the Cat5e/Cat6e cable from the head-end IP network. **Note:** An RJ45 cable with a large sheath may not fit completely into the RJ45 coupler. Bosch recommends using a cable *without* sheathing.

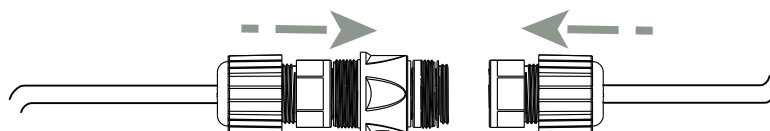

5. Tighten the two assemblies. The RJ45 connectors of the camera and of your network are now protected to an ingress rating of IP67.


Note: The following steps are the same for both the 24 VAC power wires (0.2 mm² / AWG 24) and the RS-485 cables (0.35 mm² / AWG 22).

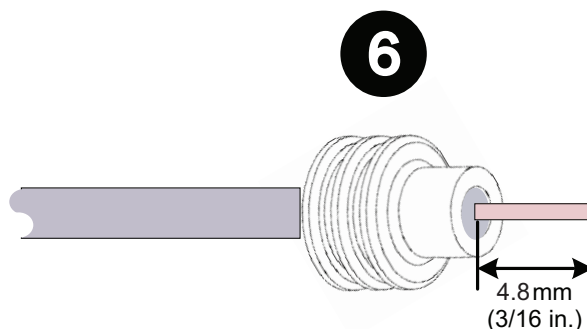

6. Ensure that wires are stripped to 4.8 mm (3/16 in.). Note: Optimum wire size is 0.2 mm - 0.35 mm (24 AWG - 22 AWG).

7. Slide the seal (item 6) onto the wire from the MIC7000 camera and position it at the edge of the stripped wire.

8. Position the assembly of the stripped wire and the seal into the terminal (item 7 / 8) and crimp.

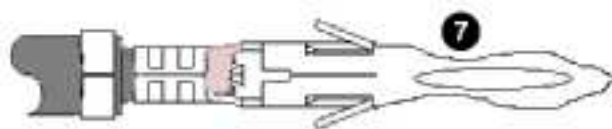

9. For terminals that will **not** include wires from the head-end, crimp **only a silicone seal** (item 6) into each terminal (item 7 / 8) to ensure that all connections of the camera are protected to an ingress rating of IP67.

10. Inspect the crimp. If it passes inspection, then proceed to the next step. If it does not, then repair as needed.

11. Slide the group of crimped wires into the back of the housing (item 5 / 9, item 10 / 11).

Note: When inserted properly, the terminal clicks into place; you cannot pull it out easily.

Note: To remove the terminal at this point, you need a terminal extractor tool (user-supplied).

Note: For housings without head-end wires, Bosch recommends that you apply a small amount of silicone sealant to the holes of the housing.

12. Repeat steps 6 – 11 for all assemblies, for the connections from the camera and for the wires to the appropriate power supply and/or alarm connections.

13. Close the covers of each housing.

14. Connect the appropriate male housing to the female housing. The 24 VAC wires and the RS-485 wires of the camera and of your network are now protected to an ingress rating of IP67.

Bosch Sicherheitssysteme GmbH

Robert-Bosch-Ring 5

85630 Grasbrunn

Germany

www.boschsecurity.com

© Bosch Sicherheitssysteme GmbH, 2016

Bosch Security Systems, Inc

1706 Hempstead Road

Lancaster, PA, 17601

USA