

Access & Power Integration

T2HWK7F8

8 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2 enclosure with THW2 Altronix/Honeywell backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) ACM8 - Fused Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) PDS8 - Dual Input Fused Power Distribution Module

T3HWK75F16

16 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove3 enclosure with THW3 Altronix/Honeywell backplane and THWD2 Honeywell door backplane
- One (1) eFlow104NB - Power Supply/Charger
- One (1) eFlow102NB - Power Supply/Charger
- Two (2) ACM8 - Fused Access Power Controllers
- One (1) PD8UL - Fused Power Distribution Module
- One (1) RSB2* - Rocker Switch Bracket with Two (2) Rocker Switches (Not evaluated by UL)

All components of these Trove kits are UL Listed sub-assemblies.

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide



More than just power.™

All registered trademarks are property of their respective owners.

Rev. THWK_042419

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____

Overview:

Altronix Trove Honeywell kits are pre-assembled and consist of Trove enclosures/backplanes with factory installed Altronix power supply/chargers and sub-assemblies. Both kits accommodate a variety of Honeywell modules for up to eight (T2HWK7F8) or sixteen (T3HWK75F16) doors in a single enclosure.

Configuration Chart:

Altronix Model Number	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	120VAC 60Hz Input Current (A)	Maximum Supply Current for Main and Aux. Outputs on Power Supply board and ACM8 Access Power Controllers' outputs	Nominal DC Output Voltage		Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Additional Fused Outputs	ACM8 Board Input Fuse Rating	ACM8 Board Output Fuse Rating	PDS8 Board Input Fuse Rating	PDS8 Board Output Fuse Rating	PD8UL Board Output Fuse Rating
					[DC]	[Aux]							
					Output Range (VDC)	Output Range (VDC)							
T2HWK7F8	6.3A/250V	15A/32V	4.5	24VDC @ 9.7A	20.17-26.4	20.28-26.4	8	8	10A/250V	2.5A/250V	10A/32V	3A/32V	-
T3HWK75F16	eFlow104NB 6.3A/ 250V	15A/32V	7.5	24VDC @ 9.4A	20.17-26.4	20.28-26.4	16	8	10A/250V	2.5A/250V	-	-	3.5A/250V
	12VDC @ 10A			9.7-13.2	10.03-13.2								


Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.




1. Remove backplane from enclosure. Do not discard hardware.

If your application requires a raised backplane, re-mount it using metal spacers and screws (provided).

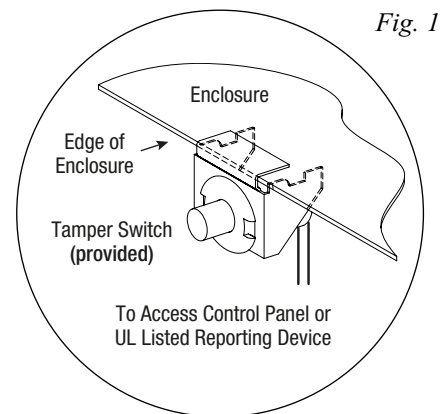2. Mark and predrill holes in the wall to line up with the top two/three keyholes in the enclosure. Install two/three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two/three upper screws; level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the two/three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (Fig. 1, pg. 2).
Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Mount Honeywell modules to backplane(s), refer to pages 3, 4, 5.
5. Refer to the eFlow Power Supply/Charger Installation Guide for eFlow104NB, eFlow102NB and corresponding Sub-Assembly Installation Guides for ACM8, PDS8, VR6 and PD8UL for further installation instructions.



Hardware:

 Nylon Spacer |  5/16" Pan Head Screw |  Lock Nut



T2HWK7F8: Installation Instructions for Honeywell Access Controllers

1. Fasten spacers (provided) into pem configuration (A) or (B) of backplane (Fig. 2, pg. 3).
2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 2a, pg. 3).
3. Mount backplane to enclosure with hardware.

Honeywell ProWatch/WinPak Access Controller Position Chart for the Following Models:

Honeywell Board	Pem Mounting
3200 Series or WIN-PAK Series	(A)
PW6K1ICE or PW6K1R1E	(B)

Fig. 2

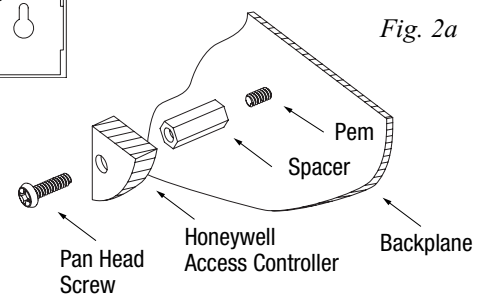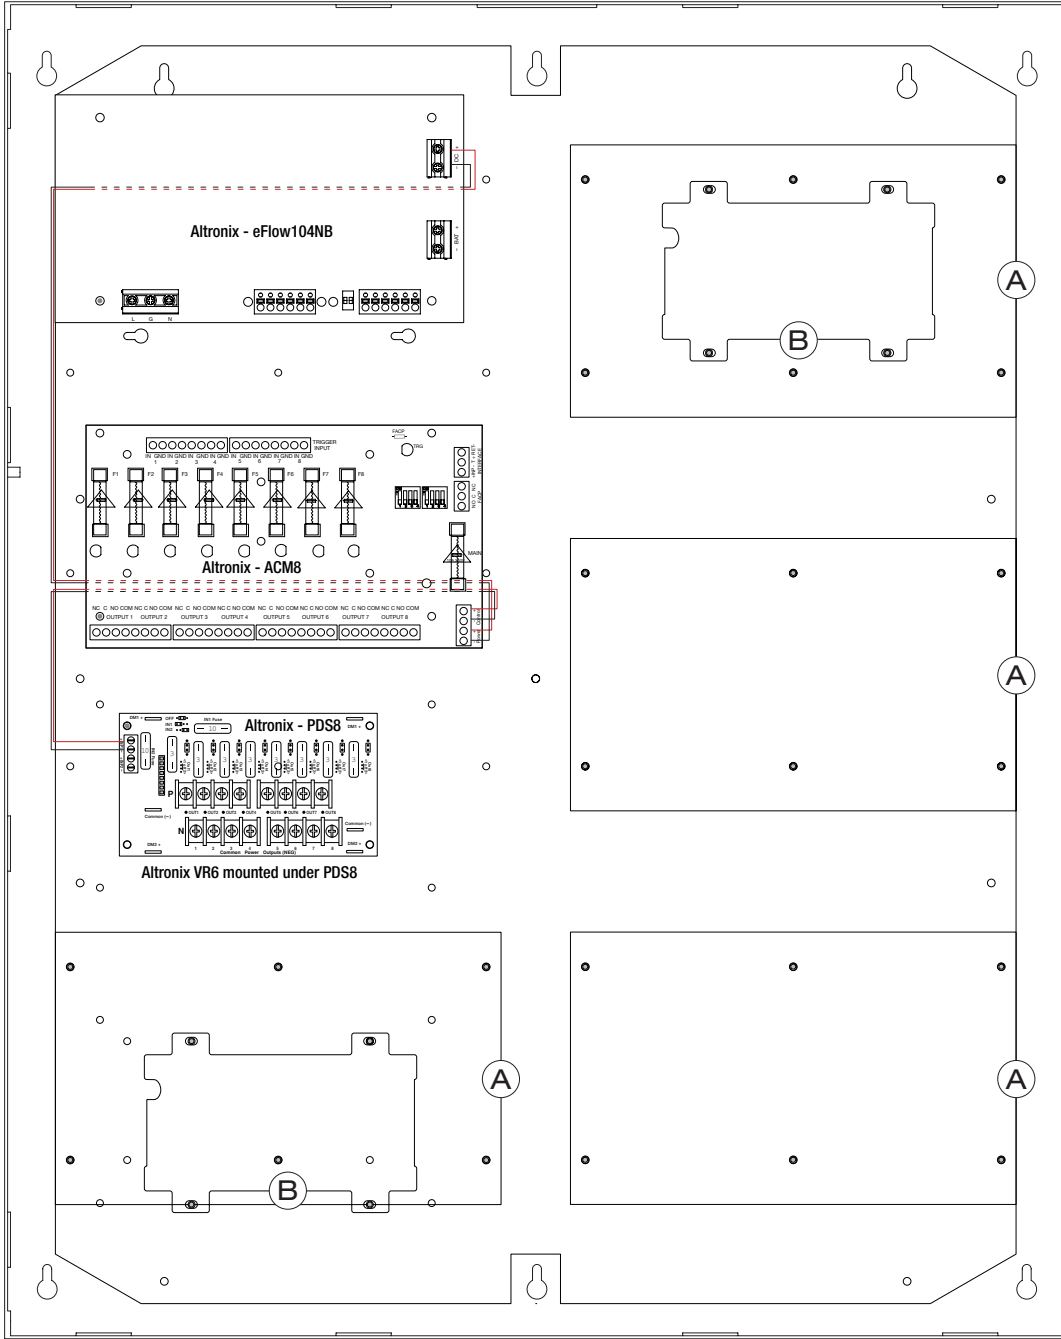

T3HWK75F16: Installation Instructions for Honeywell Access Controllers

1. Fasten spacers (provided) into pem configuration (A) or (B) of backplane (Fig. 3, pg. 4).
2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 3a, pg. 4).
3. Mount backplane to enclosure with hardware.

Honeywell ProWatch/WinPak Access Controller Position Chart for the Following Models:

Honeywell Board	Pem Mounting
3200 Series or WIN-PAK Series	(A)
PRO22MX8	(B)

Fig. 3

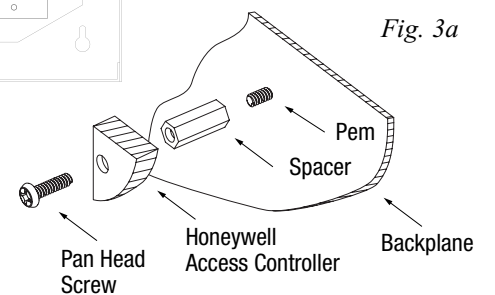
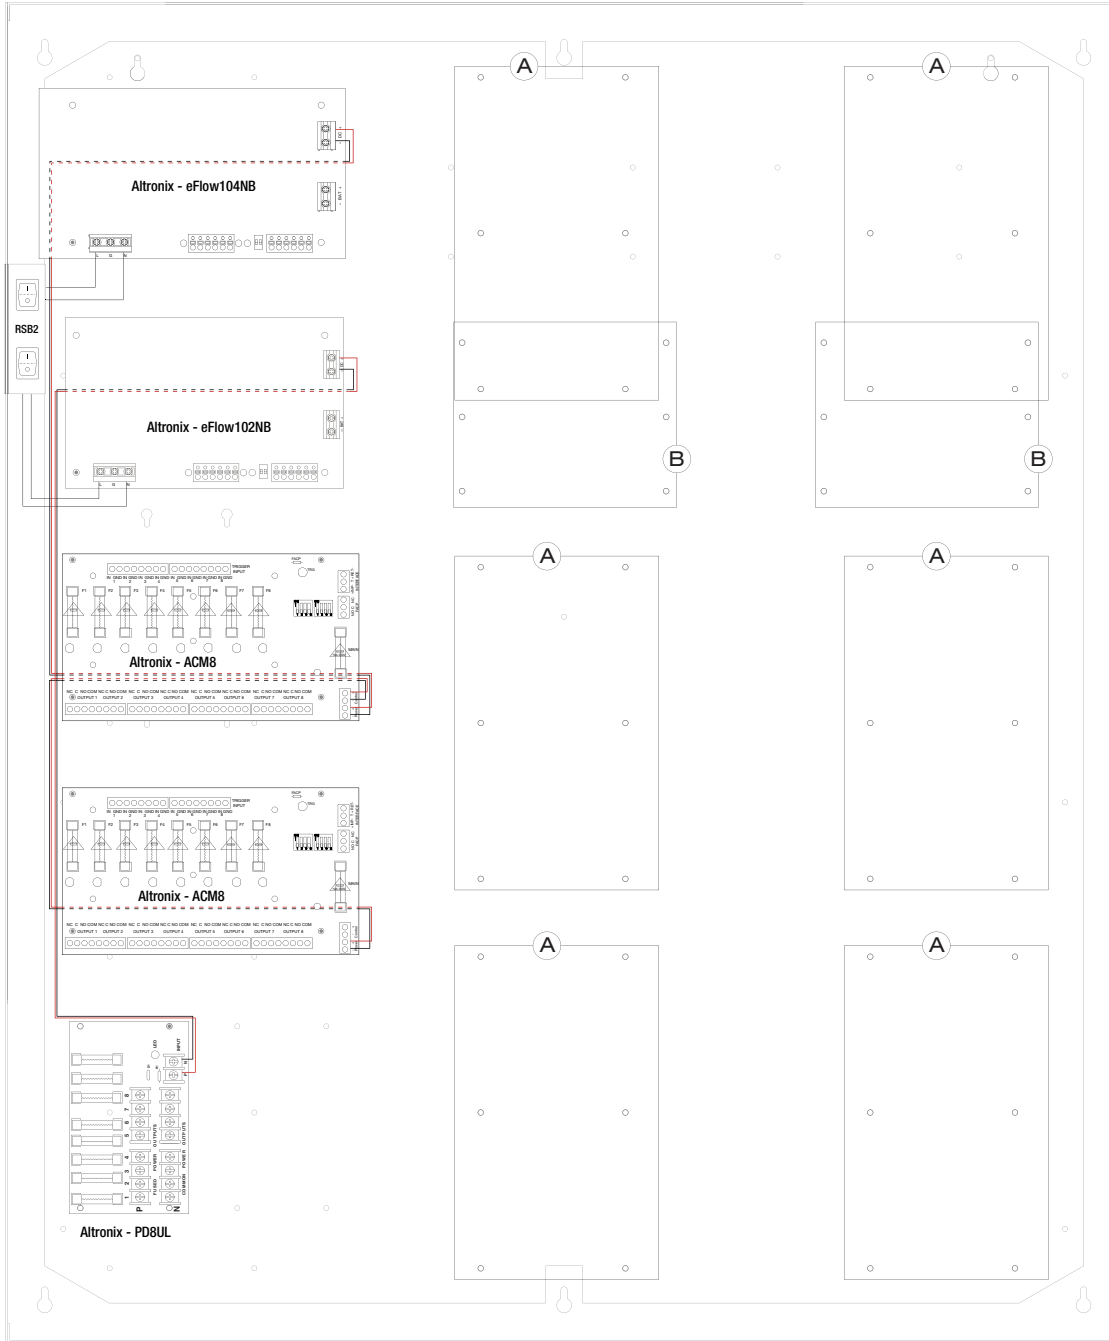


Fig. 3a

T3HWK75F16: THWD2 (Door Backplane) Configuration of Honeywell ProWatch/WinPak Boards:



Honeywell ProWatch/WinPak Access Controllers:

1. Fasten spacers (provided) into pem configuration (A) or (B) of backplane (Fig. 4, pg. 5).
2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 4a, pg. 5).
3. Mount backplane to enclosure with hardware.

Honeywell ProWatch/WinPak Access Controller Position Chart for the Following Models:


Honeywell Board	Pem Mounting
3200 Series or WIN-PAK Series	(A)
PRO22MX8	(B)

Fig. 4

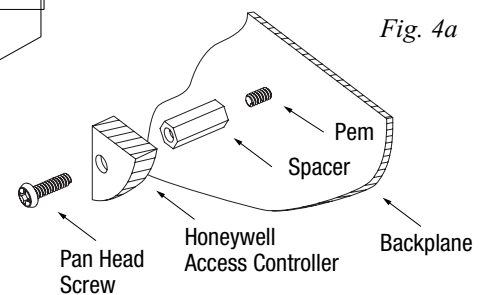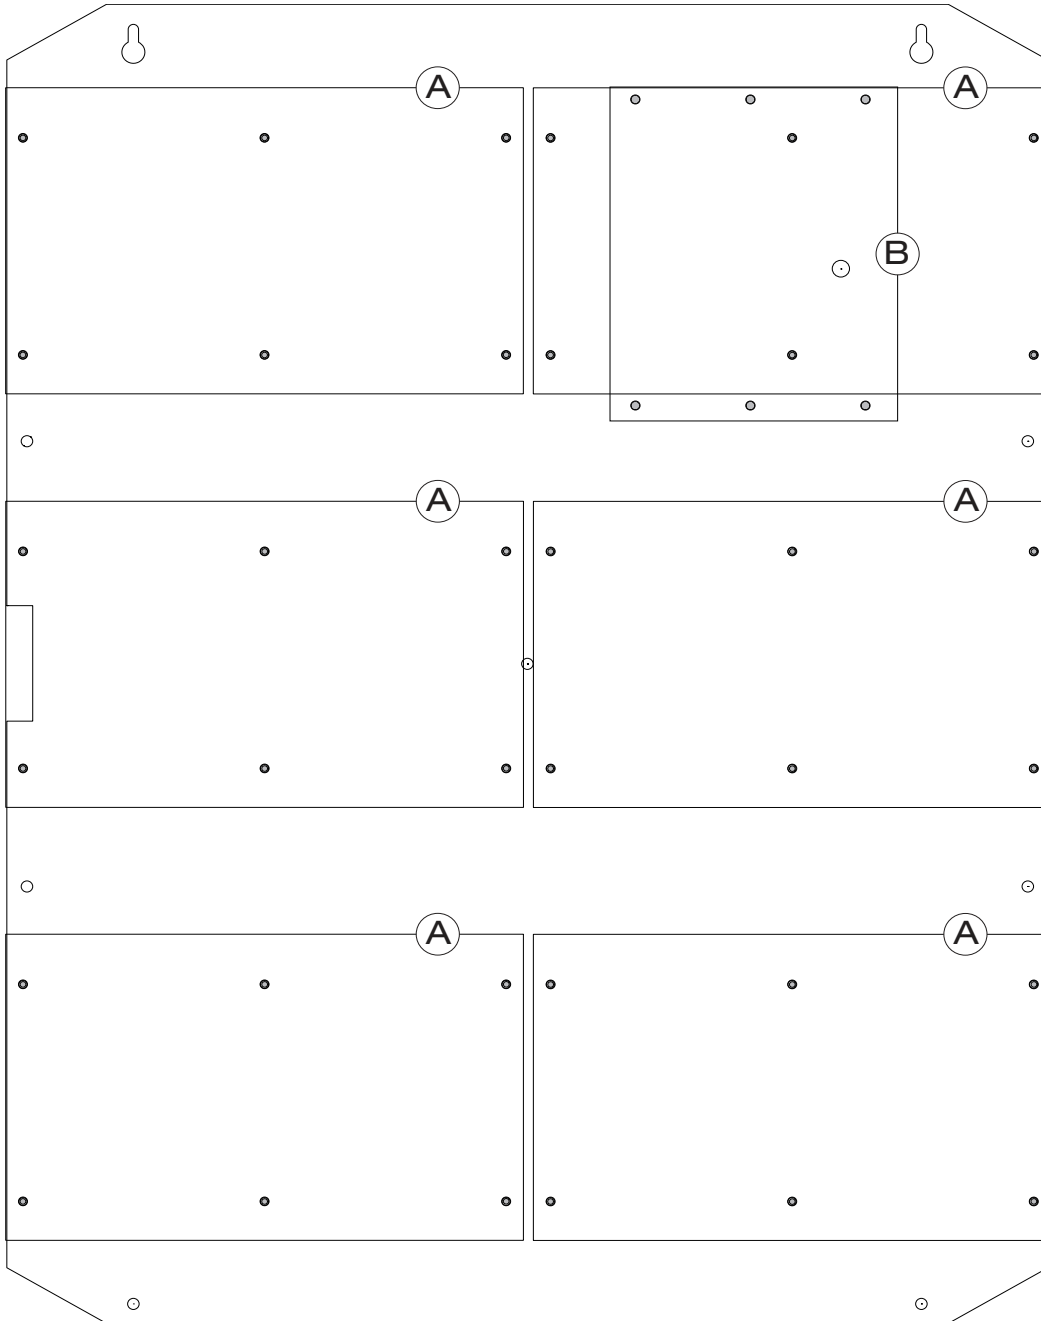



eFlow Power Supply/Chargers can be Controlled and Monitored while Reporting Power/Diagnostics from Anywhere over the Network...

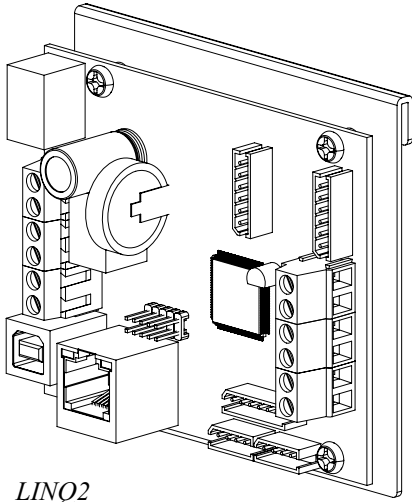

LINQ™


LINQ2 - Network Communication Module

LINQ2 provides remote IP access to real-time data from eFlow power supply/chargers to help keep systems up and running at optimal levels. It facilitates fast and easy installation and set-up, minimizes system downtime, and eliminates unnecessary service calls, which helps reduce Total Cost of Ownership (TCO) - as well as creating a new source of Recurring Monthly Revenue (RMR).


Features:

- UL Listed in the U.S. and Canada.
- Local or remote control of up to (2) two Altronix eFlow power output(s) via LAN and/or WAN.
- Monitor real time diagnostics: DC output voltage, output current, AC & battery status/service, input trigger state change, output state change and unit temperature.
- Access control and user management: Restrict read/write, Restrict users to specific resources
- Two (2) integral network controlled Form "C" Relays.
- Three (3) programmable input triggers: Control relays and power supplies via external hardware sources.
- Email and Windows Dashboard notifications
- Event log tracks history.
- Secure Socket Layer (SSL).
- Programmable via USB or web browser - includes operating software and 6 ft. USB cable.

LINQ2 Mounts Inside any Trove Enclosure

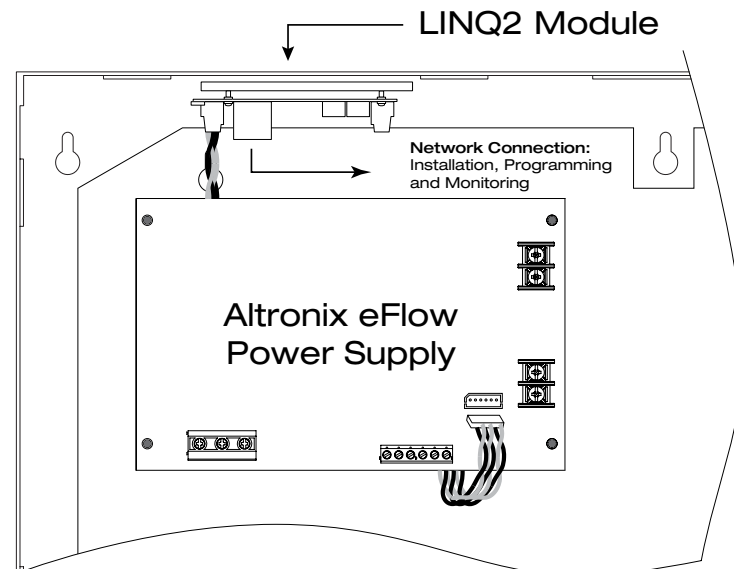

T3HWK75F16 (Trove3) Enclosure Dimensions (H x W x D approximate):
 36.12" x 30.125" x 7.06" (917.5mm x 768.1mm x 179.3mm)

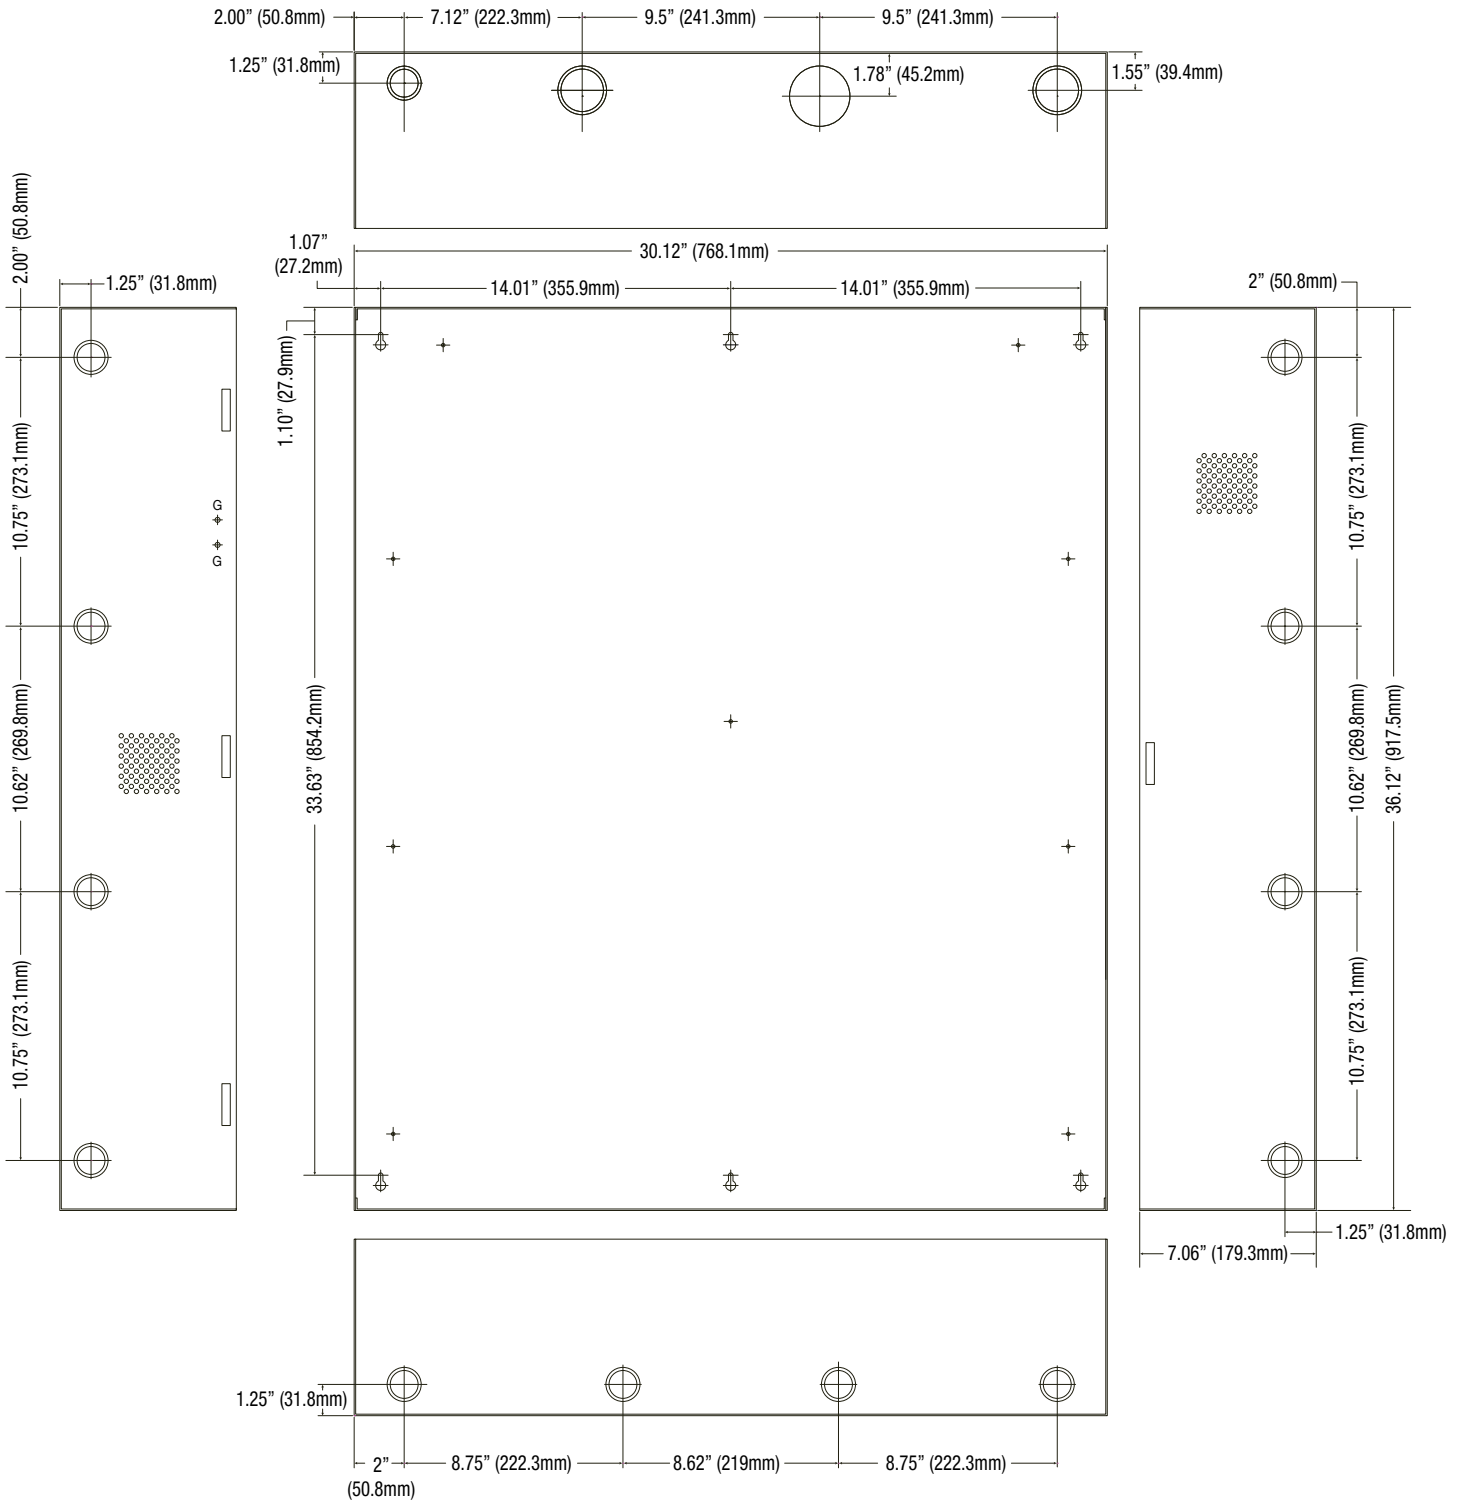

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
 web site: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty | Made in U.S.A.
 IITrove Honeywell Kits

J05T

