



Access & Power Integration

Altronix/Honeywell ProWatch/WinPak Kits

Models Include:

T2HWK7F8V

8 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2 enclosure with THW2 Altronix/Honeywell backplane
- One (1) eFlow104NBV - Power Supply/Charger
- One (1) ACM8 - Fused Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) PDS8 - Dual Input Fused Power Distribution Module

T3HWK75F16V

16 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove3 enclosure with THW3 Altronix/Honeywell backplane and THWD2 Honeywell door backplane
- One (1) eFlow104NBV - Power Supply/Charger
- One (1) eFlow102NBV - Power Supply/Charger
- Two (2) ACM8 - Fused Access Power Controllers
- One (1) PD8UL - Fused Power Distribution Module
- One (1) RSB2 - Rocker Switch Bracket with Two (2) Rocker Switches

T2HWK7F8DV

8 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove2 enclosure with THW2 Altronix/Honeywell backplane
- One (1) eFlow104NBV - Power Supply/Charger
- One (1) ACM8CB - PTC Access Power Controller
- One (1) VR6 - Voltage Regulator
- One (1) PDS8CB - Dual Input PTC Power Distribution Module

T3HWK75F16DV

16 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove3 enclosure with THW3 Altronix/Honeywell backplane and THWD2 Honeywell door backplane
- One (1) eFlow104NBV - Power Supply/Charger
- One (1) eFlow102NBV - Power Supply/Charger
- Two (2) ACM8CB - PTC Access Power Controllers
- One (1) PD8ULCB - PTC Power Distribution Module
- One (1) RSB2 - Rocker Switch Bracket with Two (2) Rocker Switches

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide



All registered trademarks are property of their respective owners.

Rev. THWVK_051221

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____



More than just power.™

Overview:

Altronix Trove Honeywell kits are pre-assembled and consist of Trove enclosures/backplanes with factory installed Altronix power supply/chargers and sub-assemblies. Both kits accommodate a variety of Honeywell modules for up to eight (T2HWK7F8(D)V) or sixteen (T3HWK75F16(D)V) doors in a single enclosure.

Configuration Chart:


Altronix Model Number	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	220VAC 50/60Hz Input Current (A)	Maximum Supply Current for Main and Aux. Outputs on Power Supply board and ACM8(CB) Access Power Controllers' outputs	Nominal DC Output Voltage		Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Additional Fused Outputs	ACM8(CB) Board Input Fuse Rating	ACM8(CB) Board Output Fuse (PTC) Rating	PDS8(CB) Board Input Fuse (PTC) Rating	PDS8(CB) Board Output Fuse(PTC) Rating	PD8UL(CB) Board Output Fuse (PTC) Rating
					[DC]	[Aux]							
					Output Range (VDC)	Output Range (VDC)							
T2HWK7F8V	6.3A/250V	15A/32V	2.7	24VDC @ 9.7A	20.17-26.4	20.28-26.4	8	8	10A/250V	2.5A/250V	10A/32V	3A/32V	—
T2HWK7F8DV										2.5A	9A	2.5A	—
T3HWK75F16V	eFlow104NBV 6.3A/ 250V	15A/32V	4.8	24VDC @ 9.4A	20.17-26.4	20.28-26.4	16	8	10A/250V	2.5A/250V	—	—	3.5A/250V
T3HWK75F16DV	eFlow102NBV 5A/ 250V			12VDC @ 10A	9.7-13.2	10.03-13.2				2.5A			2.5A

Installation Instructions:




Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
If your application requires a raised backplane, re-mount it using metal spacers and screws (provided).
2. Mark and predrill holes in the wall to line up with the top two/three keyholes in the enclosure. Install two/three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two/three upper screws; level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the two/three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*).
Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Mount Honeywell modules to backplane(s), refer to *pages 3, 4, 5*.
5. Refer to the *eFlow Power Supply/Charger Installation Guide* for eFlow104NBV, eFlow102NBV and corresponding *Sub-Assembly Installation Guides* for ACM8, PDS8, VR6 and PD8UL for further installation instructions.

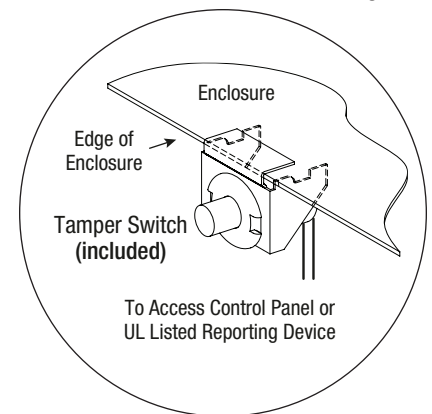Fig. 1



Hardware:

 Nylon Spacer |  5/16" Pan Head Screw |  Lock Nut

T2HWK7F8(D)V: Installation Instructions for Honeywell Access Controllers

1. Fasten spacers (provided) into pem configuration (A) or (B) of backplane (Fig. 2, pg. 3).
2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 2a, pg. 3).
3. Mount backplane to enclosure with hardware.

Honeywell ProWatch/WinPak Access Controller Position Chart for the Following Models:

Honeywell Board	Pem Mounting
3200 Series or WIN-PAK Series	(A)
PW6K1ICE or PW6K1R1E	(B)

Fig. 2

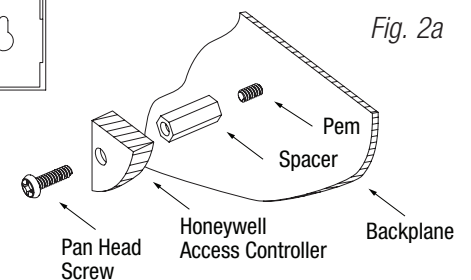
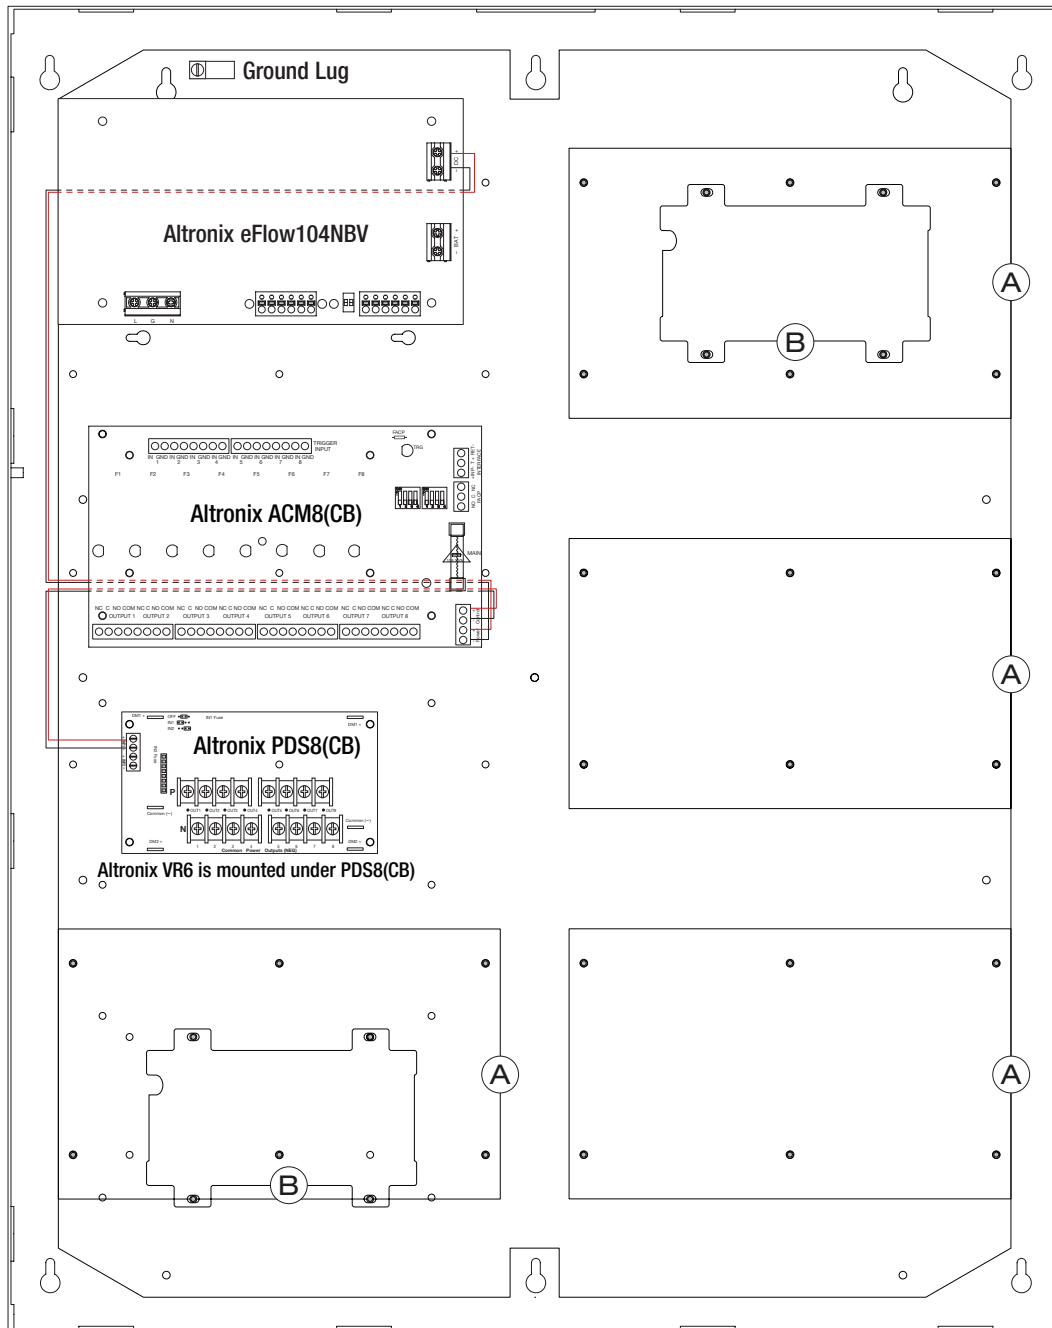


Fig. 2a

T3HWK75F16(D)V: Installation Instructions for Honeywell Access Controllers

1. Fasten spacers (provided) into pem configuration (A) or (B) of backplane (Fig. 3, pg. 4).
2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 3a, pg. 4).
3. Mount backplane to enclosure with hardware.

Honeywell ProWatch/WinPak Access Controller Position Chart for the Following Models:

Honeywell Board	Pem Mounting
3200 Series or WIN-PAK Series	(A)
PRO22MX8	(B)

Fig. 3

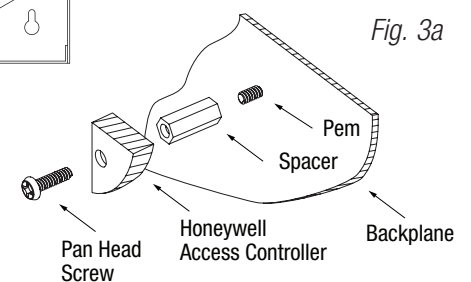
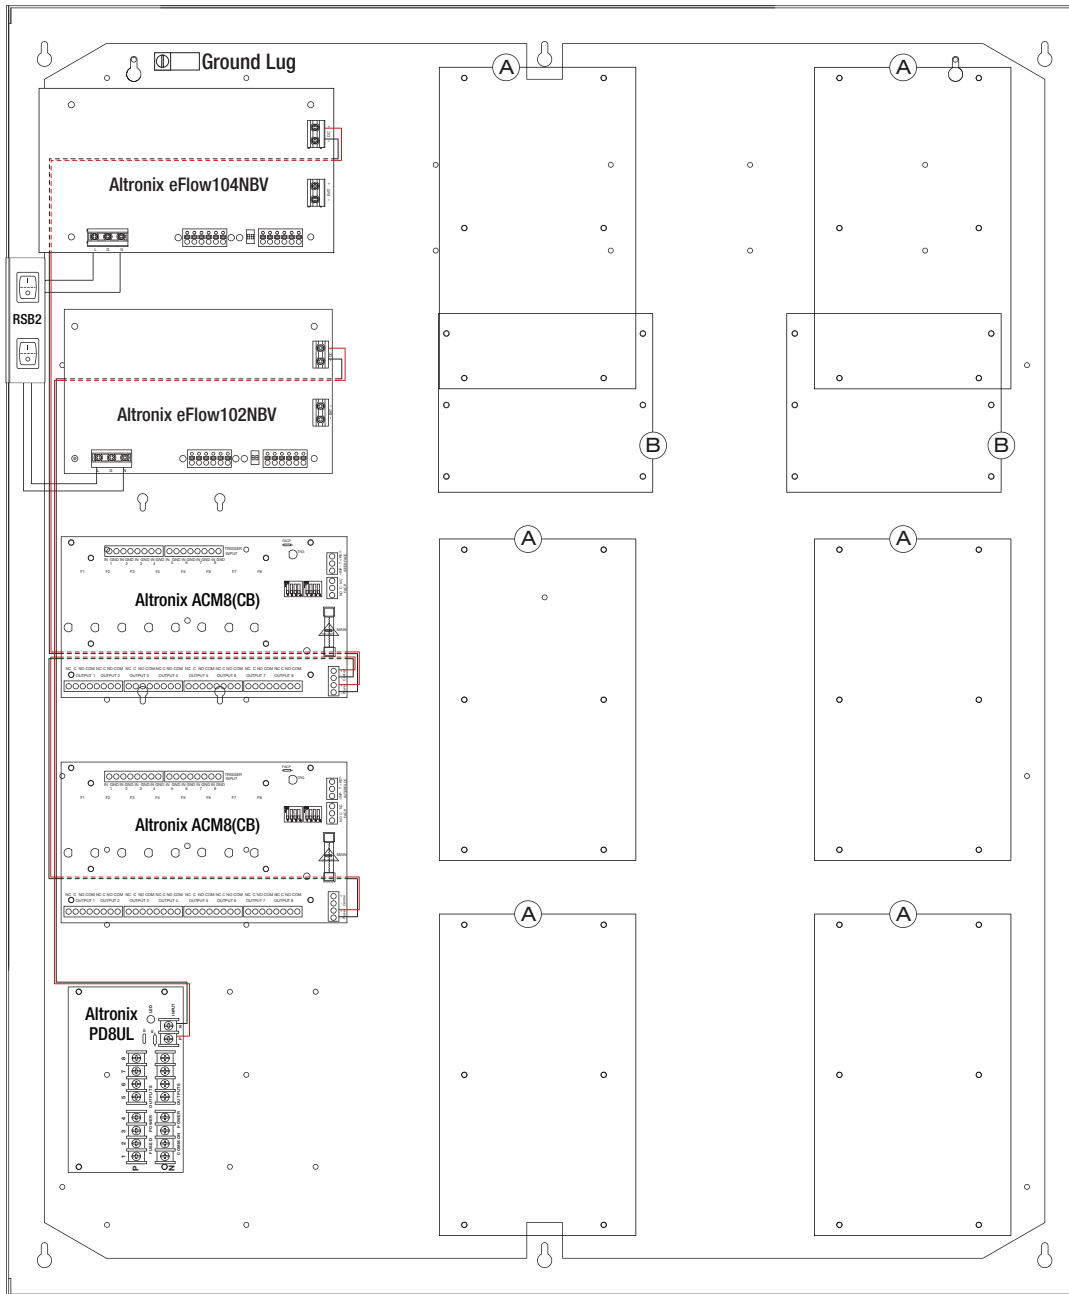


Fig. 3a

T3HWK75F16(D)V:

THWD2 (Door Backplane) Configuration of Honeywell ProWatch/WinPak Boards:



Honeywell ProWatch/WinPak Access Controllers:

1. Fasten spacers (provided) into pem configuration (A) or (B) of backplane (Fig. 4, pg. 5).
2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 4a, pg. 5).
3. Mount backplane to enclosure with hardware.

Honeywell ProWatch/WinPak Access Controller Position Chart for the Following Models:


Honeywell Board	Pem Mounting
3200 Series or WIN-PAK Series	(A)
PRO22MX8	(B)

Fig. 4

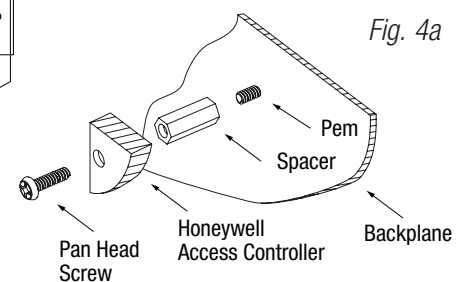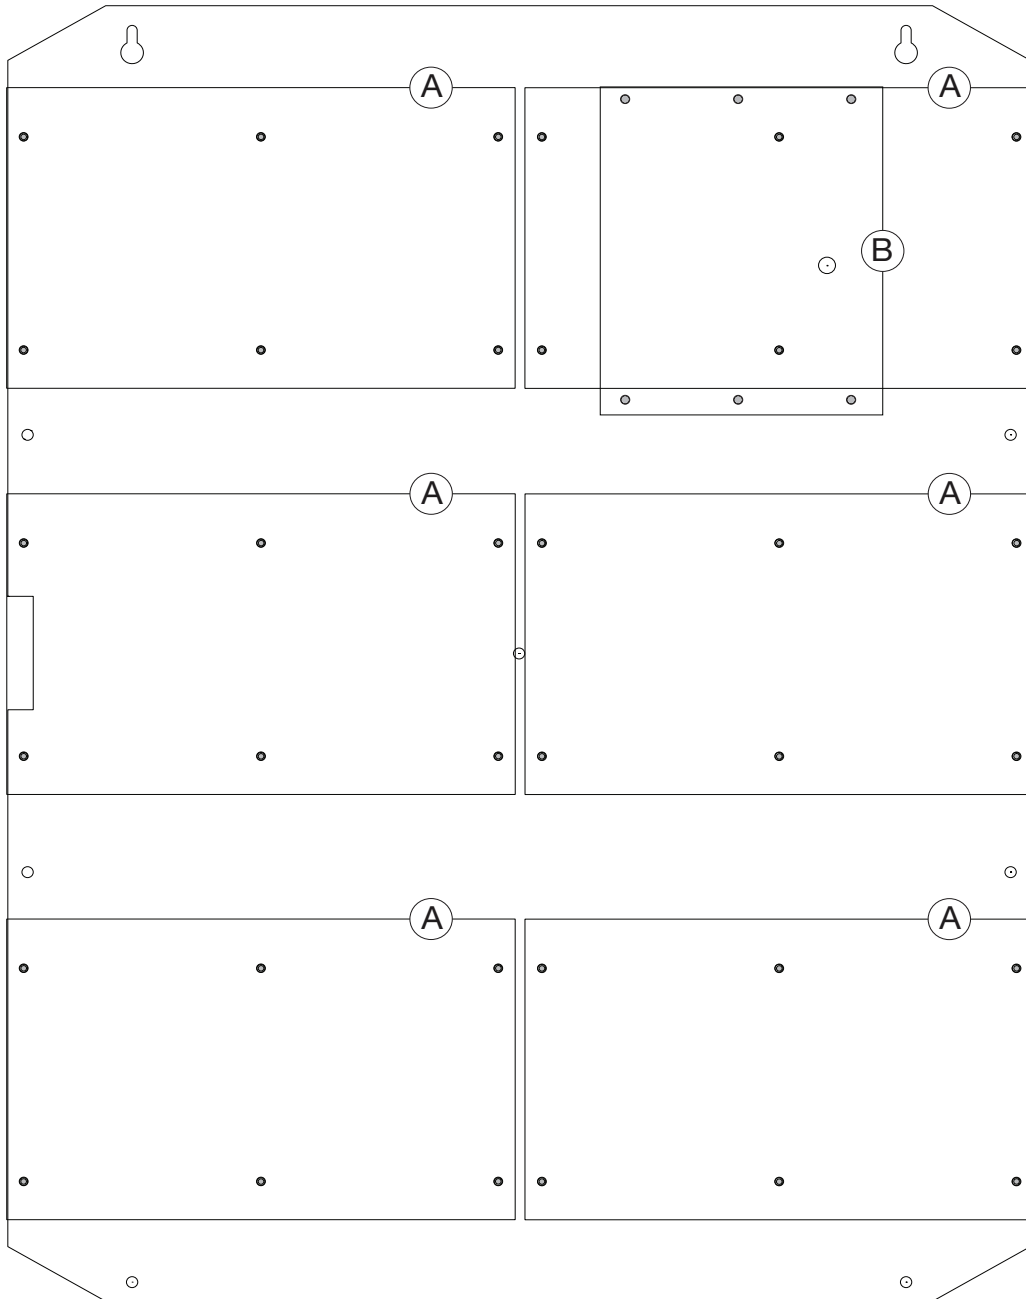



eFlow Power Supply/Chargers can be Controlled and Monitored while Reporting Power/Diagnostics from Anywhere over the Network...

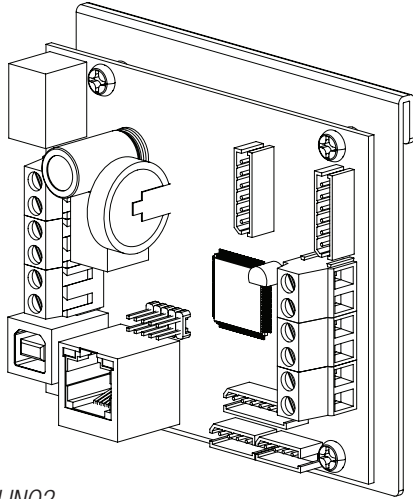

LINQ2

LINQ™


LINQ2 - Network Communication Module

LINQ2 provides remote IP access to real-time data from eFlow power supply/chargers to help keep systems up and running at optimal levels. It facilitates fast and easy installation and set-up, minimizes system downtime, and eliminates unnecessary service calls, which helps reduce Total Cost of Ownership (TCO) - as well as creating a new source of Recurring Monthly Revenue (RMR).

Features:


- UL Listed in the U.S. and Canada.
- Local or remote control of up to (2) two Altronix eFlow power output(s) via LAN and/or WAN.
- Monitor real time diagnostics: DC output voltage, output current, AC & battery status/service, input trigger state change, output state change and unit temperature.
- Access control and user management: Restrict read/write, Restrict users to specific resources
- Two (2) integral network controlled Form "C" Relays.
- Three (3) programmable input triggers: Control relays and power supplies via external hardware sources.
- Email and Windows Dashboard notifications
- Event log tracks history.
- Secure Socket Layer (SSL).
- Programmable via USB or web browser - includes operating software and 6 ft. USB cable.

LINQ2 Mounts Inside any Trove Enclosure

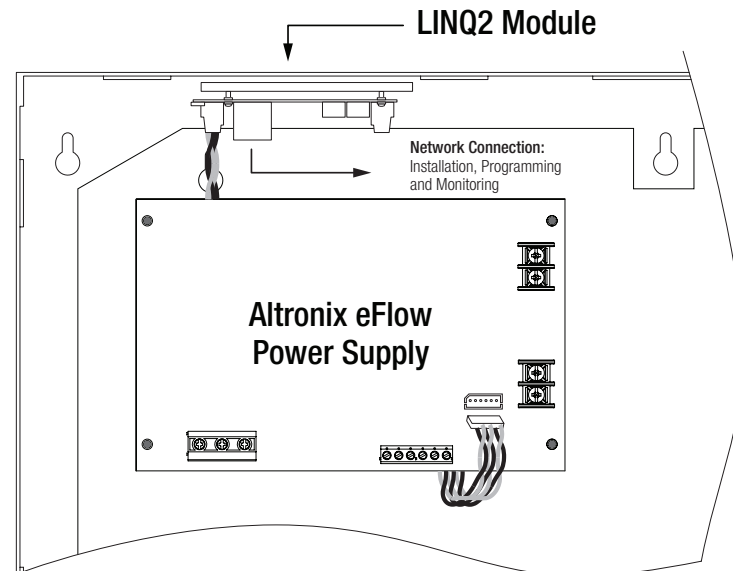

T2HWK7F8(D)V (Trove2) Enclosure Dimensions (H x W x D approximate):

27.25" x 21.75" x 6.5" (692.2mm x 552.5mm x 165.1mm)

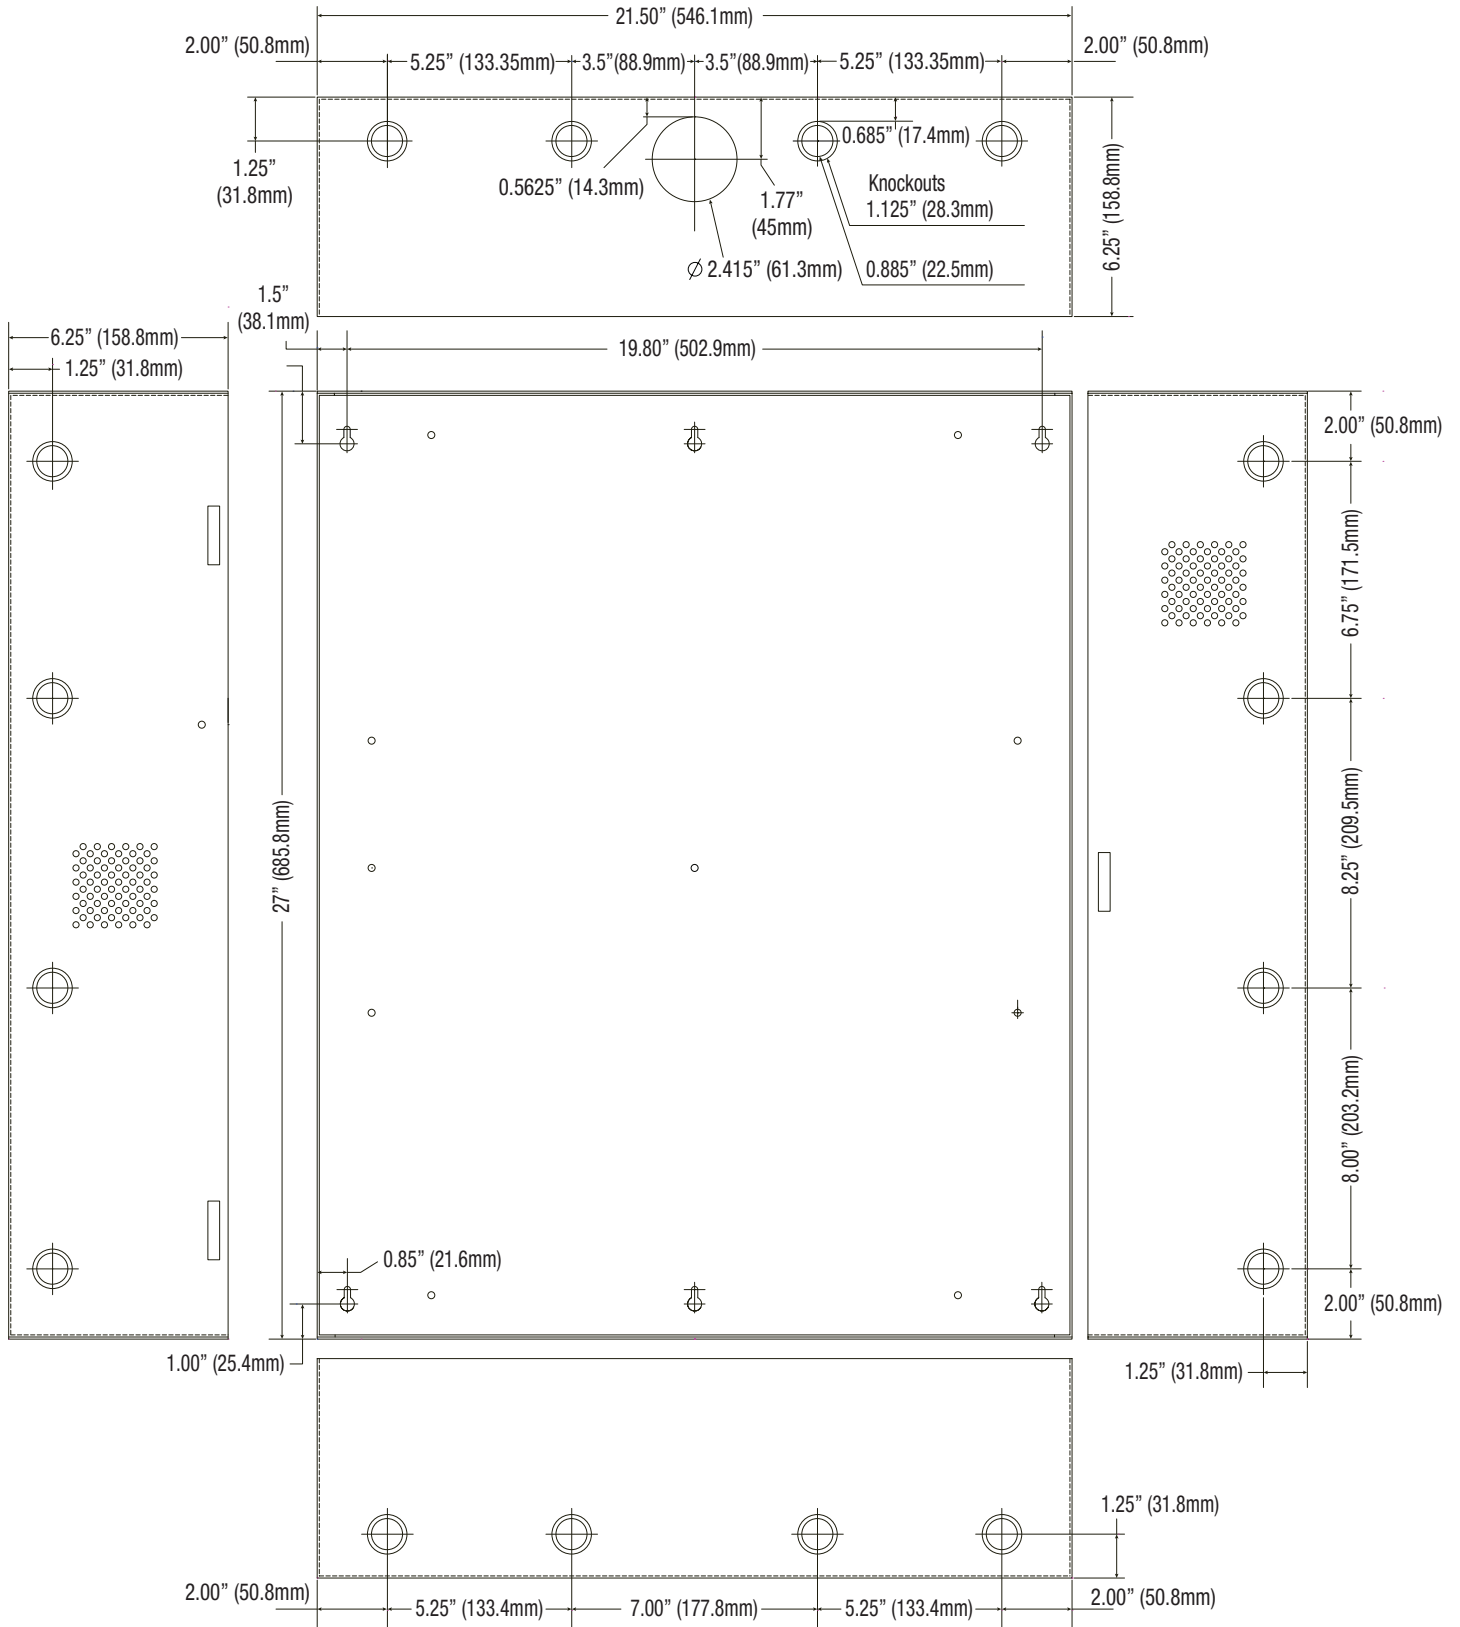

36.12" x 30.125" x 7.06" (917.5mm x 768.1mm x 179.3mm)

